



*This manual is to be given
to the end user*

U N I D R I V E 

**Winding-unwinding solution
with analogue references**

Installation and commissioning manual

UNIDRIVE SP

Universal speed drive

The LEROY-SOMER offer

Operation 4 quadrants

- Brake resistor

Operator interfaces

- LED display
- LCD display
- LS Soft parameter-setting software
- Man-Machine interfaces

Application Solutions

- Positioning
- Lifting
- Synchronisation
- Winding-Unwinding
- Length cut
- Programmable PLC module

Gearboxes

standard or reduced play

- Axial output
- Helical gears



- Orthogonal output
- Helical gears and helical torque,
- Worm



RFI filters - Line choke

UNIDRIVE SP



Control

- Additional input/output module
- Decentralised input/output
- RTU Modbus serial link in standard version
- Field bus module :
 - DP Profibus,
 - S Interbus,
 - Devicenet,
 - CANopen,
 - CTNet

Other integrable modules

- Encoder second input
- Resolver

Output choke - Ferrite Power cables and encoder

Motors

- Asynchronous
- LS
- FLS



- Asynchronous adapted to the variable speed
- LSMV
- FLSMV



- Servo
- SMV UM



Options

- Forced ventilation
- Parking brake or dynamic brake

Motor transducer

- Encoders :
incremental, "EnDat" or SSI absolute, sincos ...
- Resolvers

Other motor options

- Forced ventilation
- Parking brake or dynamic brake

Options

- Forced ventilation
- Parking brake

UNIDRIVE SP

Safety instructions

NOTE

LEROY-SOMER reserves the right to modify the characteristics of its products at any time in order to incorporate the latest technological developments. The information contained in this document may be therefore changed without prior notice.



For the user's safety, this speed drive must be connected to a proper earthing. (terminal $\frac{1}{\text{E}}$).

If the accidental starting of the installation is likely to cause a risk to the personnel or to the machines being driven, it is necessary to supply with power the equipment by means of an isolating switch and of a circuit-breaking device (power contactor) controlled by an external safety chain (emergency stop, detection of anomalies on installation).

The speed drive is fitted with safety devices which in case of fault may control its stopping and consequently the motor stopping. This motor itself can be also subject to stopping as result of the mechanical blocking. Finally, the voltage fluctuations, in particular power cuts, may also cause the motor to stop.

The elimination of the shutdown causes can lead to a restart which may be dangerous for certain machines or installations, especially for those which must comply with appendix 1 of decree 92.767 of 29th July, 1992 on safety. In such cases, it is important for the user to take the appropriate precautions against the motor restarting in case of an unscheduled motor stop.

The variable speed drive is designed to be able to supply with power a motor and the driven machine above its rated speed. If the motor or the machine are not mechanically designed to withstand such speeds, the user may be exposed to a serious risk due to their mechanical deterioration. It is important for the user to check, before setting a high speed, if the installation can withstand it.

The speed drive making the object of this manual is a component designed to be integrated into an installation or an electrical machine and it can under no circumstances be considered to be a safety device. It is therefore the responsibility of the machine manufacturer, the installation designer or the user to take the necessary precautions in order to ensure that the installation complies with the standards in force and to provide any devices required to ensure the safety of the equipment and personnel.

Use of the drive for lifting: the implementation of this application imposes the observance of the particular instructions given in a specific manual, on demand. The user is the one who must require it from its usual interlocutor LEROY-SOMER.

LEROY-SOMER declines all responsibility in case the above-mentioned recommendations are not observed.


.....

Manual corresponding to the software versions higher or equal to 1.07.01

UNIDRIVE SP

Safety instructions

SAFETY AND OPERATING INSTRUCTIONS RELATED TO SPEED DRIVES (According to the low voltage directive 73/23/CEE amended by 93/68/CEE)

 • Throughout this manual this symbol warns of the consequences arising from the misuse of the variable speed drive, since the electrical risks may lead to material damages or to bodily injuries, as well as to fire hazards.

1 - General

According to their degree of protection, the variable speed drives may contain live parts which are powered up, which may be moving or rotating, as well as hot surfaces, during their operation.

The improper removal of the protection devices, an inadequate use, a faulty installation or an inappropriate handling could represent a serious risk to the personnel and equipment.

For further information, read this documentation.

All the works related to the transportation, installation, commissioning and maintenance must be performed by a qualified and authorised personnel (see IEC 364 or CENELEC HD 384, or DIN VDE 0100, as well as the national provisions regarding installation and accident prevention).

Within the scope of these basic safety instructions, qualified personnel means persons having competence as regards the installation, the assembling, the commissioning and the product exploitation, and having the relevant qualifications.

2 - Use

The variable speed drives are components designed for integration into installations or electrical machines.

In case of incorporation into a machine, their commissioning is forbidden if the compliance of the machine with the provisions of the Directive 89/392/CEE (machine directive) has not been checked. It is also necessary to observe the EN 60204 standard stipulating mainly that the electrical actuators (which include the variable speed drives) cannot be considered as circuit-breaking devices and certainly not as isolating switches.

Their commissioning is not allowed if the provisions of the Electromagnetic Compatibility Directive (89/336/CEE, amended by 92/31/CEE) are not observed.

The variable speed drives meet the requirements of the Low Voltage Directive 73/23/CEE, amended by 93/68/CEE. The harmonised standards of the DIN VDE 0160 series along with the VDE 0660 standard, part 500 and EN 60146/VDE 0558 are applicable to them.

The technical characteristics and the instructions concerning the connection conditions specified on the nameplate and in the documentation provided, must be observed.

3 - Transportation, storing

All the instructions concerning the correct transportation, storing and handling must be observed.

The climatic conditions specified in the technical manual must be observed.

4 - Installation

The equipment installation and cooling must comply with the provisions of the documentation supplied with the product. The variable speed drives must be protected against any excessive stress. In particular, the parts must not be damaged and/or the clearances between components must not be changed during the transportation and the handling. Do not touch the electronic components and the contact parts.

The variable speed drives contain parts which are sensitive to electrostatic stress and may be easily damaged in case of inadequate handling. Electric components must not be exposed to mechanical damage or destruction (otherwise, your health is at risk!).

5 - Electric connection

When works are performed on variable speed drives which are powered up, the national provisions related to the prevention of accidents must be observed.

The electric installation must be executed according to the applicable provisions (for example, conductor section, protection by fused short-circuit, connection of the protection conductor). More detailed information is given in the manual. The documentation accompanying the variable speed drives contains the instructions for an installation which meets the electromagnetic compatibility requirements, such as screening, earthing, presence of filters and adequate insertion of cables and conductors. These instructions must be observed in all cases, even if the variable speed drive carries the CE mark. The observation of the limit values imposed by the legislation on CEM is the responsibility of the manufacturer of the installation or the machine.

6 - Operation

The installations with built-in speed drives must be fitted with additional protection and monitoring devices as laid down in the safety provisions in force, such as the law on technical equipment, the provisions on accident prevention, etc. The modification of the variable speed drives by means of the control software are permitted.

The active parts of the device and the live power connections must not be touched immediately after the the variable speed drive in powered down, as the capacitors may still be loaded. The warnings attached to the variable speed drives must be observed.

During operation, all doors and protective devices must be kept closed.

7 - Servicing and maintenance

Refer to the manufacturer's documentation

This manual is to be given to the end user.

UNIDRIVE SP

Contents

GENERAL INFORMATION	A
GENERAL CHARACTERISTICS	B
MECHANICAL INSTALLATION	C
POWER CONNECTION	D
CONTROL CONNECTIONS	E
ENCODER CONNECTIONS	F
SETTING	G
COMMISSIONING	H
COMMUNICATION	I
SMARTCARD	J
DIAGNOSES	K
OPTIONS	L
MAINTENANCE	M

UNIDRIVE SP

Notes

UNIDRIVE SP

General information



Contents

A1 - General principle.....	3
A2 - Operating conditions	3
A3 - Control principle	4
A4 - Operating conditions	4
A5 - Application characteristics	5



UNIDRIVE SP

General information

Notes

UNIDRIVE SP General information

A1 - General principle

The SM-EDL ANA module (Winding/Unwinding programmable application module with analogue reference) integrated into an Unidrive SP variable speed drive with or without additional inputs/outputs SM-I/O module, allows the motorization of a winder or unwinder with axial drive keeping a constant tension on the product.

Manual for use with EDL ANA software versions equal to or greater than 22000405

A2 - Operating conditions

The UNIDRIVE SP permanent output current and the maximum transient current depend on the operating conditions.

Maximum overload : In order to obtain the maximum available overload, the permanent output current (I_{sp}) is limited. In this situation, the maximum transient current of the drive (I_{max}) is 150 % I_{sp} in open loop or 175 % I_{sp} in closed loop or servo

I_{sp} is available for all speed range.

Maximum transient overload

$$= \frac{I_{sp}}{I_{N \text{ motor}}} \times 1.5 \times 100.$$

Maximum transient overload and

$$= \frac{I_{sp}}{I_{N \text{ motor}}} \times 1.75 \times 100.$$

Example :

- **LS MV 132 SM Motor - 4 poles - 5.5 kW - 400V Y**

$I_{N \text{ motor}} = 10.4A.$

- Constant torque application - open loop vector control - maximum overload.

- Drive selection --> **UNIDRIVE SP 8T**, I_{sp} with maximum overload : 13A.

$$\text{Maximum transient overload} = \left(\frac{13}{10.4}\right) \times 1.5 \times 100 = 187.5 \%$$

Reduced overload : If the operating conditions are not severe, the output current may be increased and it may allow the driving of a high power motor . On the other hand, the maximum transient current is limited to 110 % I_{sp} .

Below 15 % of the rated speed, the permanent output current is reduced as indicated in the curve below

$$\text{Maximum transient overload} = \frac{I_{sp}}{I_{N \text{ motor}}} \times 1.1 \times 100.$$

Example :



- **LS MV 132 SM motor - 4 poles - 5.5 kW - 400V Y**

$I_{N \text{ motor}} = 10.4 A.$

- Constant torque application - open loop vector control - reduced overload and minimum speed > 15 % rated speed.


- Drive selection --> **UNIDRIVE SP 5.5T**, I_{sp} with reduced overload : 11A

$$\text{Maximum transient overload} = \left(\frac{11}{10.4}\right) \times 1.1 \times 100 = 116 \%$$

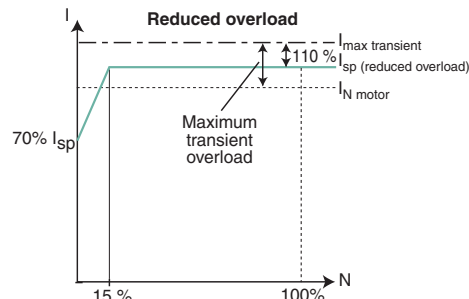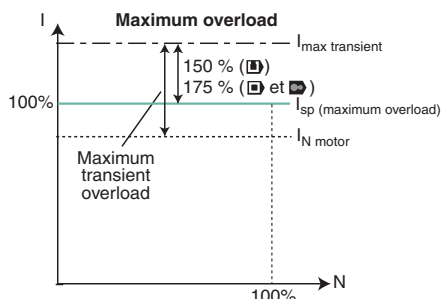

UNIDRIVE SP General information

A3 - Control principle

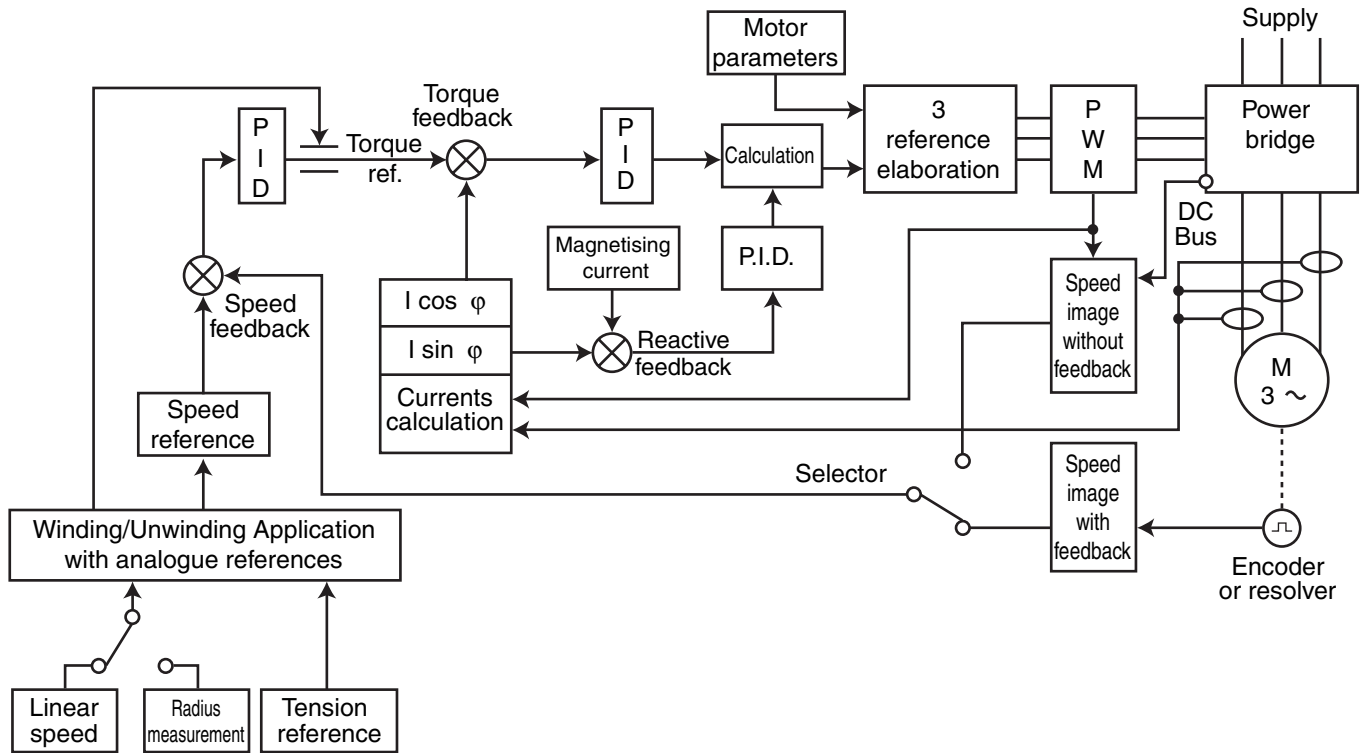

A4 - Operating conditions

The system functions exclusively in closed loop connected to an asynchronous or synchronous motor with any type of encoders.

With an axial drive, in order to keep a constant tension on a product independant of the diameter of the coil, it is necessary that the torque produced by the motor should increase proportionally with the radius of the coil.

The tension reference given by a potentiometer is applied through an analogue input.

With the help of the linear speed through another analogue input and the angular speed supplied by the encoder, a radius calculation is made.

The tension reference multiplied by the radius determines the torque that the motor has to supply.

An external correction to the tension reference allows eventually to obtain tight coils of smallest radius or vice versa.

• Operating modes:

- speed regulation : product feed or threading and quick change (double winder),
- tension regulation : winding or unwinding.

• Other possibilities

- tension regulation with the help of a force sensor whose signal is applied to an analogue input,
- external radius measurement (by sensor),
- automatic inertia compensation for large coils,
- for the unwinding, detection of " end of the coil " adjustable according to a radius (the information " slowing down end of coil " and " stopping end of coil " may be signalled through voltage free contacts in order to control the shut down of the line),
- detection of the material brake by constant surveillance of radius change causing an automatic shut down of winder or unwinder),
- winder or unwinder overspeed protection,
- selection of the product loading over or under the coil,
- synchro start for double winder.

UNIDRIVE SP

General information

A

A5 - Application characteristics

- radius measurement: by internal calculation or external measurement,
- shut down tension reference : from 0 to 100 % of the selected tension reference,
- motor power : 0.75 to 90 kW,
- gearing ratio between the motor and coil drive : 1 to 327.67,
- radius regulation range up to 3.276m,
- radius ratio from 1 to 15,
- maximum linear speed : 0 to 3276 m.min⁻¹,
- maximum tension on the product : 1 to 32767 N,
- maximum moment of inertia (reflected on the drive shaft) : 0 to 3276 m².kg,
- volume mass : 0 to 3276 kg/m³,
- product mass: 0 to 3276 kg,
- coil width : 0 to 3.276 m.

Necessary validation of the following functions:

- inertia compensation,
- mechanical losses compensation (static and dynamic),
- PID feedback of tension regulation with the help of a strain gauge.



UNIDRIVE SP

General information

Notes

UNIDRIVE SP

General characteristics

Contents

B1 - Environment characteristics	3
B2 - Product name	3
B3 - Electric characteristics	4
B3.1 - General detail	4
B3.2 - Electric characteristics at 40°C and at a 3 kHz cutout frequency	4
B3.3 - Degrading according to temperature and cutout frequency	5
B4 - Electromagnetic compatibility (CEM)	6
B4.1 - Compatibility table	6
B4.2 - Internal RFI filter	7
B5 - UL compliance	7

B

UNIDRIVE SP

General characteristics

Notes

B

UNIDRIVE SP

General characteristics

B1 - Environment characteristics

! • Drives shall be installed on a control panel in order to protect them from conductive dust and condensation. The access of non authorised persons is denied.

Characteristics	Level
Protection	IP20 with installed cable run and glands.
Storage temperature	-40°C to +50°C, maximum 12 months (after this period, follow the maintenance instructions described in section M).
Operation temperature	0°C to +50°C. The drive characteristics are given at +40°C. Beyond 40°C, the permanent output current may be degraded. Refer to section B3.3 characteristics.
Relative humidity	≤ 95 % without condensation.
Altitude	≤ 1000 m without degrading. The maximum authorised altitude is 3000 m, but beyond 1000m, the permanent output current must be degraded by 1% for each additional 100m. (ex.: for a 3000m altitude, degrade by 20%).
Vibrations	Compliant with IEC 68-2-64 and IEC 60068-2-6.
Shocks	Compliant with IEC 60068-2-29.

B2 - Product Name

Unidrive SP = Range.

2.5 = kVA rating at maximum overload.

TL = 200 to 240V ±10% three-phase supply ,

or

T = 380 to 480V ±10% three-phase supply,


or

TM = 500 to 575V ±10% three-phase supply,


or

TH = 500 to 690V ±10% three-phase supply.

Front label:

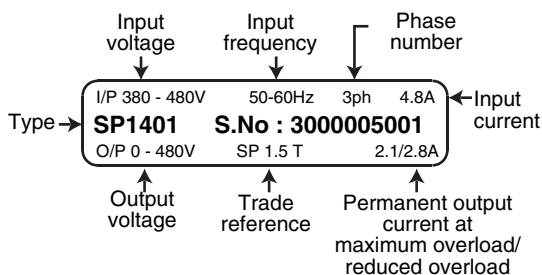

- Display label (on the upper cover side):

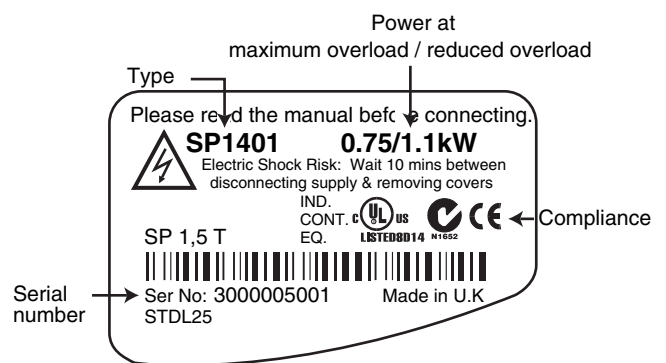

Logo	Compliance	
CE	CE	Europe
C Tick	C Tick	Australia
UL / cUL	UL / cUL	USA & Canada

UNIDRIVE SP

General characteristics

B3 - Electric characteristics

B3.1 - General detail

Characteristics	Level
Voltage variation between phases	< 3 %
Maximum number of power ups per hour	≤ 20
Input frequency	48 to 65 Hz
Maximum short-circuit current	5 kA except 50T to 60T, 50TH and 60TH: 10 kA and size 6 : 15 kA
Inrush current limitation during power up	Rating TL : T1 = 18A, T2 = 12A, T3= 8A, T4 = 73A, Rating T : T1 = 35A, T2 = 24A, T3= 14A, T4 (40T) = 37A, T4 (50T and 60T) = 73A, T5 = 110A Rating TM : T3 = 18A Ratings TH : T4 = 35A, T5 = 70A
Interval between power up and " rdy " (drive ready)	4s
Frequency range / output speed	🔲 : 0 to 3000 Hz 🔲 and 🔳 : 0 to 40000 min ⁻¹

B3.2 - Electric characteristics at 40°C and 3 kHz cutout frequency

Caution:

- With the factory settings, the drive operates with a 3 kHz cutout frequency at a 40°C ambient temperature. In case of higher cutout frequency or temperature, it is necessary to degrade the output current (see section B3.3).
- In servo mode, in order to obtain optimum functions, chose a 12 kHz cutout frequency.

I_{sp} : Permanent output current.
 P_{mot} : Motor power.

200V to 240V ± 10% three-phase mains supply

Size	UNIDRIVE SP		Maximum overload		Reduced overload	
	LS	CT	P_{mot} at 220V (kW)	I_{sp} (A)	P_{mot} at 220V (kW)	I_{sp} (A)
1	1.5TL	1201	0.75	4.3	1.1	5.2
	2TL	1202	1.1	5.8	1.5	6.8
	2.5TL	1203	1.5	7.5	2.2	9.6
	3.5TL	1204	2.2	10.6	3	11
2	4.5TL	2201	3	12.6	4	15.5
	5.5TL	2202	4	17	5.5	22
	8TL	2203	5.5	25	7.5	28
3	11TL	3201	7.5	31	11	42
	16TL	3202	11	42	15	54
4	22TL	4201	15	56	18.5	68
	27TL	4202	18.5	68	22	80
	33TL	4203	22	80	30	104

500V to 575V ± 10% three-phase mains supply

Size	UNIDRIVE SP		Maximum overload		Reduced overload	
	LS	CT	P_{mot} at 575V (kW)	I_{sp} (A)	P_{mot} at 575V (kW)	I_{sp} (A)
3	3.5TM	3501	2.2	4.1	3	5.4
	4.5TM	3502	3	5.4	4	6.1
	5.5TM	3503	4	6.1	5.5	8.4
	8TM	3504	5.5	9.5	7.5	11
	11TM	3505	7.5	12	11	16
	16TM	3506	11	18	15	22
	22TM	3507	15	22	18.5	27
	4	33TH	4603	18.5	27	22
40TH		4604	22	36	30	43
50TH		4605	30	43	37	52
60TH		4606	37	52	45	62
5	75TH	5601	45	62	55	84
	100TH	5602	55	84	75	99
6	120TH	6601	75	100	90	125
	150TH	6602	90	125	110	144

380V to 480V ± 10% three-phase mains supply

Size	UNIDRIVE SP		Maximum overload		Reduced overload	
	LS	CT	P_{mot} at 400V (kW)	I_{sp} (A)	P_{mot} at 400V (kW)	I_{sp} (A)
1	1.5T	1401	0.75	2.1	1.1	2.8
	2T	1402	1.1	3	1.5	3.8
	2.5T	1403	1.5	4.2	2.2	5
	3.5T	1404	2.2	5.8	3	6.9
	4.5T	1405	3	7.6	4	8.8
2	5.5T	1406	4	9.5	5.5	11
	8T	2401	5.5	13	7.5	15.3
	11T	2402	7.5	16.5	11	21
3	16T	2403	11	25	15	29
	22T	3401	15	32	18.5	35
	27T	3402	18.5	40	22	43
4	33T	3403	22	46	30	56
	40T	4401	30	60	37	68
	50T	4402	37	74	45	83
5	60T	4403	45	96	55	104
	75T	5401	55	124	75	138
6	100T	5402	75	156	90	168
	120T	6401	90	180	110	202
	150T	6402	110	210	132	236

500V to 690V ± 10% three-phase mains supply

Size	UNIDRIVE SP		Maximum overload		Reduced overload	
	LS	CT	P_{mot} at 690V (kW)	I_{sp} (A)	P_{mot} at 690V (kW)	I_{sp} (A)
4	22TH	4601	15	19	18.5	22
	27TH	4602	18.5	22	22	27
	33TH	4603	22	27	30	36
	40TH	4604	30	36	37	43
	50TH	4605	37	43	45	52
5	60TH	4606	45	52	55	62
	75TH	5601	55	62	75	84
6	100TH	5602	75	84	90	99
	120TH	6601	90	100	110	125
	150TH	6602	110	125	132	144

UNIDRIVE SP

General characteristics

B3.3 - Degrading according to the temperature and the cutout frequency

UNIDRIVE SP			Temp.	Three-phase permanent output current below 220V at a cutout frequency ≥ 3 kHz																				
Size	LS	CT		Maximum overload						Reduced overload														
				3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz									
1	1.5TL	1201	40°C	4.3						5.2														
			50°C	4.3						5.2														
	2TL	1202	40°C	5.8						6.8														
			50°C	5.8						6.8														
	2.5TL	1203	40°C	7.5						9.6														
			50°C	7.5						9.6				9										
3.5TL	1204	40°C	10.6						11															
		50°C	10.6			9.5		8.3		11		10.9		9.5		8.3								
2	4.5TL	2201	40°C	12.6						15.5														
			50°C	12.6				11.4		15.5				13.5		11.5								
	5.5TL	2202	40°C	17						22														
			50°C	17		15.7		13.4		11.4		19.7		18.9		17.3		15.9		13.5		11.5		
	8TL	2203	40°C	25		24.2		22.5		19.6		17.2		28		27.9		24.8		21.8				
			50°C	19.2		18.4		17		15.7		13.3		11.4		19.5		18.6		17.2		15.8		13.4
3	11TL	3201	40°C	31				x		42				x										
			50°C	31				x		42				38.2		x								
	16TL	3202	40°C	42				41.3		x		54				48.5		x						
			50°C	42				37.2		x		54		52.8		47		38.2		x				
4	22TL	4201	40°C	56				x		x		68				x		x						
			50°C	56				x		x		68				x		x						
	27TL	4202	40°C	68				x		x		80				x		x						
			50°C	68				x		x		80				x		x						
	33TL	4203	40°C	80				x		x		104				x		x						
			50°C	80				x		x		87				x		x						

UNIDRIVE SP			Temp.	Three-phase permanent output current below 400V at a cutout frequency ≥ 3 kHz																							
Size	LS	CT		Maximum overload						Reduced overload																	
				3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz												
1	1.5T	1401	40°C	2.1						2.8																	
			50°C	2.1						2.8																	
	2T	1402	40°C	3						3.8																	
			50°C	3						3.8																	
	2.5T	1403	40°C	4.2						5																	
			50°C	4.2				3.8		5				3.9													
	3.5T	1404	40°C	5.8				5.4		4.3		6.9				5.9											
			50°C	5.8				4.8		3.7		6.9				5.1		3.9									
	4.5T	1405	40°C	7.6						8.8																	
			50°C	7.6		7.2		6		4.2		3.1		8.8		7.3		6		4.2		3.1					
5.5T	1406	40°C	9.5		9		7.2		6		4.2		3.1		10.1		9		7.3		6		4.2		3.1		
		50°C	9.5		9		7.2		6		4.2		3.1		10.1		9		7.3		6		4.2		3.1		
2	8T	2401	40°C	13				12.6		9.6		7.6		15.3				12.7		10.1							
			50°C	13				11.7		9.9		7.3		5.5		15.3		14.2		11.8		10		7.3		5.5	
	11T	2402	40°C	16.5				14.9		12.6		9.6		7.6		21		19.5		16.7		12.7		10			
			50°C	15.5		14.1		11.7		9.9		7.3		5.5		15.7		14.2		11.8		10		7.3		5.5	
	16T	2403	40°C	25		23.7		19.9		16.9		12.8		10.1		29		27.2		23.2		20		15		11.8	
			50°C	16.7		15		12.2		10.1		7.1		5.1		16.8		15		12.2		10.1		7.1		x	
3	22T	3401	40°C	32				28.9		22		17.5		35				34.5		26.3		21					
			50°C	32				30.7		26.1		19.7		15.4		35				33.5		28.5		21.5		16.9	
	27T	3402	40°C	40		38.3		32.5		24.5		19.2		43				37.9		28.6		22.5					
			50°C	40		34.1		28.4		20.7		16		43		41.5		34.2		28.7		21		16			
	33T	3403	40°C	46		45.9		38.5		32.5		24.4		x		56		53.4		44.6		37.9		28.6		x	
			50°C	46		41.5		33.6		28.3		20.8		x		46		41.5		34.2		28.7		21		x	
4	40T	4401	40°C	60		52		42		x		x		68				62		x		x					
			50°C	60		47		38		x		x		68				67		55		x		x			
	50T	4402	40°C	74		65		51		42		x		x		83				74		61		x		x	
			50°C	68		59		46		38		x		x		83		82		67		52		x		x	
	60T	4403	40°C	96		84		67		55		x		x		104				95		79		x		x	
			50°C	86		75		60		50		x		x		87		86		71		60		x		x	
5	75T	5401	40°C	124		107		82		67		x		x		138				118		97		x		x	
			50°C	113		96		75		60		x		x		138				106		87		x		x	
	100T	5402	40°C	156		137		109		91		x		x		168		158		129		107		x		x	
			50°C	140		123		99		82		x		x		141		140		112		92		x		x	
6	120T	6401	40°C	180		174		134		x		x		x		202				164		x		x		x	
			50°C	180		158		121		x		x		x		191		190		148		x		x		x	
	150T	6402	40°C	210		175		130		x		x		x		236		210		158		x		x		x	
			50°C	190		158		116		x		x		x		198		181		138		x		x		x	

UNIDRIVE SP

General characteristics

UNIDRIVE SP			Temp.	Three-phase permanent output current below 575V at a cutout frequency ≥ 3 kHz															
Size	LS	CT		Maximum overload						Reduced overload									
				3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz				
3	3.5TM	3501	40°C	4.1						5.4			x			x			
			50°C	4.1						5.4			x			x			
	4.5TM	3502	40°C	5.4						6.1			x			x			
			50°C	5.4						6.1			x			x			
	5.5TM	3503	40°C	6.1						8.4			x			x			
			50°C	6.1						8.4			x			x			
	8TM	3504	40°C	9.5						11			x			x			
			50°C	9.5						11			x			x			
	11TM	3505	40°C	12						16			x			x			
			50°C	12						16			14.7			x			
	16TM	3506	40°C	18			15.5			22		21.6		18.2		x			
			50°C	18			16.8			13.9		22		17.8		14.7			
	22TM	3507	40°C	22			18.4			15.5		27		26		21.6		18.1	
			50°C	22			20.4			16.7		13.9		24.6		22		17.8	

UNIDRIVE SP			Temp.	Three-phase permanent output current below 575V/690V at a cutout frequency ≥ 3 kHz														
Size	LS	CT		Maximum overload						Reduced overload								
				3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz			
4	22TH	4601	40°C	19						22			x			x		
			50°C	19						22			x			x		
	27TH	4602	40°C	22						27			x			x		
			50°C	22						27			25			x		
	33TH	4603	40°C	27						36			34			x		
			50°C	27						36			31			25		
	40TH	4604	40°C	36			34			43		41		34		x		
			50°C	36			31			25		43		40		31		
	50TH	4605	40°C	43			41			34		52		41		34		
			50°C	46			40			31			25		x		x	
	60TH	4606	40°C	52			45			36		62		61		48		
			50°C	52			45			35			28		x		x	
	5	75TH	5601	40°C	62						84			x			x	
				50°C	62						84			x			x	
100TH	5602	40°C	84						99			x			x			
		50°C	84						99			x			x			
6	120TH	6601	40°C	100						125			x			x		
			50°C	100						125			x			x		
150TH	6602	40°C	125						144			x			x			
		50°C	125						144			x			x			

UNIDRIVE SP

General characteristics

B4 - Electromagnetic compatibility (CEM)

B4.1 - Compatibility label

CAUTION :

The drive is compliant only when the mechanical and electric installation instructions described in this manual are observed.

Immunity									
Standard	Description	Application	Compliance						
IEC 61000-4-2 EN 61000-4-2	Electrostatic discharges	Product casing	Level 3 (industrial)						
IEC 61000-4-3 EN 61000-4-3	Radiated radio-frequencies immunity standards	Product casing	Level 3 (industrial)						
IEC 61000-4-4 EN 61000-4-4	Fast transient burst	Control cable	Level 4 (heavy industry)						
		Power cables	Niveau 3 (industry)						
IEC 61000-4-5 EN 61000-4-5	Surges	Supply cables between phase and earth	Level 4						
		Supply cables between phases	Level 3						
		Earth signal port	Level 2						
IEC 61000-4-6 EN 61000-4-6	Generic standards for conducted radio-frequencies immunity	Control and power cables	Level 3 (industry)						
EN 50082-1 IEC 61000-6-1 EN 61000-6-1	Generic standards for residential, commercial and light industry environments	-	Compliant						
EN 50082-2 IEC 61000-6-2 EN 61000-6-2	General immunity standards for the industrial environment	-	Compliant						
EN 61800-3 IEC 61800-3 EN 61000-3	Speed drive standards	Compliant with the first and second environment							

Emission										
Standard	Description	Scope of application	Drive / motor cable length	Compliance conditions						
				RFI Filter						
				Size 1	Size 2	Size 3	Size 4	Size 5	Size 6	
EN 61800-3	Speed drive standard	2 nd envir. with non restricted distrib. (E2U)	≤ 4 m	int. filter, fd=3 kHz	int. filter and ferrite*, fd≤6 kHz	int. filter and ferrite*, fd=3 kHz				
			≤ 10 m	int. filter and ferrite*, fd≤6 kHz	int. filter and ferrite*, fd=3 kHz					
			≤ 100 m	ext. filter	ext. filter	ext. filter				
		2 nd envir. with restricted distrib. (E2R)	≤ 4 m	int. filter, fd≤16kHz	int. filter, fd≤12kHz					
			≤ 10 m	int. filter and ferrite*, fd≤16 kHz		int. filter, fd≤16 kHz				
			≤ 100 m							
		1 st envir. with non restricted distrib. (R)	≤ 20 m	ext. filter, fd≤6kHz	ext. filter, fd=3 kHz					
			≤ 20 m	ext. filter, fd≤16kHz	ext. filter, fd≤12 kHz					
		1 st envir. with restricted distrib. (I)	≤ 75 m	ext. filter, fd≤8kHz	ext. filter, fd=8 kHz					
			≤ 100 m	ext. filter, fd=4 kHz	ext. filter, fd=3 kHz					
EN 50081-1 EN61000-6-3	Generic emission standards for residential, commercial and light industry environment	Alternative mains supply (EN50081-1)	≤ 20 m	ext. filter, fd≤6kHz	ext. filter, fd=3 kHz					
EN 50081-2 (I) EN 61000-6-4	Generic emission standards for industrial environment	Alternative mains supply (EN50081-2)	≤ 100 m	ext. filter, fd≤4 kHz	ext. filter, fd=3 kHz					

* For information on ferrite, refer to section L4. For sizes 2 and 3, the ferrite is delivered as standard (accessories). Put the ferrite at the drive output and run U, V, W cables through the ferrite (without shielding).

UNIDRIVE SP

General characteristics

! • The second environment comprises with industrial networks supplied in low voltage but it does not supply households. The operation of a drive without RFI filter in such an environment may lead to interference in certain electronic devices placed near the drive whose immunity level is not compatible with the industrial environment. If it is not possible to filter the disrupted element, the drive must be added an external RFI filter.

B4.2 - Internal RFI filter


This filter is connected to the drive in standard mode. It reduces the radio-frequency emission in the mains supply.

CAUTION:

Remove the filter:


- when the leakage current must be below 28mA AC at 400V - 50 Hz or 30µA DC (10 MΩ) (without the internal filter, the drive leakage current is below 1mA),
 - from a 3 to 6 size drive connected to a mains supply.
- If an external RFI filter or an additional motor earth is used, it is not necessary to remove the internal RFI filter.

• Terminal access

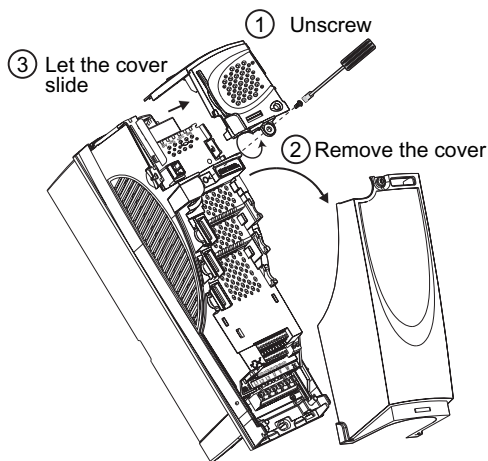


• Installation

- Installation on 1 to 3 sizes:

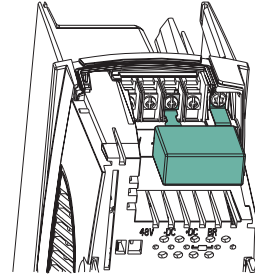

- Installation on 4 to 6 sizes:

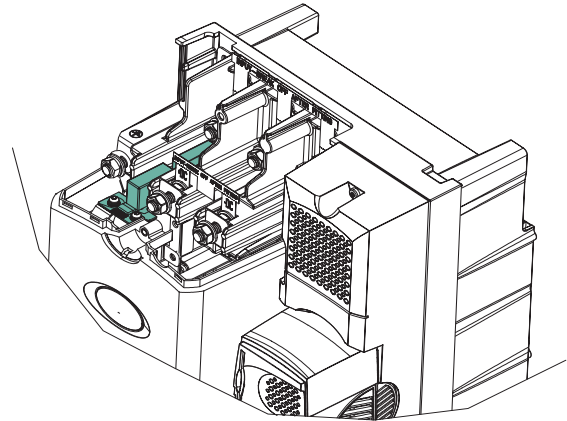

B5 - UL compliance

• For UL compliance, the operation temperature must not exceed 50°C.

• Motor overload protection

The drive is fitted with a motor overload protection. The overload level is 150% of the current at full drive load in open loop (□), and 175 % on closed loop vector mode (□) or servo (▶).

It is thus necessary to set correctly the current at parameter **0.46** in order that the protection be effective (the protection level can be adjusted below 150% if necessary).

• Motor thermal protection

The drive has a built-in motor thermal protection.

• Overspeed protection

The drive has a built-in overspeed protection.

Nevertheless, this protection cannot provide a level equivalent to an independent high integrity overspeed protection circuit.

UNIDRIVE SP Mechanical installation

Contents

C1 - Warning	3
C2 - Checks upon receipt	3
C3 - Mounting types	3
C4 - Heater mounting in the cabinet	4
C4.1 - Sizes and weights	4
C4.2 - Losses inside the cabinet	5
C4.3 - Ventilation	7
C4.4 - Cabinet volume calculation	7
C4.5 - Cabinet installation advice	7
C5 - Heater mounting outside the cabinet	8
C5.1 - Sizes and weights	8
C5.2 - Mounting instructions	9
C5.3 - Losses inside the cabinet.....	9
C5.4 - Cut out for integrated resistors.....	9
C5.5 - IP54 heater protection.....	10
C5.5.1 - Mounting instructions	10
C5.5.2 - Derating of the permanent output current	10
C6 - SM modules installation	11
C6.1 - Access to locations	11
C6.2 - Modules installation in the drive	11

UNIDRIVE SP Mechanical installation

Notes



UNIDRIVE SP Mechanical installation

C1 - Warning

! It is the owner or the user responsibility to make sure that the installation, operation, maintenance of the drive and its options are realised in compliance with the legislation relating to the goods and personnel safety, and with the provisions in force in the country in which it is used.

The UNIDRIVE SP has to be installed in a location free from conductive dust, steam, gas and corrosive fluids and from condensation (for example class 2 following UL 840 and CEI 664.1). The drive must not be installed in an area likely to be at risk but in a location fit for purpose. In this situation, the installation shall be guaranteed.

In an atmosphere subject to condensation, install a heating system that operates when the drive is not used and switched off when the drive is operating. It is preferable to command the heating system automatically.



The UNIDRIVE SP casing is inflammable; if necessary, use a fire protected cabinet.

In order to respect the UL conformity, the variable speed drive has to be installed in a type 1 minimum cabinet, as defined by the UL50 standard.

C2 - Checks upon receipt

Before starting the drive installation, make sure that :

- the drive was not damaged during the transportation,
- the accessories, the general manual and the CD Rom are included in the drive casing,
- the name plate corresponds to the mains supply.

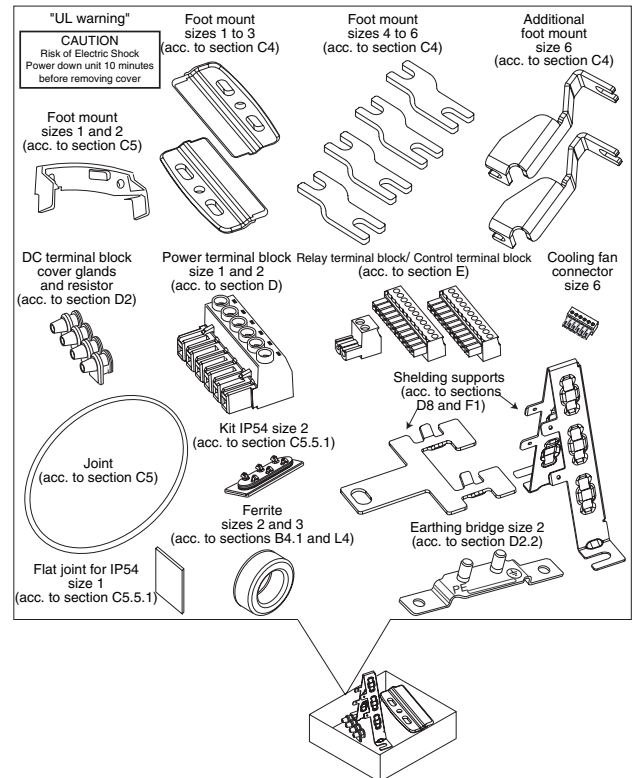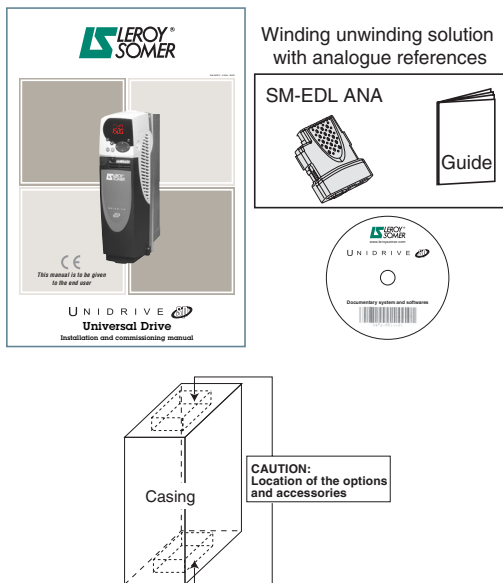

C3 - Mounting types

The drive may be mounted in 2 ways...

- Heater inside the cabinet :

In this configuration, it is necessary to take into consideration the drive losses for cabinet sizing.

- Heater outside the cabinet :

Mounting the heater outside the cabinet allows the dissipation of most of the heat losses. Consequently, the cabinet sizes may be significantly reduced.


If it is necessary, the drive may be modified in order to keep the IP54 protection of heater outside the cabinet (see section C5.5).

UNIDRIVE SP Mechanical installation


C4 - Heater mounting inside the cabinet


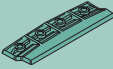
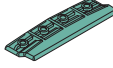
C4.1 - Sizes and weights

- Rating 1.5TL to 3.5TL / 1.5T to 5.5T (Size 1)

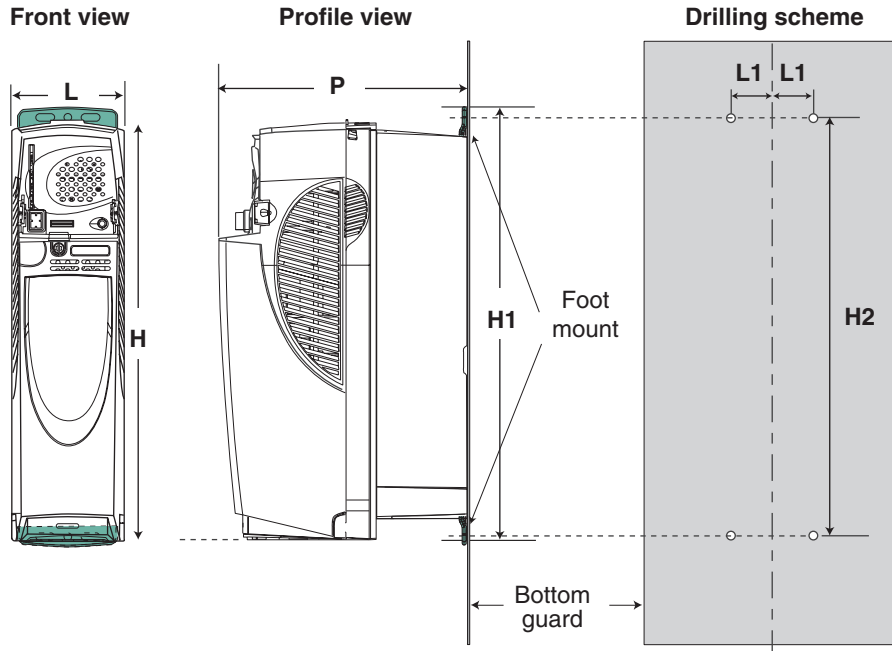


- Rating 4.5TL to 16TL / 8T to 33T / 3.5TM to 22TM (Size 2 and 3)

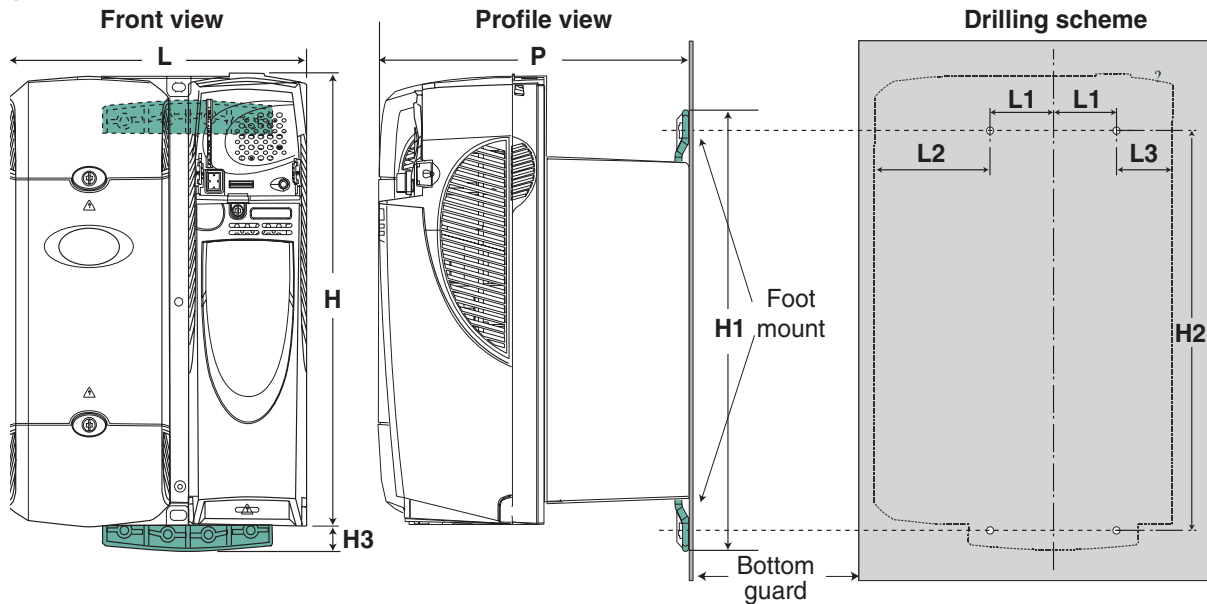

UNIDRIVE SP		Dimension (mm)									Screw (mm)	Weight (kg)	Mounting (kg)
Size	Type	L	L1	L2	L3	H	H1	H2	H3	P			
1	1.5TL to 3.5TL 1.5T to 5.5T	100	20 ± 2.5	-	-	368	386	370 ± 1	-	219	4 x Ø6.5	5 (4.5T & 5.5T : 5.8)	 x 2
2	4.5TL to 8TL 8T to 16T	155	53 ± 0.5	24.5	24.5	368	371.6	337.5 ± 1	21	219	4 x Ø6.5	7	 x 2
3	11TL and 16TL 22T to 33T 3.5TM to 22TM	250	53 ± 0.5	97	47	368	361	327 ± 1	21	260	4 x Ø6.5	15	 x 2

UNIDRIVE SP Mechanical installation

• Rating 22TL to 33TL / 40T to 150T / 22TH to 150TH (Sizes 4 to 6)

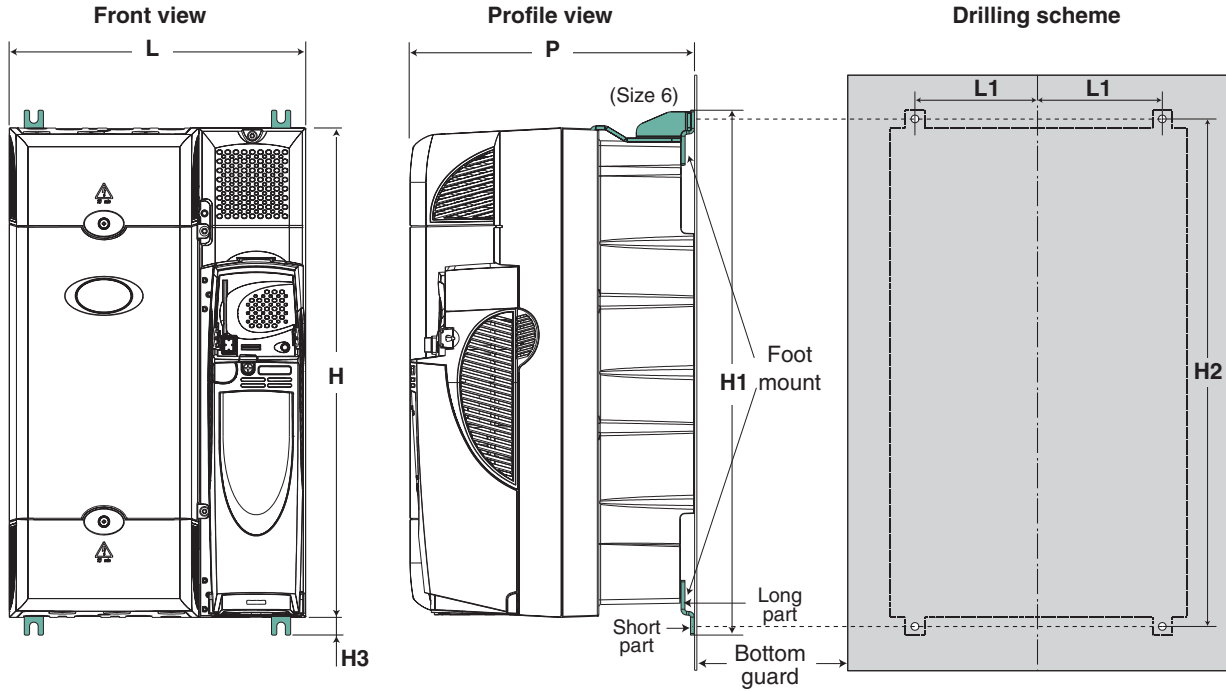

UNIDRIVE SP		Dimension (mm)							Screw (mm)	Weight (kg)	Mounting
Size	Type	L	L1	H	H1	H2	H3	P			
4	22TL to 33TL 40T to 60T 22TH to 60TH	310	129.3 ± 0.25	510	546.8	528.8 ± 0.5	18.4	298	4 x ØM8	30	 x 4 + x 2 (size 6)
5	75T and 100T 75TH and 100TH	310	129.3 ± 0.25	820	857.3	839.3 ± 0.5	18.4	298	4 x ØM8	55	
6	120T and 150T 120TH and 150T	310	129.3 ± 0.25	1131	1168.8	1150.8 ± 0.5	18.9	298	4 x ØM8	75	

C4.2 - Losses inside the cabinet

The table below indicates the maximum value of the drive losses at the rated current, according to the carrier frequency. The values correspond to normal operation for ambient temperatures of 40°C and 50°C.

UNIDRIVE SP		Temp.	Losses (W)												
Size	Type		Maximum overload						Reduced overload						
			3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	
1	1.5TL	40°C	27	29	32	35	41	47	33	35	38	42	49	56	
		50°C	27	29	32	35	41	47	33	35	38	42	49	56	
	2TL	40°C	38	40	43	47	55	62	45	47	51	56	64	73	
		50°C	38	40	43	47	55	62	45	47	51	56	64	73	
	2.5TL	40°C	51	53	58	62	71	81	67	70	76	81	92	104	
		50°C	51	53	58	62	71	81	67	70	76	81	92	97	
3.5TL	40°C	75	78	86	94	109	124	78	82	89	97	113	129		
	50°C	75	78	86	94	109	124	78	82	89	97	113	129		
2	4.5TL	40°C	133	139	150	160	182	203	155	161	173	186	210	235	
		50°C	133	139	150	160	182	190	155	161	173	186	210	190	
	5.5TL	40°C	170	176	190	203	229	256	210	218	234	250	282	314	
		50°C	170	176	190	203	229	256	210	218	234	250	282	314	
	8TL	40°C	245	254	263	261	259	258	272	282	302	320	315	315	
		50°C	245	254	263	261	259	258	272	282	302	320	315	315	
3	11TL	40°C	260	272	297	321	370	x	331	347	380	412	477	x	
		50°C	260	272	297	289	273	x	331	347	380	412	436	x	
	16TL	40°C	349	365	398	430	486	x	431	451	492	532	551	x	
		50°C	306	315	300	289	273	x	431	451	480	463	439	x	
	4	22TL	40°C	428	448	488	528	x	x	517	541	589	637	x	x
			50°C	428	448	488	528	x	x	517	541	589	637	x	x
27TL		40°C	517	541	589	637	x	x	611	639	694	750	x	x	
		50°C	517	541	589	637	x	x	611	639	694	750	x	x	
33TL		40°C	611	639	694	750	x	x	810	845	916	987	x	x	
		50°C	611	639	694	750	x	x	671	701	761	821	x	x	

UNIDRIVE SP

Mechanical installation

UNIDRIVE SP		Temp.	Losses (W)											
Size	Type		Maximum overload					Reduced overload						
			3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
1	1.5T	40°C	20	24	30	37	51	64	26	29	37	45	61	76
		50°C	20	24	30	37	51	64	26	29	37	45	61	76
	2T	40°C	27	31	39	48	64	80	34	38	48	57	76	95
		50°C	27	31	39	48	64	80	34	38	48	57	76	95
	2.5T	40°C	37	42	52	62	82	102	44	50	61	72	95	117
		50°C	37	42	52	62	82	95	44	50	61	72	95	97
	3.5T	40°C	52	58	70	83	101	104	62	69	83	97	126	134
		50°C	52	58	70	83	92	104	62	69	83	97	126	134
	4.5T	40°C	72	82	101	121	123	125	83	94	117	139	156	157
		50°C	72	82	97	123	125	125	83	94	117	139	156	157
	5.5T	40°C	91	103	123	123	125	125	106	120	147	158	156	157
		50°C	91	103	97	123	125	125	106	120	147	158	156	157
2	8T	40°C	164	178	206	229	231	231	186	202	234	266	283	282
		50°C	164	178	190	229	231	231	186	202	234	266	283	282
	11T	40°C	201	218	230	229	231	231	248	269	291	286	283	281
		50°C	201	218	190	229	231	231	248	269	291	286	283	281
	16T	40°C	272	282	279	278	279	282	313	320	320	315	316	316
		50°C	272	282	190	278	279	282	313	320	190	315	316	x
3	22T	40°C	337	363	415	424	408	401	364	392	449	499	477	465
		50°C	337	363	399	387	373	364	364	392	430	417	399	389
	27T	40°C	411	443	485	469	452	444	437	471	540	538	514	501
		50°C	411	443	435	417	396	388	437	455	435	418	399	388
	33T	40°C	474	509	485	469	452	x	567	580	552	533	510	x
		50°C	474	459	429	415	397	x	474	459	429	415	397	x
4	40T	40°C	629	689	704	674	x	x	714	781	914	956	x	x
		50°C	629	689	638	617	x	x	714	781	898	852	x	x
	50T	40°C	780	745	690	663	x	x	882	961	995	941	x	x
		50°C	716	673	629	607	x	x	882	944	894	814	x	x
	60T	40°C	976	920	854	821	x	x	1070	1158	1217	1144	x	x
		50°C	876	820	775	750	x	x	877	949	912	875	x	x
5	75T	40°C	1311	1236	1150	1112	x	x	1471	1618	1640	1560	x	x
		50°C	1186	1118	1047	1009	x	x	1471	1616	1462	1411	x	x
	100T	40°C	1681	1600	1508	1464	x	x	1830	1881	1781	1717	x	x
		50°C	1500	1434	1366	1333	x	x	1500	1644	1543	1480	x	x
6	120T	40°C	1817	1935	1772	x	x	x	2058	2259	2153	x	x	x
		50°C	1817	1747	1610	x	x	x	1942	2118	1939	x	x	x
	150T	40°C	2192	2042	1888	x	x	x	2477	2455	2255	x	x	x
		50°C	1979	1851	1715	x	x	x	2068	2108	1997	x	x	x

UNIDRIVE SP		Temp.	Losses (W)											
Size	Type		Maximum overload					Reduced overload						
			3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
3	3.5TM	40°C	112	124	148	172	x	x	127	141	168	196	x	x
		50°C	112	124	148	172	x	x	127	141	168	196	x	x
	4.5TM	40°C	127	141	168	196	x	x	135	150	180	209	x	x
		50°C	127	141	168	196	x	x	135	150	180	209	x	x
	5.5TM	40°C	135	150	180	209	x	x	163	181	218	254	x	x
		50°C	135	150	180	209	x	x	163	181	218	254	x	x
	8TM	40°C	178	198	237	276	x	x	197	219	263	306	x	x
		50°C	178	198	237	242	x	x	197	219	263	306	x	x
	11TM	40°C	212	235	281	328	x	x	267	296	354	412	x	x
		50°C	212	235	246	242	x	x	267	296	354	383	x	x
	16TM	40°C	300	332	396	405	x	x	362	399	475	471	x	x
		50°C	257	253	246	242	x	x	362	399	390	384	x	x
	22TM	40°C	365	403	406	405	x	x	448	486	477	471	x	x
		50°C	257	253	246	242	x	x	405	399	390	384	x	x

UNIDRIVE SP		Temp.	Losses (W)											
Size	Type		Maximum overload					Reduced overload						
			3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
4	22TH	40°C	360	413	519	625	x	x	409	470	590	711	x	x
		50°C	360	413	619	625	x	x	409	470	590	711	x	x
	27TH	40°C	409	470	590	711	x	x	496	568	712	857	x	x
		50°C	409	470	590	711	x	x	496	568	712	789	x	x
	33TH	40°C	496	568	712	857	x	x	660	754	941	1063	x	x
		50°C	496	568	712	789	x	x	660	754	805	789	x	x
	40TH	40°C	660	754	941	1063	x	x	798	908	1083	1058	x	x
		50°C	660	754	805	789	x	x	798	831	805	789	x	x
	50TH	40°C	798	908	1083	1058	x	x	985	1115	1080	1058	x	x
		50°C	798	831	805	789	x	x	850	831	805	789	x	x
	60TH	40°C	873	987	1042	1023	x	x	1060	1179	1130	1105	x	x
		50°C	871	848	816	797	x	x	871	848	816	797	x	x
5	75TH	40°C					x	x					x	x
		50°C					x	x					x	x
	100TH	40°C					x	x					x	x
		50°C					x	x					x	x
6	120TH	40°C				x	x	x				x	x	x
		50°C				x	x	x				x	x	x
	150TH	40°C				x	x	x				x	x	x
		50°C				x	x	x				x	x	x

UNIDRIVE SP Mechanical installation

C4.3 - Ventilation

- The drive is ventilated by an internally mounted two-speed forced ventilation (low speed/over speed). UNIDRIVE SP controls the change from one speed to another.
- High speed air flow :


UNIDRIVE SP	Flow (m³/h)
Size 1	75
Size 2	85
Size 3	200
Size 4	200
Size 5	Consult LEROY-SOMER
Size 6	

- Sound levels :

UNIDRIVE SP	Over speed (DBA)	Low speed (DBA)
Size 1	48	28
Size 2	54	35
Size 3	56	43
Size 4	Consult LEROY-SOMER	
Size 5		
Size 6		

C4.4 - Cabinet volume calculation

The installation of a drive inside the cabinet demands specific calculation of the volume according to the locations of the drive. One must check that the thermal dissipation is enough. Taking worst case example : IP54 cabinet (without forced ventilation), the bottom and the underside in contact with other surfaces.

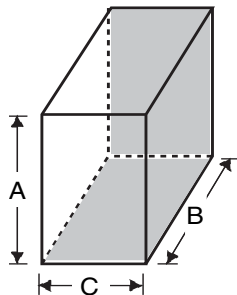

The minimum required heat exchange surface is the following:

$$S = \frac{P_i}{k(T_j - T_{amb})}$$

where :

- P_i = loss of all heat producing elements (ex. : 400 W).
- T_j = maximum operation internal ambient temperature (ex : 40°C).
- T_{amb} = maximum external ambient temperature (ex : 25°C).
- k = thermal transmission margin (ex : 5.5).
- $S = 4.85 \text{ m}^2$.

The exchange surfaces are: $2(AB) + AC + BC = S$.

A and B taking values of :

A = 2.2 m (height),

B = 0.6 m (depth).

==> C = 0.8 m.

In case of a ventilated cabinet, the volume may be reduced. Considering the same example, the flow of the V.F. is calculated according to the following formula :

$$V = \frac{3kp}{T_j - T_{amb}} = 83 \text{ m}^3/\text{h}$$

where :

$$k_p = \frac{P_0}{P_1}$$


P_0 : Atmospheric pressure at sea level.

P_1 : Atmospheric pressure of the installation.

(Generally, $\frac{P_0}{P_1}$ corresponds to a margin of 1.2 to 1.3).

C4.5 - Advice on installation inside a cabinet

Mount the drive vertically respecting the spacings between the drive and the other options or equipment described below.

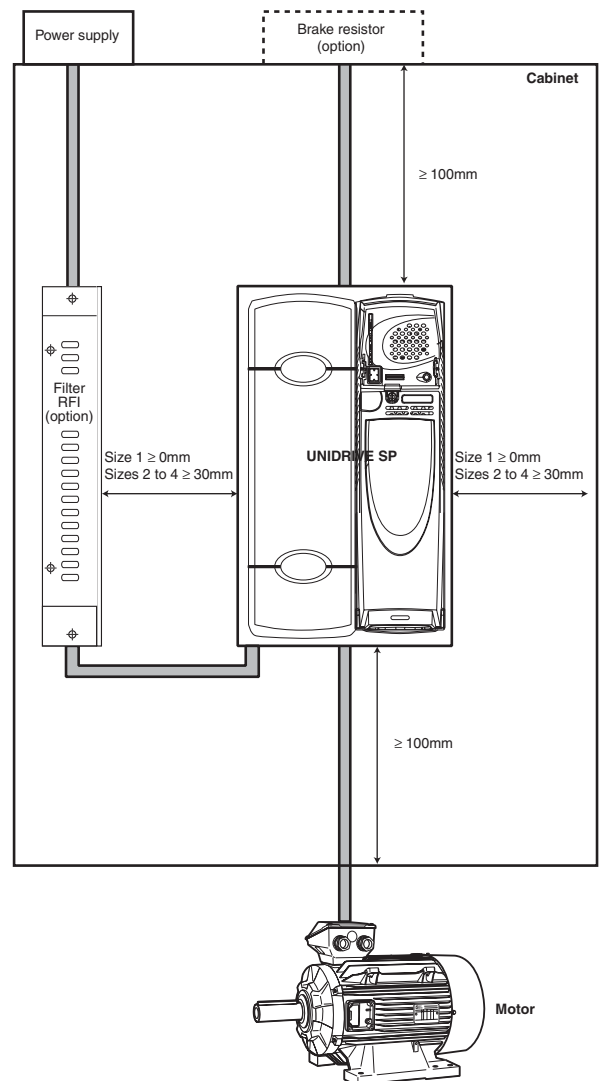


- Make sure that the air flow necessary to the drive and to the external optional RFI filter circulates normally.
- The external optional RFI filter has to be placed as close as possible to the drive respecting the minimum spaces required (on the drive or under the drive).
- The external optional brake resistor has to be located outside, as close as possible or on the cabinet.
- Do not place on another heat source or on another variable speed drive.
- Do not obstruct the drive ventilation outlets.

UNIDRIVE SP Mechanical installation


C5 - Heater mounting outside the cabinet



C5.1 - Sizes and weights

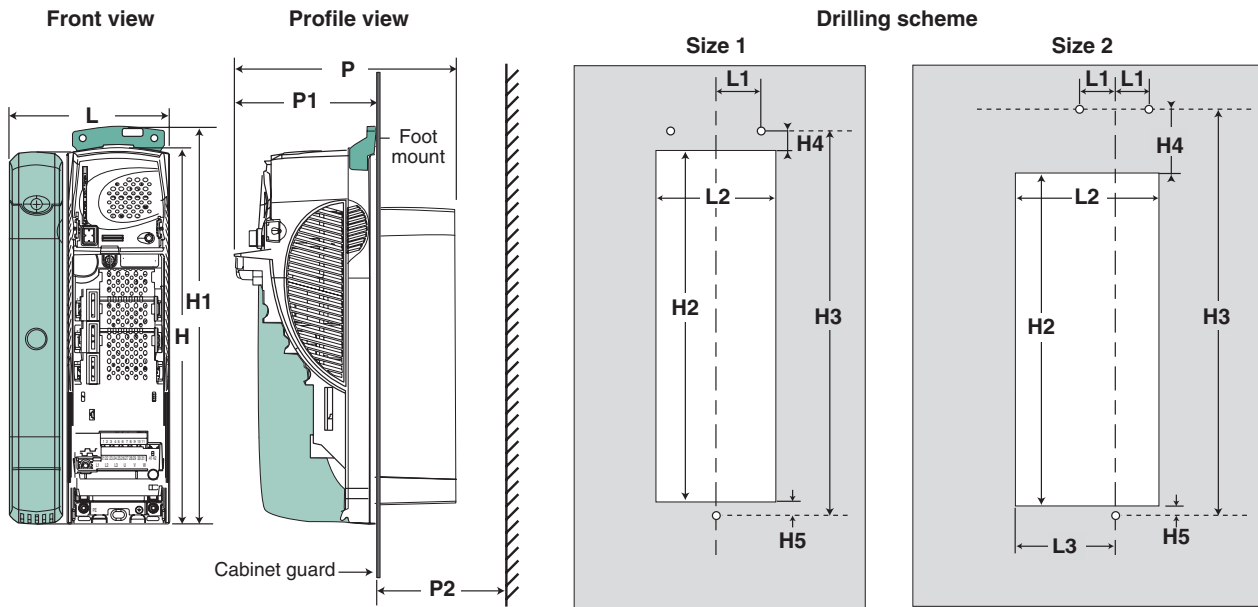- Rating 1.5TL to 8TL / 1.5T to 16T (Sizes 1 and 2)

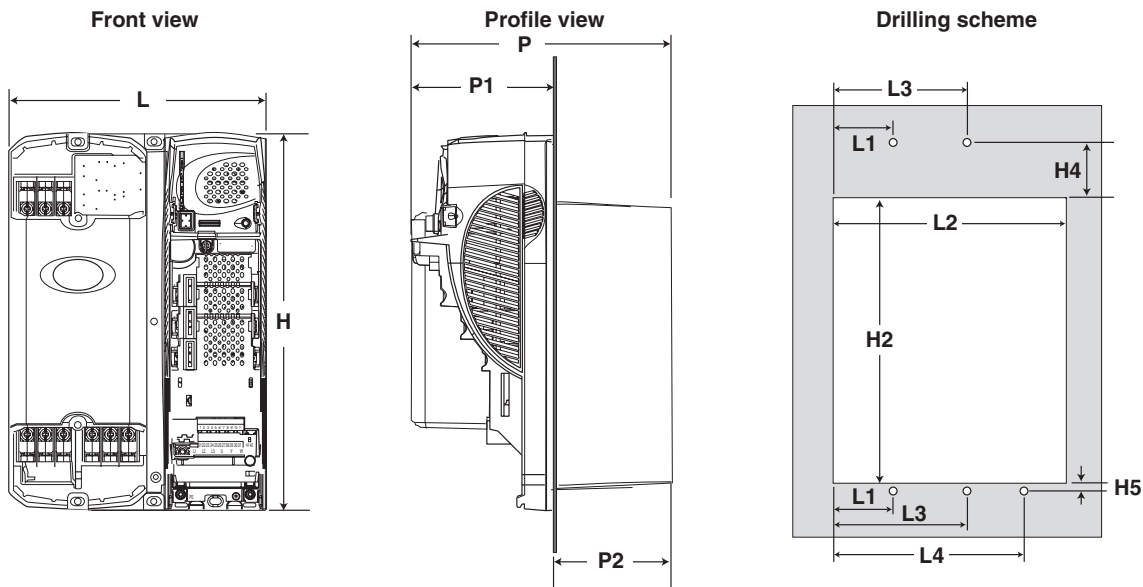


- Rating 11TL and 16TL / 22T to 33T / 3.5TM to 22TM (Size 3)




UNIDRIVE SP		Dimensions (mm)													Screw (mm)	Weight (kg)	Mounting	
Size	Type	L	L1	L2	L3	L4	H	H1	H2	H3	H4	H5	P	P1				P2
1	1.5TL to 3.5TL 1.5T to 5.5T	100	35 ±0.15	93 ±0.5	-	-	368	391	343 ±0.5	368 ±1	15.6 ±0.5	9.4 ±0.75	219	139	80	3 x Ø6.5	5 (4.5T & 5.5T : 5.8)	 x 1
2	4.5TL to 8TL 8T to 16T	155	35 ±0.15	148 ±0.5	101.5 ±0.5	-	368	391	294 ±0.5	368 ±1	64.6 ±0.5	9.3 ±0.5	219	139	80	3 x Ø6.5	7	 x 1
3	11TL and 16TL 22T to 33T 3.5TM to 22TM	250	60.5 ±0.5	236 ±0.5	135.5 ±0.5	193 ±0.5	368	-	287 ±0.5	-	56 ±0.5	8 ±0.3	260	140	120	5 x Ø6.5	15	internal

UNIDRIVE SP Mechanical installation

• Rating 22TL to 33TL / 40T to 150T / 22TH to 150TH (Sizes 4 to 6)

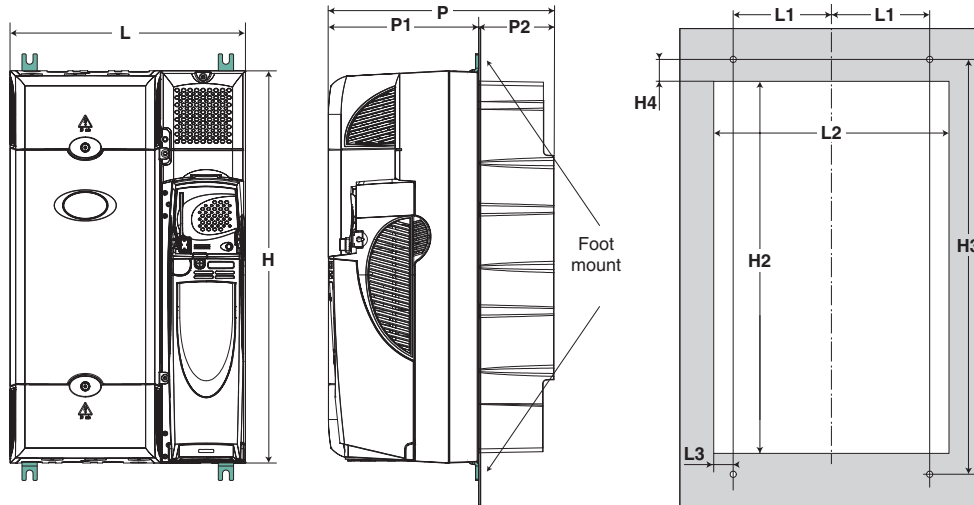

UNIDRIVE SP		Dimensions (mm)											Screw (mm)	Weigh (kg)	Mounting	
Size	Type	L	L1	L2	L3	H	H1	H2	H3	H4	P	P1				P2
4	22TL to 33TL 40T to 60T 22TH to 60TH	310	129.3 ±0.25	286 ±0.5	14.2 ±0.5	510	-	487 ±0.5	540.3 ±0.5	26.65 ±0.5	298	200	98	4 x ØM8	30	 x 4
5	75T and 100T 75TH and 100TH	310	129.3 ±0.25	286 ±0.5	1.2 ±0.5	820	-	797.5 ±0.5	852.6 ±0.5	26.7 ±0.5	298	200	98	4 x ØM8	55	
6	120T and 150T 120TH and 150T	310	129.3 ±0.25	286 ±0.5	13.7 ±0.5	1131	-	1107 ±0.5	1161.2 ±0.5	27.1 ±0.5	298	200	98	4 x ØM8	75	

C5.2 - Mounting instructions

- Make the cut out and the drilling in the rear panel of the cabinet. If an optional resistor is integrated to the drive heater (see section L8), take into consideration the cut out represented in section C5.4, necessary for the cable run.
- Unscrew the front screw of the drive in order to remove the control terminal block cover. For the drives size 3, also unscrew the lower and upper covers of the power part (if it is necessary, see section D2.3) in order to get to the mounting holes.
- Place on the flange the sealing joint delivered with the drive.

Note : For sizes 4 to 6, assemble the foot mount as follows:

- insert the long part of the left upper and lower feet, then bolt together,
- Insert the long side of the right lower and upper feet. Do not screw, the feet remain held by compression (internal to the drive).

- Install the drive into the cut out of the rear panel, and mount it by the upper and lower elements.
- Replace the drive cover(s).

CAUTION :

Make sure there is sufficient air flow at the rear of the cabinet.

C5.3 - Losses inside the cabinet


The main losses related to the power being dissipated outside the cabinet, the only things to take into consideration are the losses from the control card or from the integral option modules.

UNIDRIVE SP	Losses (without heater losses)
Size 1	≤ 50 W
Size 2	≤ 75 W
Size 3	≤ 100 W
Size 4	≤ 204 W
Size 5	≤ 347 W
Size 6	


C5.4 - Cut out for integral resistors

For the ratings sizes 1 and 2, optional brake resistors may be directly installed in the drive heater. For a heater mounting outside the cabinet, one may proceed to a further cut out for the resistor(s) cables run. (For more details on this type of resistor, refer to section L8).

Size 1

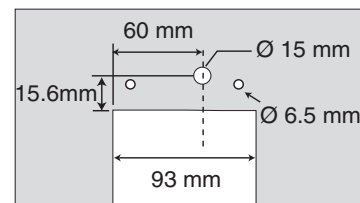

Size 2

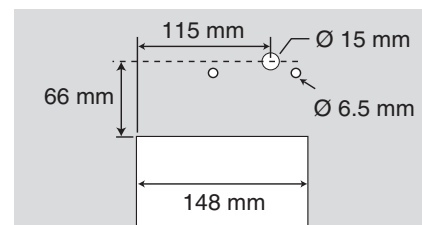

UNIDRIVE SP

Mechanical installation

C5.5 - Heater IP54 protection


When the drive is mounted in the IP54 cabinet with the heater mounted outside, the heater has a IP20 protection. For the drives sizes 1 and 2, the heater protection index may reach IP54.

CAUTION :


- Regular cleaning of the heater and of the ventilation is then necessary.
- In an environment that needs a IP54 protection, the standard ventilation may be kept, but its life will be diminished in relation to a standard use. In order to increase the ventilation reliability, replace it by an equivalent ventilation but IP54 protection (for the mounting instructions and references, contact your ordinary LEROY-SOMER representative).

C5.5.1 - Mounting instructions

• Size 1

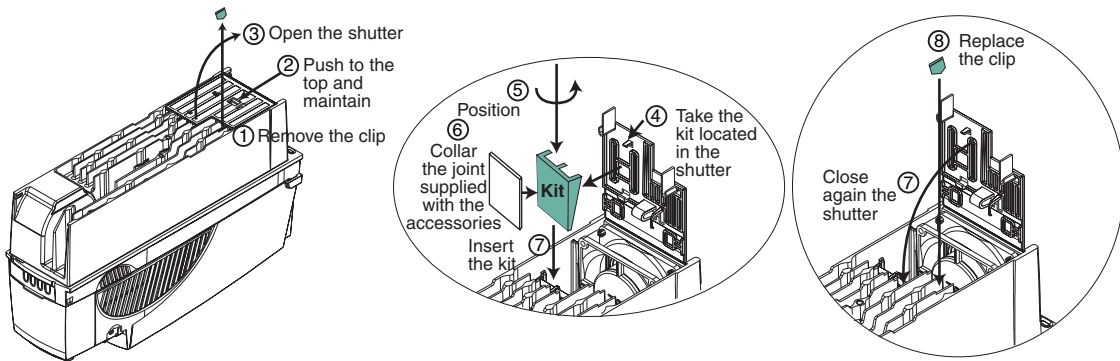

• Size 2

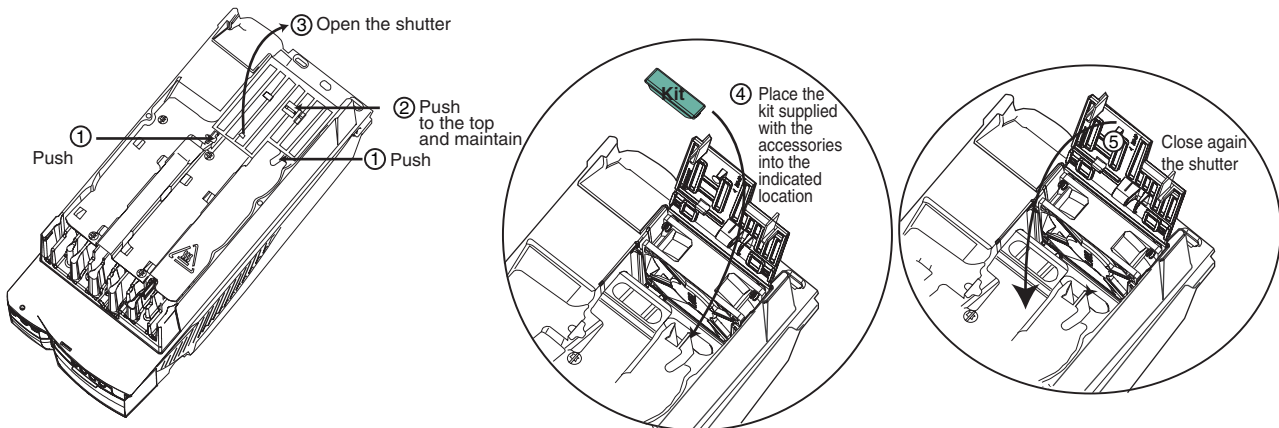

Note : In order to remove the heater IP54 protection, follow the instructions described above but in reverse order.

C5.5.2 - Derating of the permanent output current



- The IP54 kit installation requires a derating of the current capacity.

UNIDRIVE SP	Permanent output current with IP54 kit (standard ventilation) at 40 °C											
	Maximum overload						Reduced overload					
	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
1.5TL	4.3						5.2					
2TL	5.8						6.8					
2.5TL	7.5						7.3					
3.5TL	10.6	10.5	9.7	9	7.7	6.6	11	10.6	9.7	9	8.2	7.3
4.5TL	12.6						15.5					
5.5TL	17						15.5					
8TL	24.2	23.4	21.8	20.3	17.7	15.5	24.5	23.7	22	20.5	17.9	15.6
1.5T	2,1						2.8					
2T	3						2.9					
2.5T	4.2						3.8					
3.5T	3.9						2.9					
4.5T	5						3.9					
5.5T	2.9						2.9					
8T	7.6	5.8	5.4	4.7	3.9	2.9	6,9	6,5	5,4	3,9	2,9	
11T	7.6	7.3	5.8	4.7	3.2	2.3	8.3	7.3	5.8	4.7	3.2	2.3
16T	8.2	7.3	5.8	4.7	3.2	2.3	8.3	7.3	5.8	4.7	3.2	2.3
	13						15.3					
	12.6						13.3					
	9.4						10.1					
	7.3						7.9					
	16.5						13.4					
	12.3						10.1					
	9.3						7.9					
	7.2						7.7					
	21.6	19.6	16.4	13.8	10.2	7.7	21.7	19.7	16.4	13.9	10.2	7.7

UNIDRIVE SP



Mechanical installation

C6 - SM modules installation

C6.1 - Access to locations


- ⚠ In order to insert a module, power down the drive (including the power supplies +24V and +48V), and wait for 10 min. Otherwise, the module may be damaged.
- Check the conditions of the option : a damaged module must not be inserted in the drive.

If it is necessary to dismantle a module, follow the instructions below.

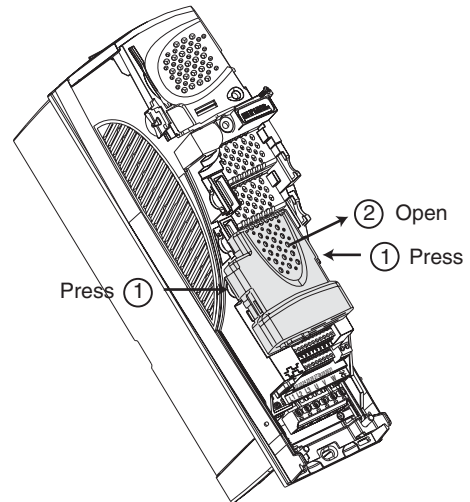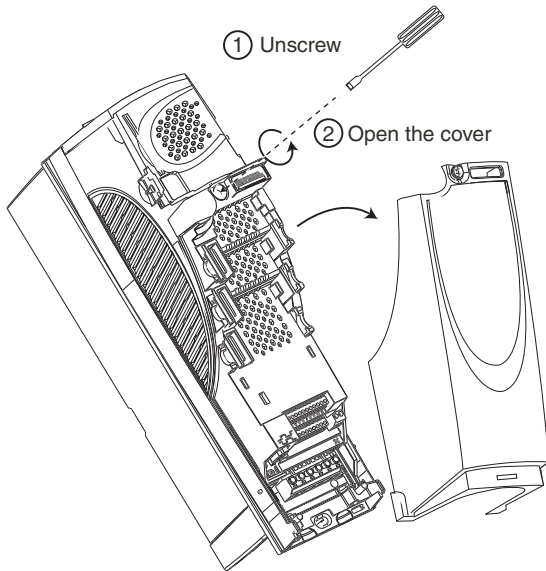

C6.2 - Installation of modules in the drive

First of all, install the SM-EDL ANA module in the lowest location and gently press on the module, until a click is heard.

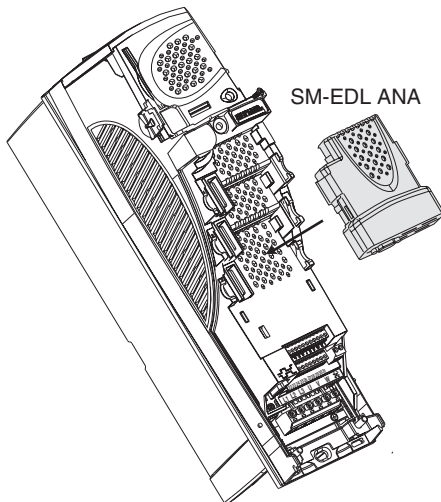

Note : If the application needs a further module (ex.: SM-I/O Plus or SM-PROFIBUS DP module), install them in the locations below.

UNIDRIVE SP Mechanical installation

Notes



UNIDRIVE SP

Power connection

Contents

D1 - Warning	3
D2 - Terminal position	3
D2.1 - Size 1 drives.....	3
D2.2 - Size 2 drives.....	4
D2.3 - Size 3 drives.....	5
D2.4 - Size 4 drives.....	6
D3 - Power diagrams	7
D3.1 - Safety input	7
D3.2 - Three-phase AC power supply according to the EN 954-1 safety standard - Category B or 1	8
D3.3 - Three-phase AC power supply according to the EN 954-1 safety standard - Category 2 or 3	9
D3.3.1 - Use of a special cable for the safety input	9
D3.3.2 - Use of a contactor	10
D4 - Cables and fuses	11
D5 - Special applications	12
D5.1 - Motor insulation	12
D5.2 - Parallel motor association in U/F mode	12
D5.3 - Parallel operation of drives by means of a continuous bus	12
D6 - 48V secondary supply	13
D7 - UL Compliance	13
D7.1 - Supply specifications	13
D7.2 - Cables	13
D7.3 - Fuses	13
D8 - Recommendations for CEM compliance	14
D8.1 - Diagram.....	14
D8.2 - Recommendations	15
D8.3 - Details on the shielding supports (power)	15
D9 - Supply types	15

UNIDRIVE SP Power connection

Notes



UNIDRIVE SP Power connection

D1 - Warning

⚠ • All connection works must be performed according to the laws in force in the country of installation. It also includes the earthing or the grounding so that no accessible drive part be connected to the mains supply voltage or any other dangerous voltages.

- The voltage in the cables or the supply, motor, brake resistor or filter connections may cause fatal electric shocks. Avoid all contact.
- The drive must be supplied by means of a contactor in order to power it down for security reasons.
- The drive supply must be protected against overcharges and short-circuits.
- The drive stop command does not prevent from high voltages on the terminal.
- The drive contains the capacitors loaded with a fatal voltage after supply cut-out.
- Power down the drive 10 min before removing the cover. For UL compliance, stick the label «CAUTION Risk of electric shock power down unit 10 minutes before removing cover» (supplied with the accessories), so that the maintenance personnel see it.


- Check that the continuous bus voltage is below 40V before intervention.
- Check the drive, motor and mains supply voltage and current compatibility.
- After operation, the drive can be heated, do not touch it.
- Give special attention to a drive installed in an equipment connected to the mains supply by rapid connectors. The supply drive terminals are connected to internal capacitors by a diode bridge, which in this case does not provide enough insulation. It is thus necessary to add an automatic isolation system for the connectors as long as they are not among them.
- For UL compliance and in order to avoid any fire risks, the grip torque specified in this section must be observed.

For option connection refer to section L.

D2 - Terminal position

D2.1 - Size 1 drives

• Access to terminals

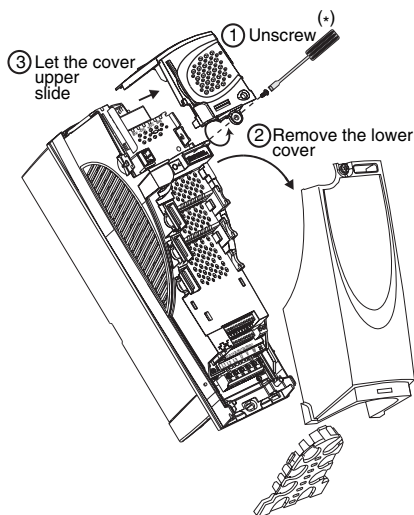

(*) To rescrew, observe the 1 N.m grip torque.

• Installment of terminals





Insert the quick release terminals supplied with the drive:

- 1 power terminal (L1, L2, L3, U, V, W),
- 1 control terminal (terminals 1 to 11),
- 1 control terminal (terminals 21 to 31),
- 1 relay terminal (terminals 41 and 42).

• Installment of cables runs and glands

- Remove the pre-cut washer of the cable run plate for power and control cable run (lower terminals).
- If necessary, break the upper cover miters and install the glands for the brake resistor or 48V supply cable runs.

• Position

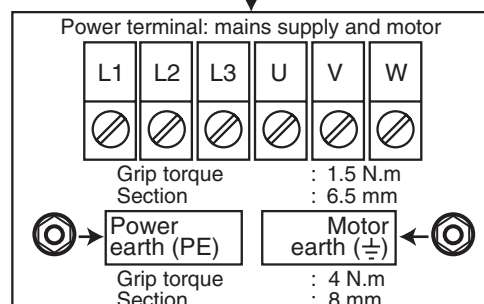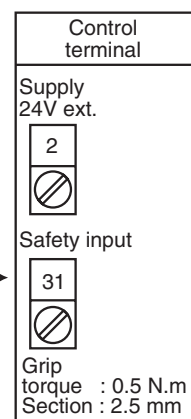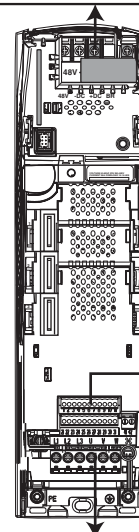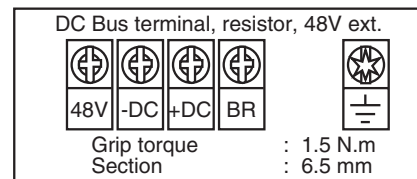


UNIDRIVE SP

Power connection

D2.2 - Size 2 drive

• Access to terminals

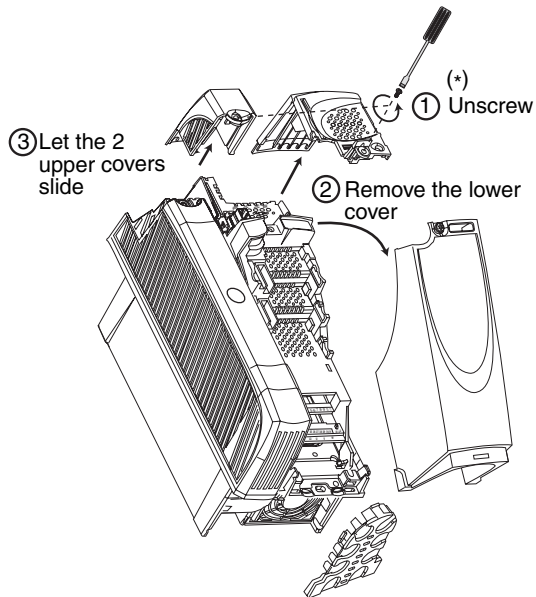

(*) To rescrew, observe the 1 N.m grip torque.


• Installment of terminals

Insert the quick release terminals supplied with the drive:

- 1 power terminal (L1, L2, L3, U, V, W),
- 1 control terminal (terminals 1 to 11),
- 1 control terminal (terminals 21 to 31),
- 1 relay terminal (terminals 41 and 42).

• Earthing

An earthing bridge is supplied with the drive. It is used to facilitate the run of earth cables in the cable run plate holes. Screw the earthing bridge supplied with the drive.

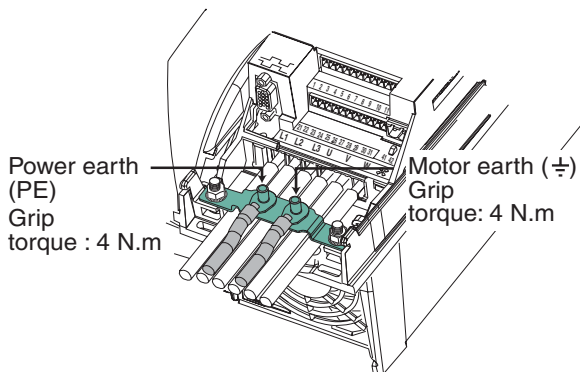




Note:

- In order to avoid additional handling, place the shielding support (described in sections E3 and F), then the bridge on the two drive earth terminal.
- According to the used earth cables section, it can be possible to make the connection directly to the drive terminals.

• Installation of cables runs and glands

- Remove the pre-cut washer of the cable run plate for power and control cable run (lower terminals).
- If necessary, break the upper cover miters and install the glands for the brake resistor or 48V supply cable runs.

• Terminal position

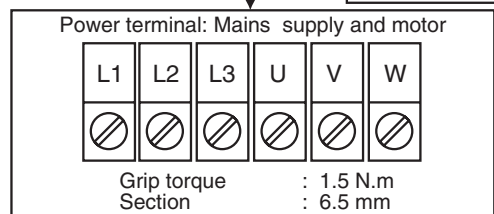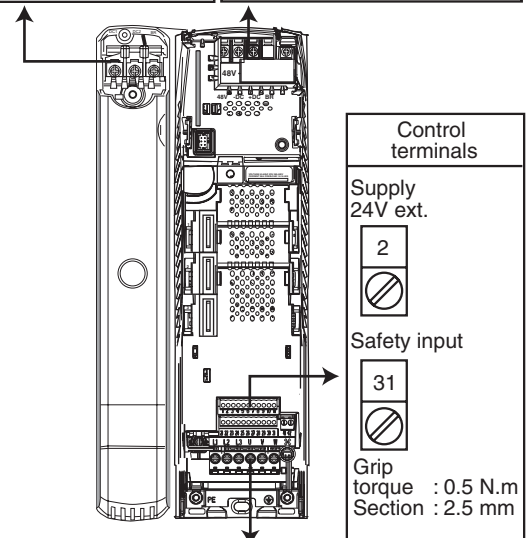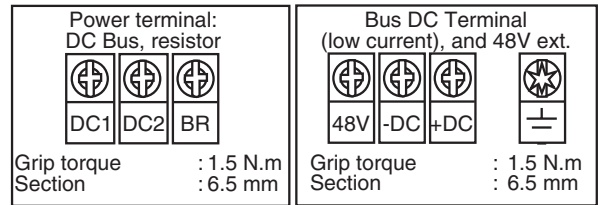

ATTENTION :


Use the DC Bus power cable to connect the brake resistor (DC2 and BR), the drive supply by DC, or the connection in parallel of DC buses of several drives (DC1, DC2).

Use the low current DC bus terminal (terminals 48V, -DC, +DC) only for the connection of the integrable RFI filter (supplied with the drive) or for the 48V safety supply.

UNIDRIVE SP Power connection

D2.3 - Size 3 drives

• Access to terminals

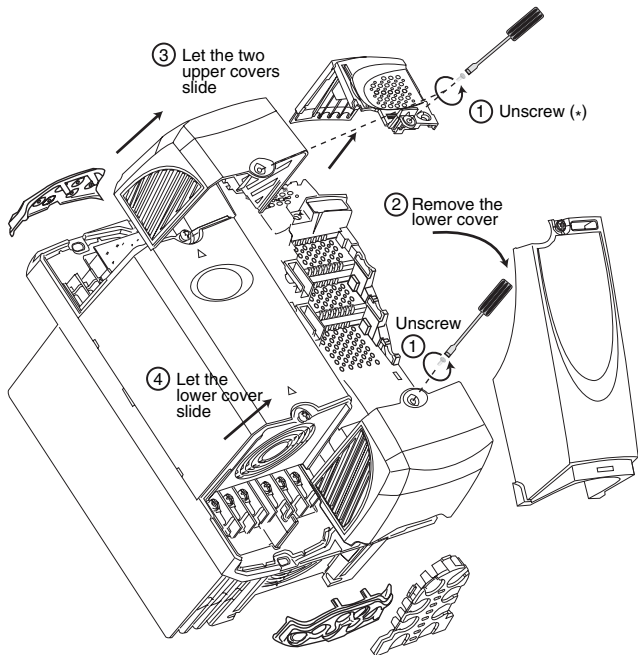

(*) To rescrew, observe the 1 N.m grip torque.


• Installment of terminals

Insert the quick release terminals supplied with the drive:

- 1 control terminal (terminals 1 to 11),
- 1 control terminal (terminals 21 to 31),
- 1 relay terminal (terminals 41 and 42).

• Earthing






Connect the mains supply (PE) and motor earth cables (≠) to the heater as specified.

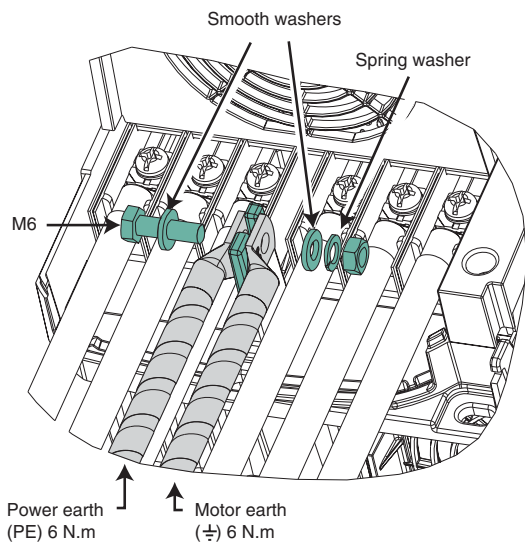

• Installment of cables runs and glands

- Remove the pre-cut washer of the cable run plate for power and control cable run (lower terminals).
- If necessary, break the upper cover miters and install the glands for the brake resistor or 48V supply cable runs.

• Position

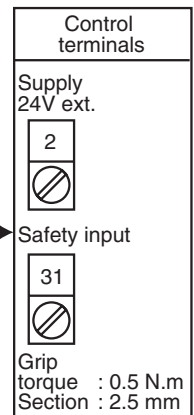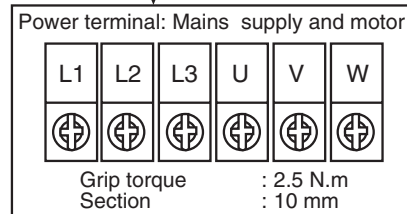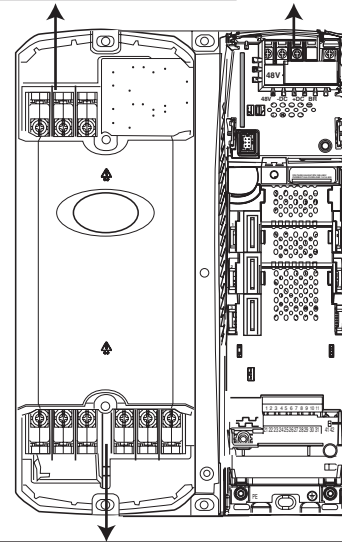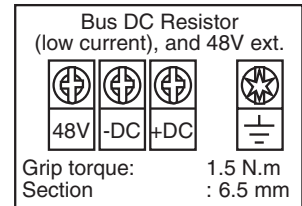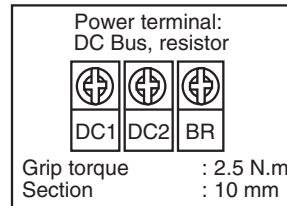

ATTENTION :


Use the DC Bus power cable to connect the brake resistor (DC2 and BR), the drive supply by DC, or the connection in parallel of DC buses of several drives (DC1, DC2).

Use the low current DC bus terminal (terminals 48V, -DC, +DC) only for the connection of the integrable RFI filter (supplied with the drive) or for the 48V safety supply.

UNIDRIVE SP Power connection

D2.4 - Size 4 to 6 drives

• Access to drives

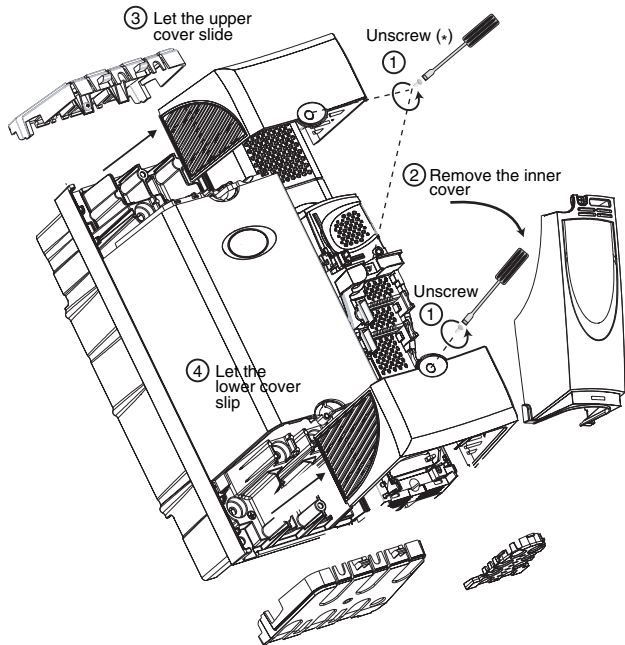

(*) To rescrew, observe the 1 N.m grip torque.

• Installation of terminals

Insert the quick release terminals supplied with the drive:

- 1 control terminal (terminals 1 to 11),
- 1 control terminal (terminals 21 to 31),
- 1 relay terminal (terminals 41 and 42).

• Earthing


The power earth (PE) and the motor earth (\ominus) are internally linked by a copper conductor (section 19.2 mm²).

This internal link is sufficient if the phase power supply cables has a section below or equal to 38.4 mm² (according to standard 60204-1 / EN60204-1) and when the power protection systems is calculated to less than or 200A (standard NFPA 79). In addition, it is necessary to perform an additional connection between the power earth and the motor.

• Installation of cables runs and glands

Remove the pre-cut washer of the cable run plate for brake resistor, power and control cable run (lower and upper left terminals)

• Position

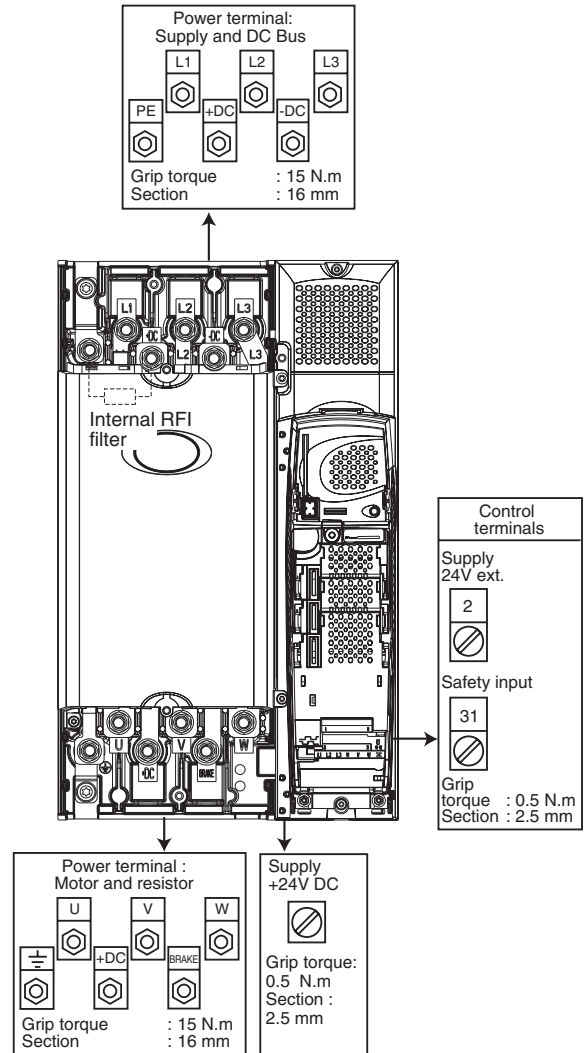

UNIDRIVE SP

Power connection

D3 - Power diagrams


D3.1 - Safety input

This input, when open, leads to the drive enabling. Independent of the microprocessor, it activates several power bridge control levels. It is conceived so as the absence of torque on the motor shaft have a very high level of integrity even in case of failure of one or more circuit components.

Certified by the independent European bodies, this input has been recognised as compliant with the EN 954-1 safety standard category 3 specified in the Machine Directive.

As a consequence, it can be used as a safety element and it can replace an electromechanical contactor or a safety relay.

According to the safety category with which the installation must comply, it is recommended to observe the power connection diagrams described in the following paragraphs.

 • **The safety input is a safety element to be built in the complete machine safety system. As any other installation, the entire machine shall form the object of a risk analysis performed by the integrator in order to determine the safety category with which the installation must comply.**

• **The safety input, when open, disables the drive and prevents the dynamic braking function. If a brake function is required before the drive safety disabling, a timing safety relay must be installed in order to automatically control the disabling after brake.**

If the brake is a machine safety function, it must be provided by an electromechanical solution as the dynamic drive brake function is not intended for safety purposes.


• **The safety input does not provide the electric insulation function. Before any intervention, the power cut must be provided by a certified disconnection body (disconnecter, switch ...).**



UNIDRIVE SP Power connection

D3.2 - Three-phase AC power supply according to the EN 954-1 safety standard - Category B or 1

WARNING: before power connection, check the position of the drive terminals (according to size). Refer to §D2.

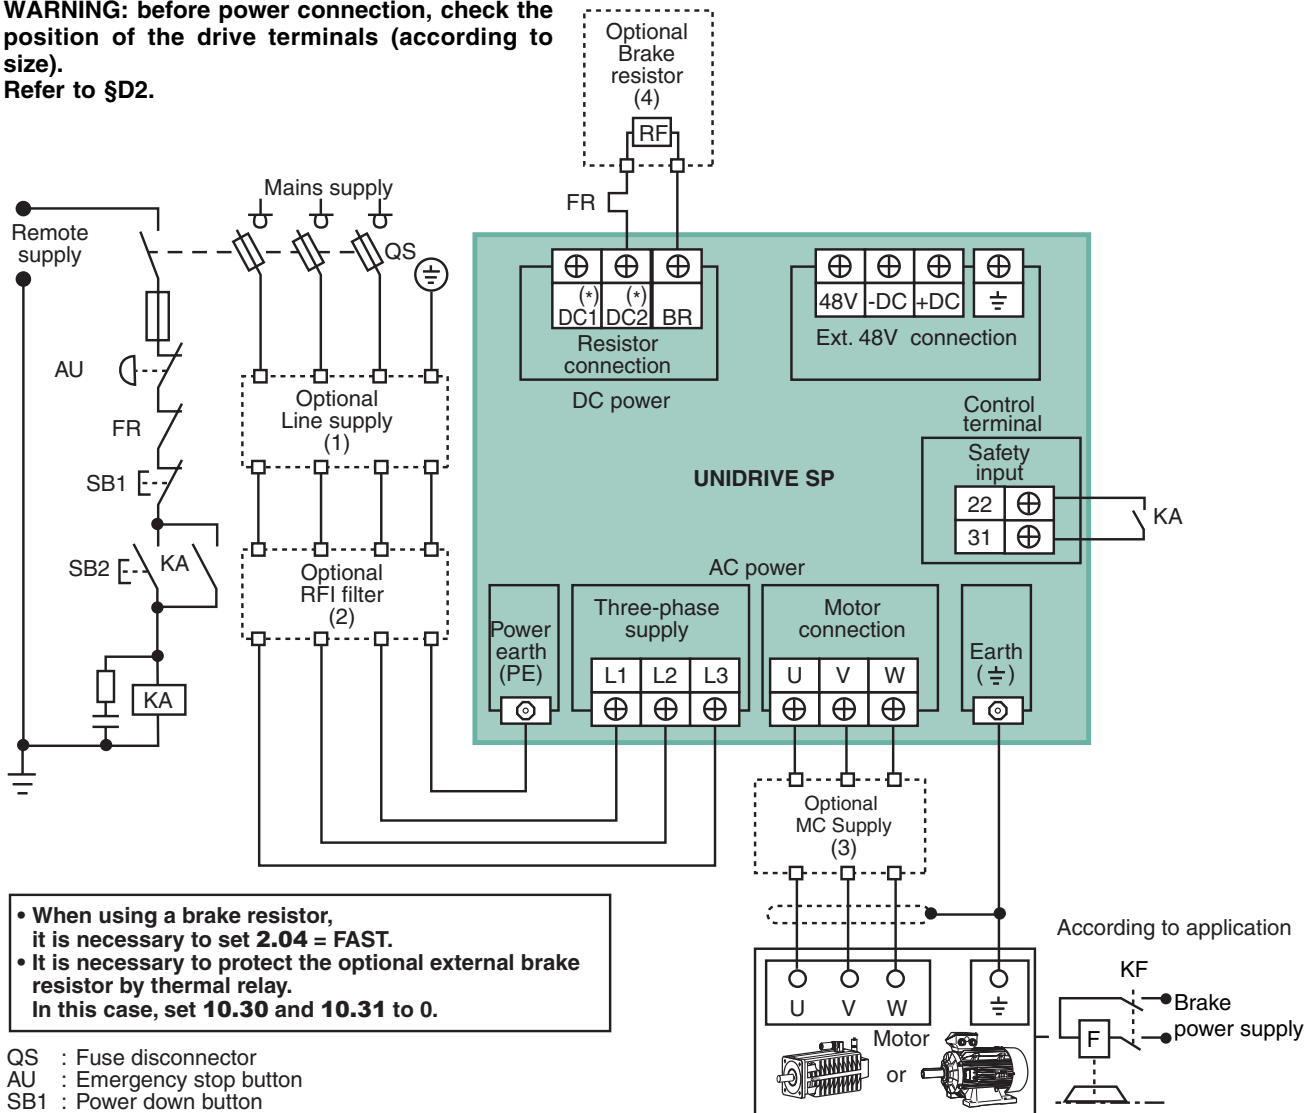

• When using a brake resistor, it is necessary to set **2.04 = FAST**.
 • It is necessary to protect the optional external brake resistor by thermal relay. In this case, set **10.30** and **10.31** to 0.

- QS : Fuse disconnecter
- AU : Emergency stop button
- SB1 : Power down button
- SB2 : Power up button
- KA : Remote relay
- FR : External brake resistor thermal relay (not necessary for heater built-in resistors)
- KF : Brake relay (refer to section H3.21 for brake management)

- (1) Line mains supply:
Option used to reduce the supply current harmonic amplitude and the transient interferences of the mains supply with the drive. Refer to section L7
- (2) " RFI " filter:
Option used to reduce the drive electromagnetic emissions and to comply with the EN 61800-3 standard in certain cases. Refer to section L3.
- (3) " MC " mains supply:
Option used to reduce the leakage currents as well as the drive interferences. Refer to section L5.
- (4) Brake resistor
Option used to disperse the active power returned by the motor on the drive continuous bus in case of a driving machine. Refer to section L8.

(*) For drives size 1, the DC1 terminal is replaced by -DC, and the DC2 terminal is replaced by + DC (there is no risk of confusion taking into account that there is only one continuous bus terminal for size 1).


UNIDRIVE SP

Power connection

D3.3 - Three-phase AC power supply according to the EN 954-1 safety standard - Category 2 or 3

D3.3.1 - Use of a special cable on the safety input

WARNING: before power connection, check the position of the drive terminals (according to size). Refer to §D2.

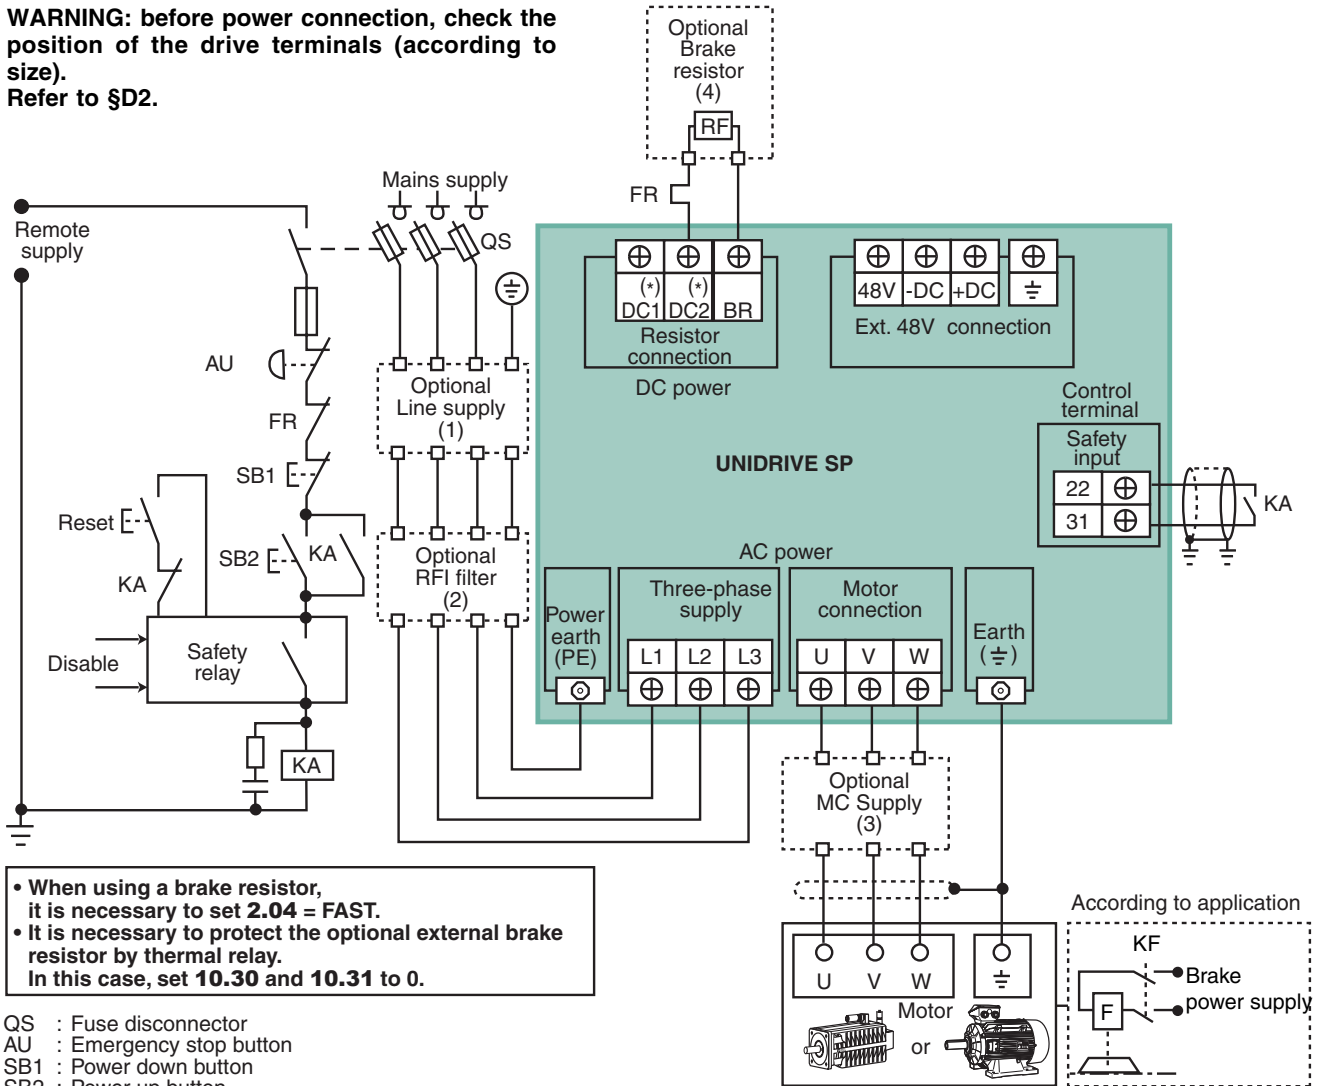

- When using a brake resistor, it is necessary to set 2.04 = FAST.
- It is necessary to protect the optional external brake resistor by thermal relay. In this case, set 10.30 and 10.31 to 0.

- QS : Fuse disconnector
- AU : Emergency stop button
- SB1 : Power down button
- SB2 : Power up button
- KA : Remote relay
- FR : External brake resistor thermal relay (not necessary for heater built-in resistors)
- KF : Brake relay

- (1) Line mains supply:
Option used to reduce the supply current harmonic amplitude and the transient interferences of the mains supply with the drive. Refer to section L7.
- (2) " RFI " filter:
Option used to reduce the drive electromagnetic emissions and to comply with the EN 61800-3 standard in certain cases. Refer to section L3.
- (3) " MC " mains supply:
Option used to reduce the leakage currents as well as the drive interferences. Refer to section L5.
- (4) Brake resistor
Option used to disperse the active power returned by the motor on the drive continuous bus in case of a driving machine. Refer to section L8.

WARNING: In this case, the cable used for the safety input connection must be isolated from other cables, either by introducing it into a metal or a separate pipe, or by using a special shielded cable.

(*) For drives size 1, the DC1 terminal is replaced by -DC, and the DC2 terminal is replaced by + DC (there is no risk of confusion taking into account that there is only one continuous bus terminal for sizes 1).


UNIDRIVE SP Power connection

D3.3.2 - Contactor use

In case a safety input cable cannot be used, add a contactor.

WARNING: before power connection, check the position of the drive terminals (according to size).

Refer to §D2.

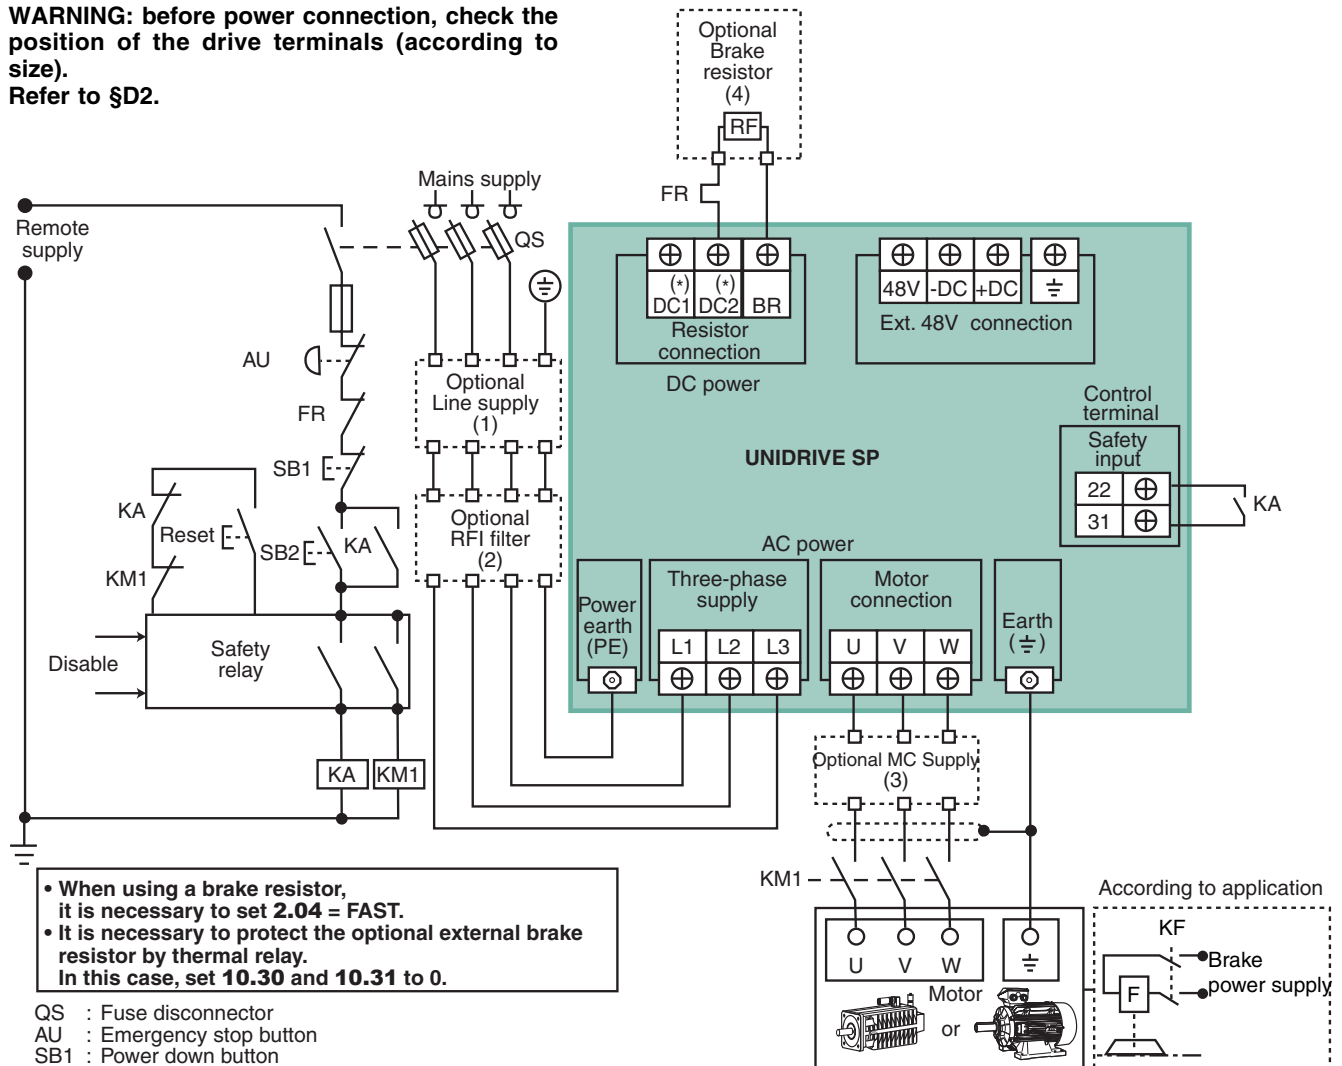

- QS : Fuse disconnect
 AU : Emergency stop button
 SB1 : Power down button
 SB2 : Power up button
 KA : Remote relay
 FR : External brake resistor thermal relay (not necessary for heater built-in resistors)
 KF : Brake relay

- (1) Line mains supply:
Option used to reduce the supply current harmonic amplitude and the transient interferences of the mains supply with the drive. Refer to section L7
- (2) " RFI " filter:
Option used to reduce the drive electromagnetic emissions and to comply with the EN 61800-3 standard in certain cases. Refer to section L3.
- (3) " MC " mains supply:
Option used to reduce the leakage currents as well as the drive interferences. Refer to section L5.
- (4) Brake resistor
Option used to disperse the active power returned by the motor on the drive continuous bus in case of a driving machine. Refer to section L8.

! • If a contactor is connected between the drive and the motor (recommended type: AC3), check that the drive is disabled when the contactor is activated or deactivated.

(*) For drives size 1, the DC1 terminal is replaced by -DC, and the DC2 terminal is replaced by + DC (there is no risk of confusion taking into account that there is only one continuous bus terminal for sizes 1).

UNIDRIVE SP Power connection

D4 - Cables and fuses

! It is the responsibility of the user to perform the UNIDRIVE SP connection and protection according to the legislation and the rules in force in the country of use. It is especially important for the size of cables, the fuse type and diameter, the earthing and grounding, the power down, the repairing, the insulation and protection against overcurrent.

• These tables are given for information only and they do not replace the existing standards.

• The diameters and characteristics correspond to a maximum overload. For reduced overload, refer to the corresponding motor current.

• Sizes 1 to 3

UNIDRIVE SP	Power supply						Motor								
	I _{rated} (Reduced overload) (A)	I _{max} (A)	Fuses		Cable section* & **		I _{sp} * (A)	Cable section* & **		Max. motor cable length (m)					
			IEC (gG) (A)	USA (A)	EN60204 (mm ²)	UL508C (AWG)		EN60204 (mm ²)	UL508C (AWG)	3kHz	4kHz	6kHz	8kHz	12kHz	16kHz
1.5TL	7.1	9.5	10		1.5	14	4.3	1	18	65					
2TL	9.2	11.3	12	15	1.5	14	5.8	1	16	100		75	50	37	
2.5TL	12.5	16.4	20		4	12	7.5	1	14	130		100	75	50	37
3.5TL	15.4	19.1	20		4	12	10.6	1.5	14	200	150	100	75	50	37
4.5TL	13.4	18.1	20		4	12	12.6	2.5	14	200	150	100	75	50	37
5.5TL	18.2	22.6	25		4	10	17	4	10	200	150	100	75	50	37
8TL	24.2	28.3	32	30	6	8	25	6	8	200	150	100	75	50	37
11TL	35.4	43.1	50	45	16	6	31	16	6	200	150	100	75	50	x
16TL	46.8	54.3	63	60	25	4	42	25	4	200	150	100	75	50	x
1.5T	4.1	4.8	6		1	18	2.1	1	22	65					
2T	5.1	5.8	6		1	16	3	1	20	100		75	50	37	
2.5T	6.8	7.4	8	10	1	16	4.2	1	18	130		100	75	50	37
3.5T	9.3	10.6	12	15	1.5	14	5.8	1	16	200	150	100	75	50	37
4.5T	10	11	12	15	1.5	14	7.6	1	14	200	150	100	75	50	37
5.5T	12.6	13.4	16	15	2.5	14	9.5	1.5	14	200	150	100	75	50	37
8T	15.7	17	20		4	12	13	2.5	14	200	150	100	75	50	37
11T	20.2	21.4	25		4	10	16.5	4	10	200	150	100	75	50	37
16T	26.6	27.6	32	30	6	8	25	6	8	200	150	100	75	50	37
22T	34.2	36.2	40		10	6	32	10	6	200	150	100	75	50	37
27T	40.2	42.7	50	45	16	6	40	16	6	200	150	100	75	50	37
33T	51.3	53.5	63	60	25	4	46	25	4	200	150	100	75	50	x
3.5TM	5	6.7	8	10	1	16	4.1	1	18	200	150	100	75	50	x
4.5TM	6	8.2	10		1	16	5.4	1	16	200	150	100	75	50	x
5.5TM	7.8	11.1	12	15	1.5	14	6.1	1	14	200	150	100	75	50	x
8TM	9.9	14.4	16	15	2.5	14	9.5	1.5	14	200	150	100	75	50	x
11TM	13.8	18.1	20		4	12	12	2.5	14	200	150	100	75	50	x
16TM	18.2	22.2	25		4	10	18	4	10	200	150	100	75	50	x
22TM	22.2	26	32	30	6	8	22	6	8	200	150	100	75	50	x

• Sizes 4 to 6

UNIDRIVE SP	Mains supply						Motor									
	I _{rated} (Reduced overload) (A)	I _{max} (A)	Option 1: fuse IEC (gR) (A)	Option 2 : series semiconductor with HRC fuse or circuit breaker		Cable section * & **		I _{sp} * (A)	Cable section * & **		Max. motor cable length (m)					
				HRC UL (clas. J) IEC (gG) (A)	Semi- conductor IEC (aR) (A)	EN60204 (mm ²)	UL508C (AWG)		EN60204 (mm ²)	UL508C (AWG)	3kHz	4kHz	6kHz	8kHz	12kHz	16kHz
22TL	62.1	68.9	90	90	160	25	3	56	25	3	250	185	125	90	x	x
27TL	72.1	78.1	100	100	160	35	3	68	35	3						
33TL	94.5	99.9	125	125	200	50	1	80	70	1						
40T	61.2	62.3	80	80	160	25	3	60	25	3	250	185	125	90	x	x
50T	76.3	79.6	110	100	200	35	2	74	35	2						
60T	94.1	97.2	125	125	200	50	1	96	70	1						
75T	125	131	175	160	200	95	2/0	124	95	2/0						
100T	150	156	225	200	250	120	4/0	139	120	4/0						
120T	205.8	214.9	250			2 x 70	2 x 2/0	180	2 x 70	2 x 2/0	250	185	125	x	x	x
150T	247.2	257.9	315			2 x 120	2 x 4/0	210	2 x 120	2 x 4/0	250	185	125	x	x	x
22TH	23	26.5	63	32	125	4	10	18	4	10	250	185	125	90	x	x
27TH	26.1	28.8	63	35	125	6	8	22	6	8						
33TH	32.9	35.1	63	50	125	10	8	27	10	8						
40TH	39	41	63	50	125	16	6	36	16	6						
50TH	46.2	47.9	63	63	125	16	6	43	16	6						
60TH	55.2	56.9	80	80	125	25	4	52	25	4						
75TH	76	83	100	90	160	35	2	62	35	2						
100TH	89	95	110	125	160	50	1	84	50	1						
120TH	119	123.1	200			2 x 50	2 x 1	100	2 x 50	2 x 1						
150TH	140	146.3	200			2 x 50	2 x 1	125	2 x 50	2 x 1						

* and **: see the following page.

UNIDRIVE SP

Power connection

* The permanent output current value and the motor cable sections are given for information only. Knowing that the motor rated current used by the drive varies according to the cutout frequency, the temperature and the overload, refer to section B3.3 for more details.

** The pre-established sections are given for single-wire cable with a max. length of 10m, and for all other lengths take into consideration the line drops due to length.

Note:

- The supply current value is a typical value depending on the source impedance. The higher the impedance, the lower the current.
- In factory setting, the cutout frequency is 3 kHz (except for the Servo operating mode: 6 kHz).
- In order to determine the earth cable section (according to the EN 60204 standard):
 - phase cable section $\leq 16 \text{ mm}^2$: use an earth cable of the same section,
 - $16 \text{ mm}^2 < \text{phase cable section} \leq 35 \text{ mm}^2$: the earth cable section is 16 mm^2 ,
 - phase cable section $> 35 \text{ mm}^2$: the earth cable section must

be half of the phase cable section (choose the equal or higher existing section).

- Circuit breakers can replace the class gG fuses. They must be of the same C type and size as the fuses (for sizes 4 to 6, they must be serially connected to class aR fuses).

WARNING:

- In order to limit the leakage current it is recommended to use cables with a capacity lower than 260pF/m. If cables of higher capacity are required, reduce to half the maximum length of motor cables specified on the above page.

D5 - Special applications


D5.1 - Motor Insulation

When one of the following cases:

- the power voltage is higher than 500 Vac or 670Vdc,
 - the 400V drive is used with highly frequent brake applications,
- is associated to a motor cable length exceeding 10m, it is recommended to use a motor adapted to frequency variation (LSMV). These motors insulation may resist to repeated voltage peaks.

With a standard motor, it is recommended to install an output mains supply (FP mains supply type) with an approximately 2% reactance.

D5.2 - Motor parallel operation in U/F mode

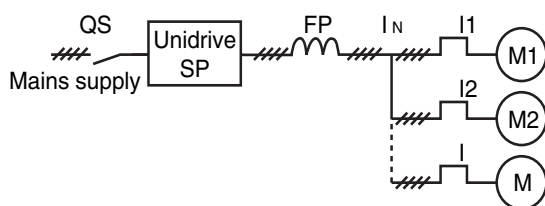

The drive control mode must be the open loop mode (**0.48** = Open.LP(1)) U/F control (**0.07** = Fd(2) or SrE(5)).

The total length of motor cables (M1 cable length + M2 cable length + ...) must be shorter than the maximum length specified in D4 section according to the drive caliber and the used cutout frequency.

It is possible to supply several motors of different powers with a single drive. Each motor must be protected by a thermal relay.

Determination of the drive caliber:

$$I_N \text{ drive} > I_1 + I_2 + \dots + I$$

In order to avoid accidental starting of thermal relays, a specific supply of the Low Loss type may be proposed as an option (see

section L). The determination of this supply depends on the drive caliber and the cable length between the drive and the motor. Contact LEROY-SOMER.

D5.3 - Parallel operation of drives by continuous bus

• General detail

The parallel coupling of several drives by continuous bus is used to limit the number and power of brake resistors. You can even remove the brake resistors if the amount of energy to restore is lower than the motion energy.

This mounting is also useful in case the mains supply is missing if you want to stop several synchronised motors loaded by different inertias.

If the drives have the same calibers or close calibers, they can be powered up simultaneously.


If the calibers are highly different, in order to avoid that the lowest caliber drive load the entire bus, you must either delay its power up (1 second), or delay the bus coupling by a bus contactor which switches off 1 second after power up.

In order to provide a good distribution of supply currents at the drive input, it is recommended to serially install with each drive power supply a line inductance adapted to the drive caliber (refer to section L7 for details).

In addition, each modulator continuous bus shall be fitted with fuses (see section D4).

UNIDRIVE SP Power connection

• Example of connection diagram

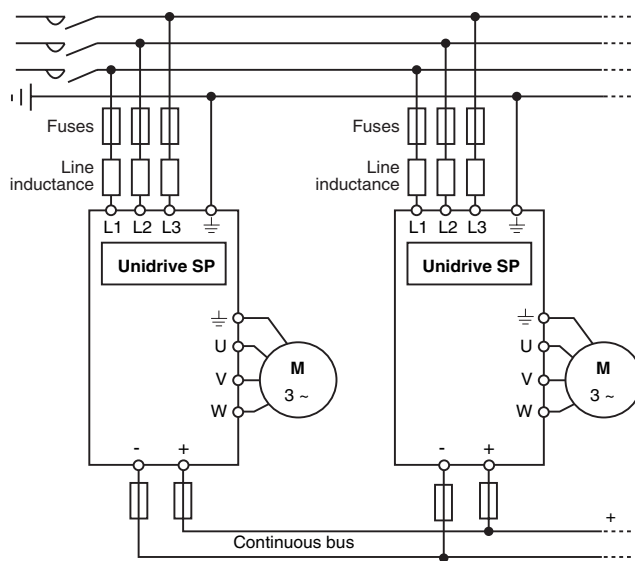

D6 - 48V safety supply

The Unidrive SP gives the possibility to connect the power to a 48V DC safety supply.

This operation mode can be used only at the end of the motion following a power supply loss. In this case, the available voltage being much lower than the rated operation voltage, the system performances are limited to the following values.

- Asynchronous motor: constant torque up to 4 Hz and defluxed motor afterwards.

- Servo motor: the maximum motor speed depends on its Ke factor.

Example:

for a 3000 min⁻¹ motor with 98V/kmin⁻¹ Ke, the maximum speed shall be 347 min⁻¹.

Note: the safety supply voltage level must be set at *. The start level in overvoltage default corresponds to 1.45 x **6.46** (V), and the brake transistor driving voltage corresponds to 1.325 x **6.46** (V).

• The operation below 48V DC implies strict observance of cabling and sequencing rules. For additional information, contact the LEROY-SOMER assistant.

• Characteristics

Characteristics	Level
Minimum operating continuous voltage	36 V
Operating rated voltage	Size 1 : 48 V Sizes 2 to 6 : 48 to 72V
Minimum start supply voltage	40 V
Maximum brake transistor driving voltage	63.6 V
Maximum overvoltage default threshold	69.6 V
Current	2 x I _{sp} with maximum overload

D7 - UL compliance

D7.1 - Mains supply

The drive can be built in an installation which can supply maximum 5000A rms for sizes 1 to 3, 10000A rms for sizes 4 and 5 and 15000A rms for size 6, under maximum 264V AC rms for 200V (TL) drives and maximum 528V AC rms for 400V (T) drives, or maximum 632V AC for 575V (TM) and 690V (TH) drives.

D7.2 - Cables

Use only class 1 copper cables 60/75°C (140/167° F).

D7.3 - Fuses

The UL compliance is observed if the fuses are rapid and UL listed (class DC up to 30A, and class J below) and the symmetric short-circuit current does not exceed 5 kA up to calibers 16TL, 33T and 22TM.

Example of rapid fuses:


- Bussman Limitron KTK,
- Gould Amp - trap ATM.

Note: in case of a circuit breaker in stead of fuses, the UL compliance is no longer observed.

UNIDRIVE SP Power connection

D8 - Recommendations for CEM compliance

D8.1 - Diagram

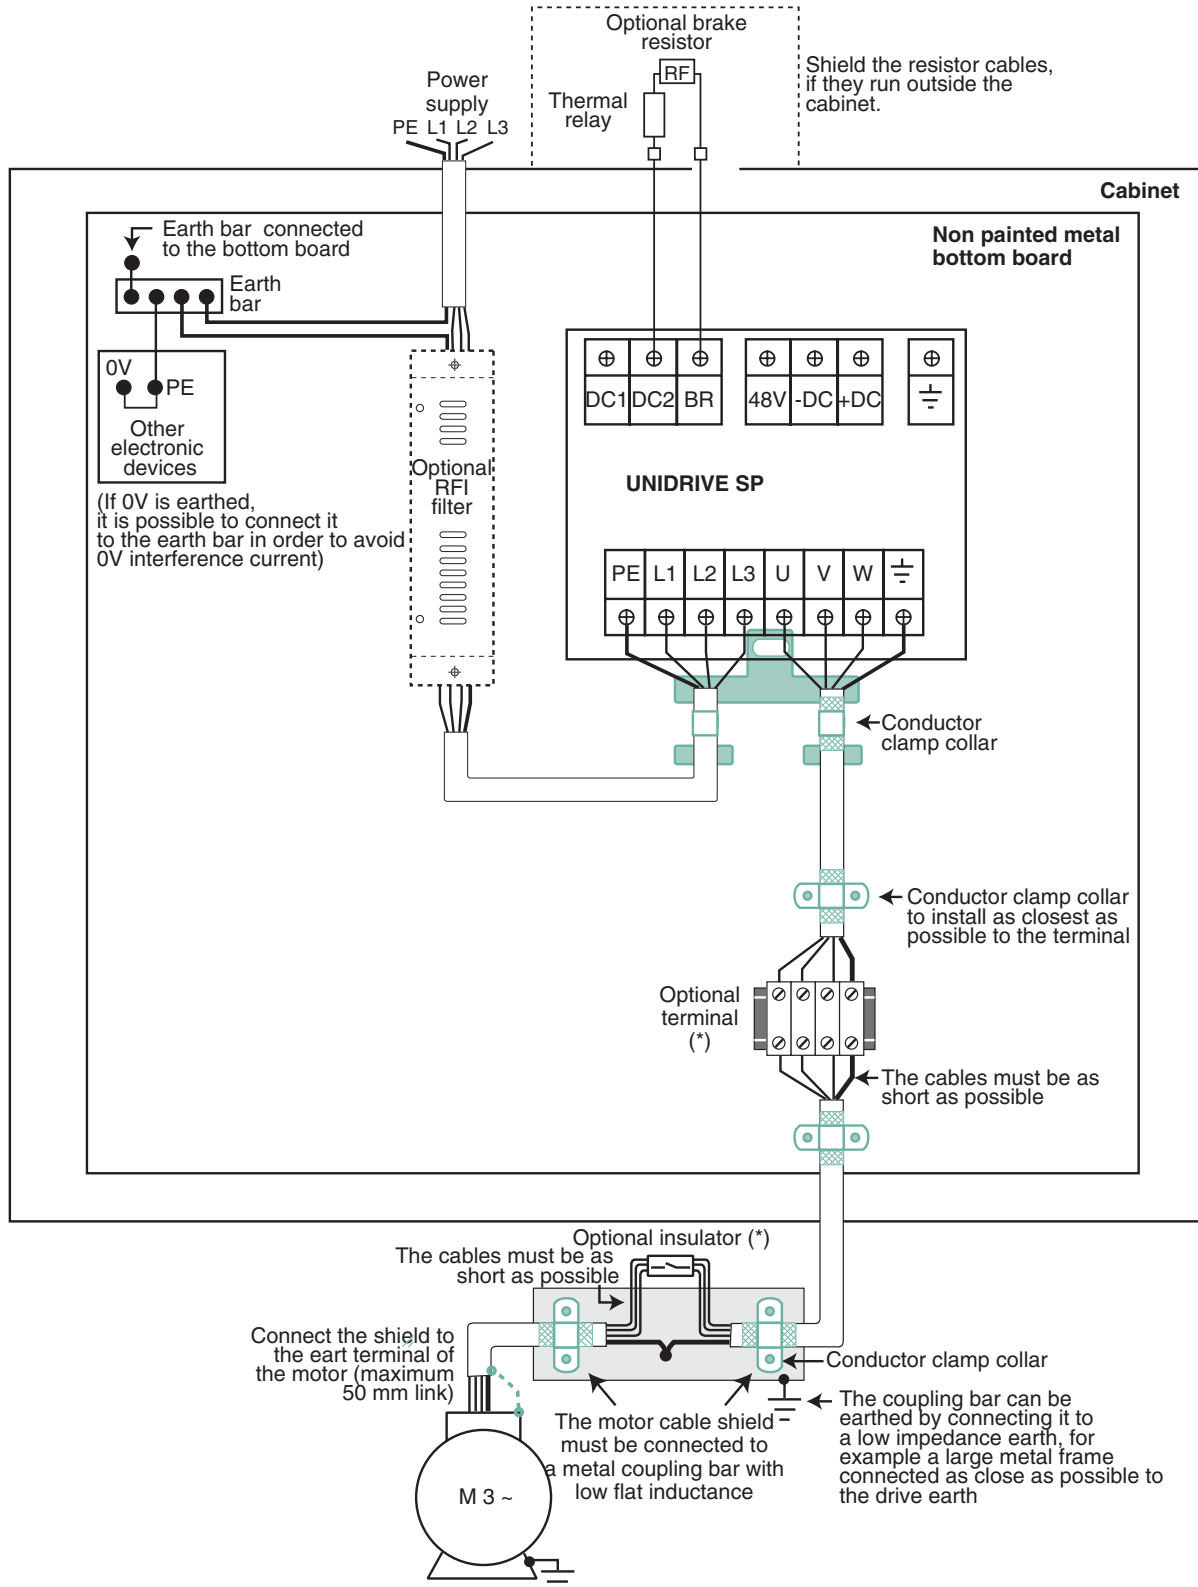

(*) It is recommended to use an uninterrupted shielded motor cable. Nevertheless, if a motor cable must be connected to a drive cabinet built-in terminal or when a motor insulator must be installed, check that the shields are continuous as specified above.

UNIDRIVE SP Power connection

D8.2 - Recommendations

- ⚠ The earth loop must comply with the recommendations of the local security regulation.
- The earth connections must be tested and inspected periodically.


WARNING:

- Bare the wires at grip level so as the shielding be in contact.
- Threaded screws must be used to fix the drive on the bottom sheet in order to obtain a direct electric connection to the earth.
- Do not place sensitive circuits (not shielded) at less than 300 mm around the drive, the motor cables, the RFI filter cable (optional) and the brake resistor cables (optional).
- Put the supply cables and the earth cables at least 100 mm away from the drive power module and the motor cable (except for the RFI filter connection cables of the drive).


The power earth (PE) must be connected to an earth bar (or a low impedance earth terminal) in the cabinet. This bar must correspond to a common bar of all the cabinet components. In addition, if the power earth (PE) connection is made by separated cable, it must run in parallel with the other mains cables in the cabinet (reduces the risk of emissions).

D8.3 - Details on the shield supports (power)


- Size 1

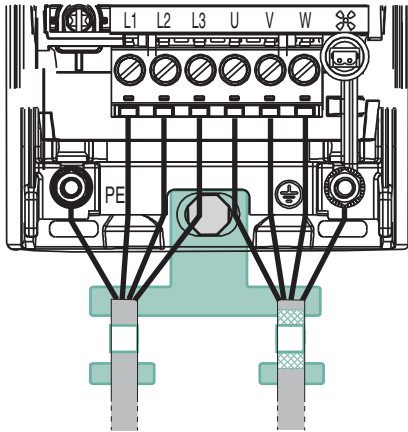

- Size 2

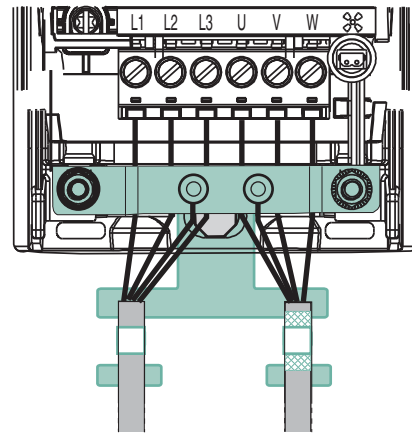

- Size 3

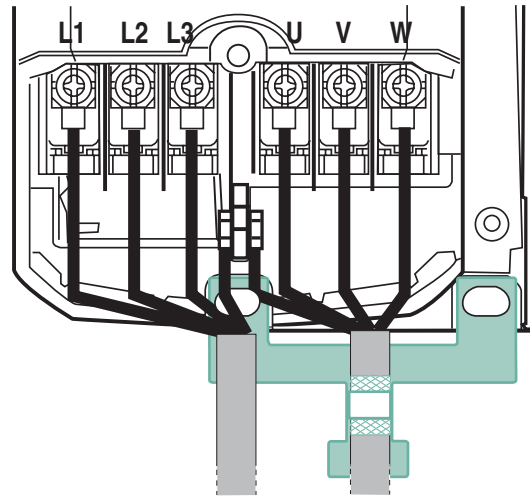

D9 - Supply types

The drives can be used in all neuter regime, such as TN-S, TN-C-S, TT, IT.

The drives have been conceived to be used with category III supplies or less, according to the IEC 60664-1 standard. In case of a higher category supply, provide adapted overvoltage devices before the drive.

- ⚠ For size 3 and higher, when the drive is used with an IT supply, the internal RFI filter must be disconnected, except if an additional external filter or a motor earth protection is used.

UNIDRIVE SP

Power connection

Notes

D

UNIDRIVE SP Control connections

Contents

E1 - Warning	3
E2 - Location and characteristics	3
E2.1 - Drive terminal blocks	3
E2.1.1 - Location.....	3
E2.1.2 - Terminals characteristics.....	3
E2.2 - SM-EDL ANA module terminal block	5
E2.2.1 - Terminal blocks location.....	5
E2.2.2 - Terminal blocks characteristics	5
E3 - Cabling diagram	6
E3.1 - Drive connection and SM-EDL ANA module.....	6
E3.2 - External power supply connection +24V	6
E3.3 - Connection in negative logic	6
E3.4 - Use of a field bus.....	6
E4 - CEM electromagnetic compatibility	7
E4.1 - Precautions for control cables outside the cabinet.....	7
E4.2 - Overvoltage immunity.....	7



UNIDRIVE SP Control connections

Notes



UNIDRIVE SP Control connections

E1 - Warning

! • For the factory settings, UNIDRIVE SP is configured in positive logic. Associating a variable speed drive with a different control logic, may cause inadvertent starting of the motor.

• In the variable speed drive, the control circuits are insulated from the power circuits by a simple insulation (CEI 664-1). The installer must make sure that the external control circuits are insulated against any human contact.


• If the control circuits must be connected to circuits complying with the SELV safety requirements, a further insulation must be inserted in order to maintain the SELV classification.

• The software inserted in the SM-EDL ANA module automatically configures the drive and the modules according to "Winding / Unwinding with analogue references" application requirements.

E2 - Location and characteristics

E2.1 - Drive terminal blocks

E2.1.1 - Location

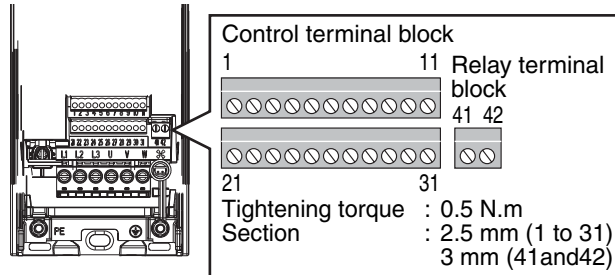

E2.1.2 - Terminals characteristics

1	Common 0V
2	+24V for external power supply of the drive control circuit
Rated voltage	+24 Vdc
Minimum operating voltage	+19.2 Vdc
Maximum operating voltage	+30 Vdc
Minimum starting power supply voltage	+21.6 Vdc
Recommended power supply	60 W, 24Vdc rated
Recommended fuse	4A Gg, 50Vdc
<p>• This 24V power supply may be used as a failsafe supply which protects against overload, for example, during the simultaneous use of many SM modules (SM-Universal-Encoder Plus module, SM-Encoder Plus module and SM-I/O Plus module). If the internal 24V is overloaded, the drive defaults with "PS.24V".</p> <p>• It may be used as a failsafe supply of the control card, in case of loss of the mains supply, that allows the programmable modules (with or without field bus) or the encoder module, to continue operating.</p> <p>For the UL conformity, the external power supply must be class 2 UL.</p>	
3	Common 0V
4	+10V analogue internal source
Voltage tolerance	± 1 %
Rated output current	10 mA
Protection	Overload and thermal (trip at 30mA)

5	Analogue input 1 of accuracy (+)	Line speed image
6	Analogue input 1 of accuracy (-)	
Characteristics		Differential bipolar inputs connected to voltage (operation in common mode: connect terminals 6 and 3)
Resolution		16 bits plus sign
Maximum offset		70 µV
Sampling		250 µs for a speed reference in closed loop, 4ms for other functions
Full scale voltage range		±9.8 V ±1 %
Maximum voltage in common mode		±13 V/0V
Maximum absolute voltage		±36 V/0V
Input impedance		100kΩ, ± 1 %

7	Analogue input 2 - Tension reference	
Characteristics		Analogue bipolar voltage (common mode) or unipolar current
Resolution		10 bits + sign
Sampling		250µs for a speed reference connected to voltage, or a torque reference in closed loop, 4ms for other functions
Voltage input		
Full scale voltage range		± 9.8V ±3 %
Maximum offset		± 30 mV
Maximum absolute voltage		± 36Vdc/0V
Input impedance		>100 kΩ
Current input		
Current range		0-20mA ±5 % 20-0mA ±5 % 4-20mA ±5 % 20-4mA ±5 %
Maximum offset		250 µA
Maximum absolute voltage		- 36 Vmax
Maximum absolute current		70 mA
Input impedance		≤ 200 Ω at 20 mA

UNIDRIVE SP

Control connections

8	Analogue input 3	Motor thermal probe
Characteristics	Analogue bipolar voltage (common mode), unipolar current or motor probe input	
Resolution	10 bits + sign	
Sampling	250µs for a speed reference connected to voltage, 4ms for another function	
Voltage input		
Full scale voltage range	± 9.8V ±3 %	
Maximum offset	± 30 mV	
Maximum absolute voltage	± 36 Vdc/0V	
Input impedance	>100 kΩ	
Current input		
Current range	0-20mA ±5 % 20-0mA ±5 % 4-20mA ±5 % 20-4mA ±5 %	
Maximum offset	250 µA	
Maximum absolute voltage	- 36 Vmax	
Maximum absolute current	70 mA	
Input impedance	≤ 200 Ω at 20 mA	
Motor probe input		
Internal voltage	< 5V	
Default start threshold	3.3kΩ ± 10 %	
Drive reset threshold	1.8kΩ ± 10 %	
Short-circuit detection	50Ω ± 30 %	
CAUTION : Terminal 8 is internally connected to pin 15 of the connector HD-15. When the motor probe is connected to pin 15, terminal 8 is not available anymore.		

9	Analogue output 1	Allocatable
10	Analogue output 2	
Characteristics	Analogue bipolar voltage (common mode) or unipolar current	
Resolution	10 bits (+ sign under voltage)	
Refresh	4ms	
Sampling	250 µs if the output has as source 4.02 or 4.17 or 3.02 or 5.03 in closed loop 4 ms in the other cases	
Voltage output		
Voltage range	± 9.6Vdc ±5 %, ±10mA max	
Maximum offset	100 mV	
Load resistor	1 kΩ minimum	
Protection	Short-circuit (35mA maxi)	
Current output		
Current ranges	0-20mA ±10 % 4-20mA ±10 %	
Maximum offset	600 µA	
Open circuit maximum voltage	+15V	
Maximum load resistor	500Ω	

11	Common 0V
21	Common 0V

22	+24V internal source
Output current	200mA (including all digital inputs/ outputs)
Overload current	240mA (including all digital inputs/ outputs)
Protection	Current limitation and stop

23	Common 0V
-----------	-----------

24	Digital inputs or outputs	Radius initialisation
25		Drive reset
26		Reference selection pulse input
Characteristics	Digital input in positive or negative logic, or outputs in negative logic open commutator or push-pull	
Threshold	Positive logic: 0 : < 5V 1 : >15V Negative logic : 1 : < 5V 0 : > 15V	
Voltage range	0 to +24V	
Sampling/ Refresh	200µs if the output has as source 6.35 or 6.36 , 4ms in the other cases	
Digital input		
Maximum absolute voltage	±30V	
Load	> 2mA at 15Vdc	
Input threshold	10.0V ± 0.8V	
Digital output		
Maximum output current	200mA (totally, all digital outputs + terminal 22)	
Overload current	240mA (totally, all digital outputs + terminal 22)	

27	Digital inputs	Allocatable
28		Run reverse /Stop
29		Allocatable
Characteristics	Negative or positive logic inputs	
Thresholds	Positive logic: 0 : < 5V 1 : >15V Negative logic : 1 : < 5V 0 : > 15V	
Sampling / Refresh	200µs if the output has as source 6.35 or 6.36 , 4ms in the other cases	
Voltage range	0 to +24V	
Maximum absolute voltage	±30V	
Load	> 2mA at 15Vdc	
Input threshold	10.0V ± 0.8V	

30	Common 0V
-----------	-----------

UNIDRIVE SP

Control connections

31	Safety input/ variable speed drive unlocking (see section D3)
Characteristics	Positive logic input
Sampling period	Drive disable (Hardware) : < 100 µs Drive enable (software) : 4 ms
Voltage range	0 to +24V
Maximum absolute voltage	±30V
Thresholds	18.5V ± 0.5V


41	Relay output	Default relay
42		
Characteristics	240Vac	
Refresh period	4ms	
Maximum contact current	<ul style="list-style-type: none"> • 2A ac 240V • 4A dc 30V resistive load • 0,5A dc 30V inductive load (L/R = 40ms) 	
Minimum recommended contact	12V/100mA	
Configuration	Closed contact : powered up and operating variable speed drive Open contact : powered down or stopped drive	

Note :

- According to the safety standard EN954-1 for category 2 or 3, the safety input must be isolated from other cables, either by running it into the metallic duct , or by being cabled by means of a shielded cable.
- The digital circuits cables will be shielded or not, according to the variable speed drive environment and of the communication interfaces used (see section E3).

E2.2 - SM-EDL ANA module terminal block

E2.2.1 - Terminal block location

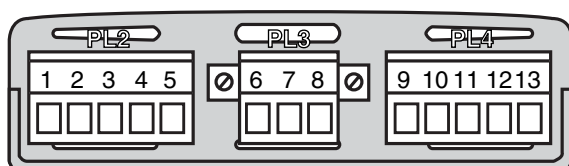

E2.2.2 - Terminal blocks characteristics

1	0V SC
0V connection for the RS485 port	
2	RX\
Negative reception line RS485 (input)	
3	RX
Positive reception line RS485 (input)	
4	TX\
Negative transmission line RS485 (output)	
5	TX
Positive transmission line RS485 (output)	

6	CTNet A
Negative CTNet data line	
7	CTNet Shielding
Shielding connection for CTNet	
8	CTNet B
CTNet (positive) data line	


9	0V	
0V connection for the digital inputs/outputs		
10	Digital inputs	Tension
11		Run forward/ Stop
Characteristics	Positive digital inputs	
Refresh	250 µs	
Voltage range	0 to +24V	
12	Digital outputs	End of coil information
13		End of coil stop
Characteristics	Positive digital outputs	
Refresh	250 µs	
Voltage range	0 to +24V	
Maximum load current	200 mA	

Note : If the total consumption exceeds 240mA to 24V, it is then necessary to use an external power supply +24V, available to terminals 1 and 2 of the variable speed drive control terminal block.


UNIDRIVE SP Control connections

E3 - Cabling diagrams

E3.1 - Variable speed drive connection and SM-EDL ANA module

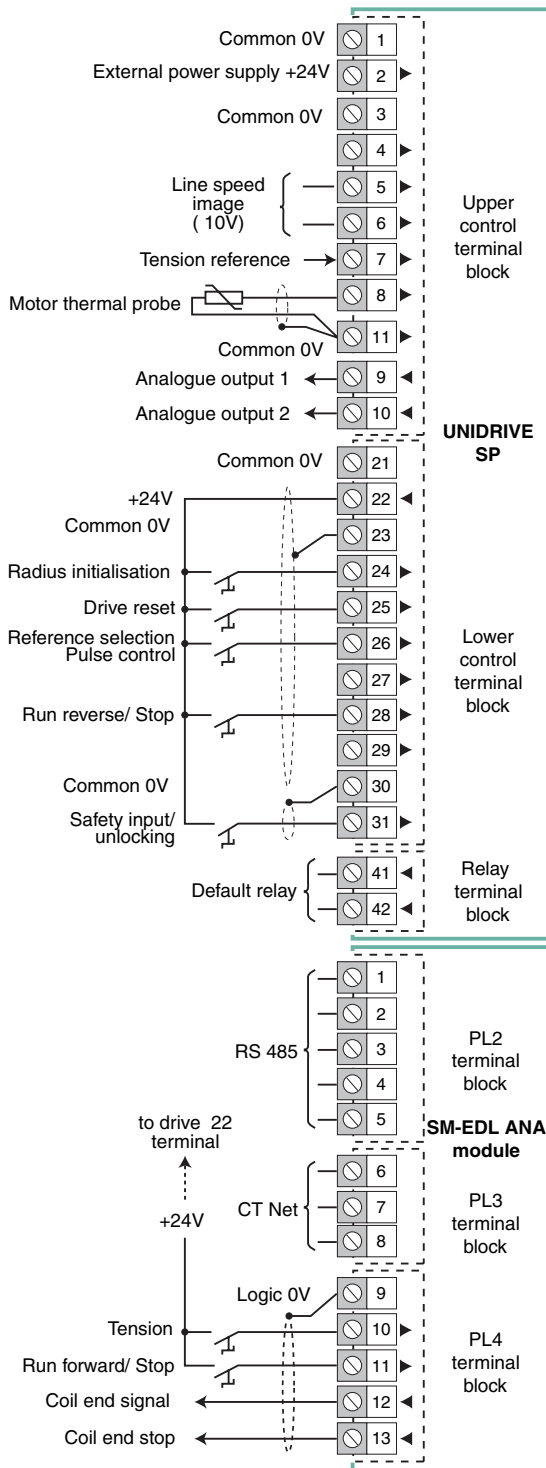

E3.2 - External mains supply connection +24V

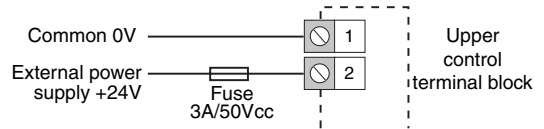

E3.3 - Connection in negative logic

For negative logic, connect the commons to 0V (except the safety input).

Note : In order to configure the variable speed drive in negative logic, modify the parameter setting (see section H, menu 8).

⚠ For the factory settings, UNIDRIVE SP is configured in positive logic. Associating a variable speed drive with a different control logic, may cause inadvertant motor starting.

 
E3.4 - Field bus use

When a SM-Field bus module is used (SM-PROFIBUS DP, SM-DeviceNet, SM-INTERBUS or SM-CANopen), see section I for the connection specific to the field bus, available on CD Rom delivered together with the variable speed drive (documentation).

CAUTION :

If the motor probe is connected to pin 15 of the connector HD-15 (see encoder connection section F), terminal 8 of the variable speed drive is no more available.

Legend :



UNIDRIVE SP Control connections


E4 - CEM electromagnetic compatibility

E4.1 - Precautions for control cables outside the cabinet


If the control cables must be run outside the cabinet, use shielded cables, and connect the shielding to the variable speed drive shielding support.

• Shielding support installation (control)

Screw the support on the 2 earth terminals.

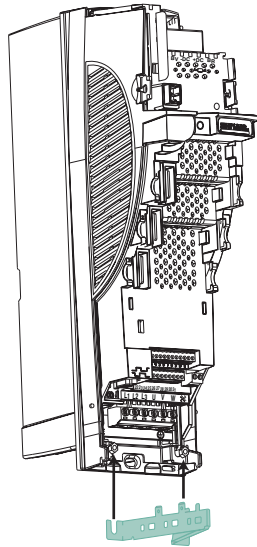

• Shielding connection

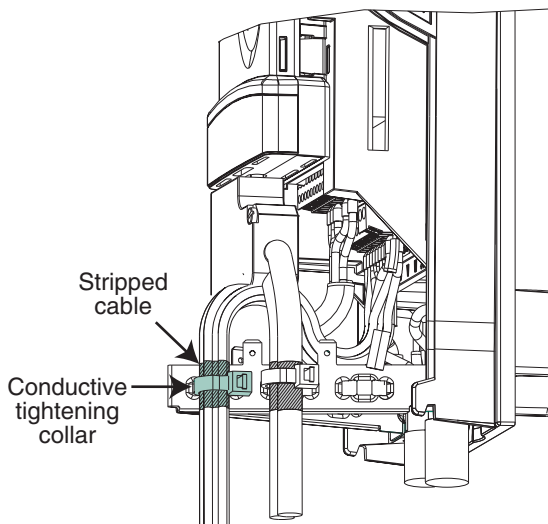

E4.2 - Immunity to overvoltage


Immunity to overvoltage of the control circuits or high length of cables and connection outside a building.

The different input and output circuits of the variable speed drive are in compliance with the overvoltage standard EN61000-6-2 (1kV).


There are exceptional cases, when the installation may be exposed to overvoltage peaks that exceed the levels established by the standard. This may be the case of lightning or of earth faults associated with high length of cables (>30 m). In order to limit the risks of damage of the variable speed drive, the following precautions may be taken into account:

- Galvanic isolation of the inputs/ outputs. In this case, make sure that the 0V is not connected to earth, and avoid the loops,
- double the cable shielding and use an earth wire of 10mm² minimum. The cable shielding and the earth wire must be connected together at each end and they must be connected to the ground by the shortest possible connection. This method allows the high currents to pass through the earth wire, rather than through the shielding,
- Increase the protection of the digital and analogue inputs/ outputs by adding a zener diode or a peak limiter.

Suppression of the unipolar digital Inputs/ Outputs overvoltage

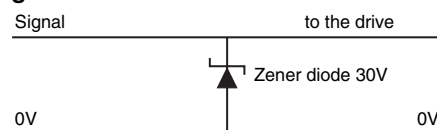

Suppression of the bipolar analogue Inputs/ Outputs overvoltage

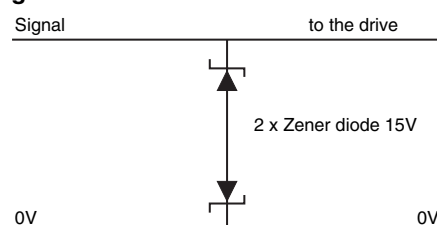

These circuits are available in modules (rail mounting), for ex. at Phoenix Contact (unipolar : TT UKK5 D/24 DC, bipolar: TT UKK5 D/24 AC).

These circuits are not fit for encoder signals or for fast digital data networks, because the diodes may affect the signal. Most of the encoders have a galvanic isolation between the motor casing and the encoder circuit, and in this case, no precaution is necessary. For data networks, follow the recommendations specific to the network.

If a digital output is subject to high overvoltage, the variable speed drive defaults to "O.Ld1".

UNIDRIVE SP Control connections

Notes



UNIDRIVE SP

Encoder connections

Contents

F1 - Incremental encoders	3
F2 - Other encoders.....	4
F3 - Coder input / output characteristics	5
F4 - CEM recommendations for encoder cabling	6



UNIDRIVE SP

Encoder connections

Notes




UNIDRIVE SP Encoder connections

F1 - Incremental encoders

• Drive side



HD-15 Ref.	Mode		
	□	□ (1)	■
1	-	B or F	A or F
2	-	B\ or F\	A\ or F\
3	-	A or D or R	B or D or R
4	-	A\ or D\ or R	B\ or D\ or R\
5	-	C or O or Z	
6	-	C\ or O\ or Z\	
7	A _{out} or F _{out}	-	U
8	A _{out} \ or F _{out} \	-	U\
9	B _{out} or D _{out}	-	V
10	B _{out} \ or D _{out} \	-	V\
11	-	-	W
12	-	-	W\
13	-	+5V or +8V or +15V	
14	-	0V	
15	-	Motor thermal probe (3) WARNING: Pin 15 is internally connected to terminal 8 of the control terminal	

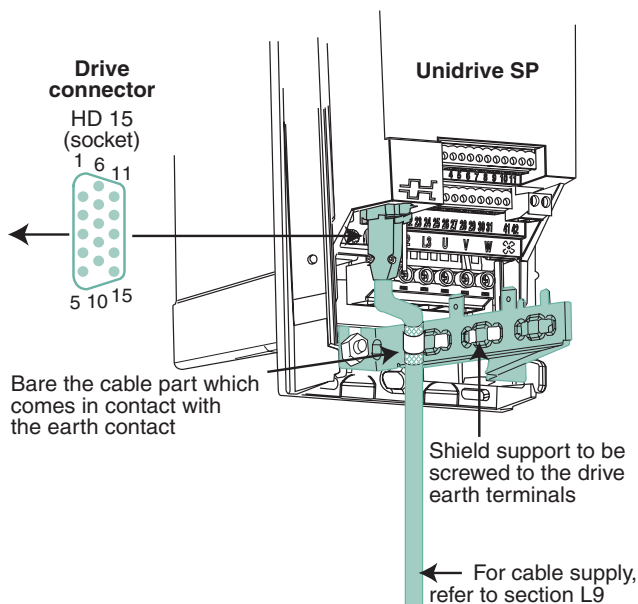

• Motor side (ex.: quadrature encoder)

17 pin connector on encoder side (plug)	
Ref.	Designation
1	Motor thermal probe (2)
2	-
3	U
4	U\
5	V
6	V\
7	W
8	W\
9	A
10	C or O or Z
11	C\ or O\ or Z\
12	A\
13	B
14	B\
15	+5V or +8V or +15V
16	0V
17	Shield (3)

12 pin connector on encoder side (plug)	
Ref.	Designation
1	0V
2	+5V or +8V or +12V
3	A
4	B
5	C or O or Z
6	A\
7	B\
8	C\ or O\ or Z\
9	-
10	-
11	Shield (3)
12	-

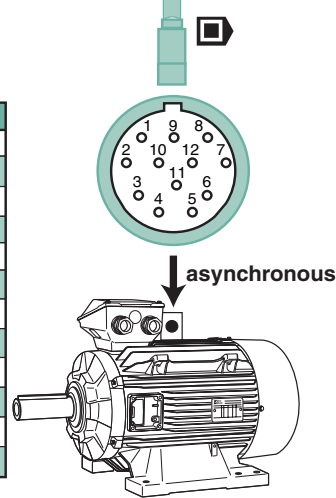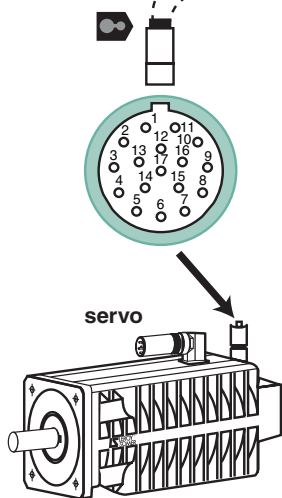

Note: in order to facilitate the encoder connection, a INTERCOD 15 interface is proposed as option (see section L10).

⚠ Connect and disconnect the powered down drive encoder plug.










WARNING: Supplying an encoder with overvoltage can damage it. Use the quick putting into service or refer to menu 3 section H.

- (1) Certain types of auto-ventilated asynchronous motors with quadrature encoder of the LEROY-SOMER range (LS or LSMV motors) have a slightly different connection. Starting with the 160M, L or LU and 180MT types, you must connect the B path to terminal 2, and B\ path to terminal 1 of HD-15 drive connector, OR cross the 2 motor phases.
- (2) In order to validate the probe control, change parameter **7.15**. Refer to section H, menu 7. When the motor thermal probe is not connected to the coder connector but to the motor terminal box, connect the probe to terminal 8 of the drive control terminal block.
- (3) Depending on the encoder supplier, the shielding may not be as indicated in the table. If a shielding terminal is not available, connect the shield at 360 at connector level.

UNIDRIVE SP Encoder connections

F2 - Other encoders

• Drive connections

HD-15 pins	All encoders	Encoders				
		SinCos	SinCos with U, V, W path	SinCos with Hiperface link (*)	SinCos with EnDat or SSI link	EnDat or SSI
		 and 	 and 	 and 	 and 	
1	-	Cos		Cos	Cos	-
2	-	CosRef		CosRef	CosRef	-
3	-	Sin		Sin	Sin	-
4	-	SinRef		SinRef	SinRef	-
5	-	-	C or O or Z	Data	Data	Data
6	-	-	C\ or O\ or Z\	Data\	Data\	Data\
7	A _{out} , F _{out}	-	U	-	-	-
8	A _{out} \, F _{out} \	-	U\	-	-	-
9	B _{out} , D _{out}	-	V	-	-	-
10	B _{out} \, D _{out} \	-	V\	-	-	-
11	-	-	W	-	Clock _{out}	Clock _{out}
12	-	-	W\	-	Clock _{out} \	Clock _{out} \
13	+5V or +8V or +15V					
14	0V					
15	Motor thermal probe (in order to validate probe control, refer to section H) WARNING: Pin 15 is internally connected to terminal 8 of the control terminal					

Note: in order to facilitate the encoder connection, an INTERCOD 15 interface is proposed as option (see section L10).






Connect or disconnect the encoder plug of the powered down drive.

WARNING: supplying the encoder with overvoltage may damage it. Follow the quick putting into service or refer to menu 3 section H.

(*) Types SCS/M60/70, SRS/M50/60, SHS170, LINCODER, SCS-KIT101, SKS/M36 are managed by the drive.

• Motor side connections (standard LEROY-SOMER)

Encoder connector pins	Sincos encoder with Hiperface link		Sincos encoder with Endat link ECN413/EQN425 ()
	SCM70 ()	SRS/M50/60 SKS/M36 ()	
1	CosRef	CosRef	-
2	Data	Data	-
3	-	Data\	-
4	-	Cos	-
5	Sin	Sin	-
6	SinRef	SinRef	-
7	Data\	CTP	+5V
8	Cos	CTP	Clock
9	-	Shield	Clock\
10	0V	0V	0V
11	-	-	Shield
12	+8V	+V	SinRef
13	-	-	Sin
14	-	-	Data
15	-	-	CosRef
16	-	-	Cos
17	-	-	Data\

Note: For any other type of encoder (motor side), contact the encoder supplier or your usual LEROY-SOMER representative.

UNIDRIVE SP

Encoder connections

F3 - Encoder input/output characteristics

• Quadrature incremental encoders, Frequency/Direction, Forward / Reverse

• Sincos encoders 5 to 12 terminal only

1	Path B or F (□) ; path A or F (⊗)
2	Path B\ or F\ (□) ; path A\ or F\ (⊗)
3	Path A, D or R (□) ; path B, D or R (⊗)
4	Path A\ , D\ or R\ (□) ; path B\, D\ or R\ (⊗)
5	Path Z or 0 or C (□, ⊗)
6	Path Z\ or 0\ or C\ (□, ⊗)
7	Path U (⊗)
8	Path U\ (⊗)
9	Path V (⊗)
10	Path V\ (⊗)
11	Path W (⊗)
12	Path W\ (⊗)
Characteristics	RS485 differential voltage
Maximum input frequency	410 kHz for terminals 1 to 4 512 kHz for terminals 5 to 12
Line load	< 2 drives for terminals 1 to 4 32 drives for terminals 5 and 6 1 drive for terminals 7 to 12
Input impedance	120 Ω
Operation range	-7 to +12V
Maximum absolute voltage	± 25V/0V for terminals 1 to 4 -9 to 14V/0V for terminals 5 to 12
Maximum absolute differential voltage	± 25V for terminals 1 to 4 -9 to 14V/0V for terminals 5 to 12

• SinCos, absolute SinCos encoders with Hiperface link, and EnDat link

1	Path Cos
2	Path Cosref
3	Path Sin
4	Path Sinref
Characteristics	Differential voltage
Maximum signal	1.25V peak to peak (Sin/SinRef or Cos/Cos Ref)
Maximum input frequency	115 KHZ
Maximum differential voltage	± 4V

• Absolute SinCos encoder with Hyperface, SSI or EnDat link, EnDat and SSI encoders

5	Data
6	Data\
Characteristics	RS 485 differential voltage
Maximum input frequency	2 MHz
Line load	32 drives
Operation range	-7 to +12V
Maximum absolute voltage	± 14V/0V
Maximum absolute differential voltage	± 14V

• EnDat, absolute SinCos encoders with EnDat or SSI link and SSI encoders

11	Clock
12	Clock\
Characteristics	RS 485 differential voltage
Maximum input frequency	2 MHz
Line load	1 drive
Operation range	-7 to +12V
Maximum absolute voltage	± 14V/0V
Maximum absolute differential voltage	± 14V

7	Output path A _{out} or F _{out} (□)
8	Output path A _{out} \ or F _{out} \ (□)
9	Output path B _{out} or D _{out} (□)
10	Output path B _{out} \ or D _{out} \ (□)
Characteristics	RS 485 differential voltage
Maximum output frequency	512 kHz
Maximum absolute voltage	± 14V / 0V
Maximum absolute differential voltage	± 14V

13	Encoder supply
Supply voltage	5.15V ± 2 %, 8V ± 5 %, or 15V ± 5 %
Maximum output current	300 mA for 5V and 8V 200 mA for 15V
WARNING: Supplying an encoder with overvoltage can damage it.	

14	Common 0V
----	-----------


15	Motor thermal probe probe
Management of the motor thermal probe	


Note: On the HD15 drive connector, pin 15 is internally connected to pin 8 of the drive (control terminal block).

UNIDRIVE SP Encoder connections

F4 - CEM recommendations for encoder cabling

The sensor cable shielding is important due to high voltages and currents at drive output. If the supplied LEROY-SOMER cables are not used, it is recommended to observe the following rules:

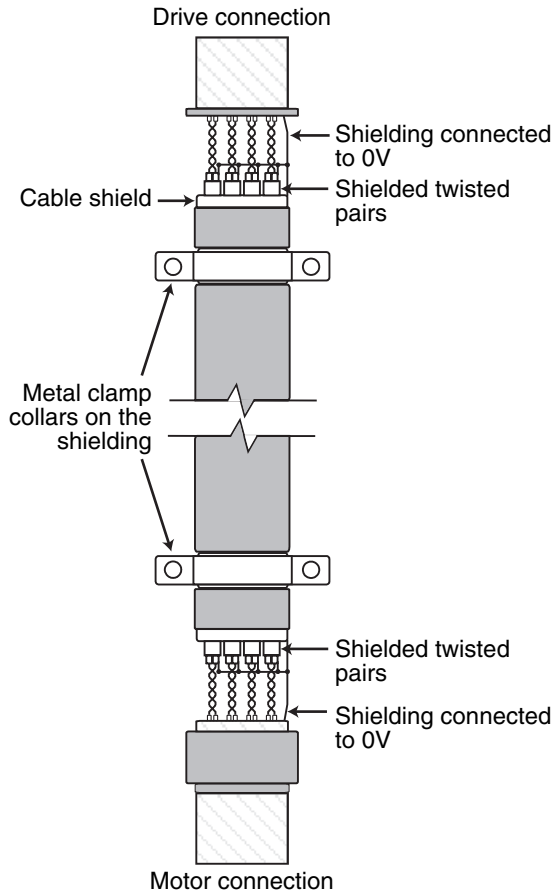

It is preferable not to make encoder cable extensions. If an extension is unavoidable, check that the shield connections are as short as possible (use preferably metal clamp collars directly on the shielding at the end of the cable ). Connect the shields directly to the encoder terminal block and the drive shielding support.

UNIDRIVE SP Setting

Contents

G1 - Warning	3
G2 - General detail	3
G3 - LED display installation	3
G4 - LED display use	4
G5 - Parameter selection and modification	5
G6 - Keypad drive control	5
G7 - Access level	6
G8 - Storing	6
G9 - Restore factory settings.....	6
G10 - Operating mode change.....	6
G11 - Changed parameter list	7
G12 - Destination parameter list	7
G13 - Security code	7

UNIDRIVE SP Setting

Notes

G

UNIDRIVE SP Setting

G1 - Warning

- The drives use a software which is adjusted by parameters. Unsuitable adjustments may have serious consequences on the personnel and the machine.
- The drive setting must be performed only by qualified and certified personnel.
- Before the drive power up check that the power connections (mains supply and motor) are correct and the moving parts are mechanically protected.
- The users must pay special attention in order to avoid accidental starting.

 
- If brake resistors are necessary, check that they are well connected to the DC2 (or +DC for size 1) and BR terminals, and protected by a correctly sized thermal relay in case of external resistors.
- The motor parameter values affect the motor protection and system security. The set values must be noted on the name plate of the used motor.
- For safety, in case of a brake, disconnect the brake coil during the setting phase.

G2 - General detail

• Structure

In order to configure the drive with a given application, you must change the parameters organised by menus, where each menu corresponds to a parameter group linked by a function.

Example:



• Parameter types

- The parameters are digital or binary and are accessible by reading or in writing.
- Certain parameters are accessible only by reading and give indications on the drive operating status.

• Commissioning in 3 levels

- Quick commissioning with the factory settings of the variable speed drive :

allows the operation of the variable speed drive with a minimum parameter-setting.

- Simplified commissioning starting with 0 menu (user menu):

group of parameters used to simply adapt the variable speed drive to the application, by modifying only the most current adjustments.

- Elaborated commissioning by using menus 1 to 22 (menu diagram) :

used to configure the variable speed drive according to the variable speed drive needs, by accessing all the variable speed drive functions.


If necessary, the detailed explanations about each parameter are regrouped in the manual Explanation of parameters ref. 3655, available on the CD ROM supplied with the drive.

G3 - Installation of LED display


CAUTION :

The display can be mounted or dismantled when the variable speed drive is powered up, save when the Run and Stop commands are given from the keyboard.

- Display installation

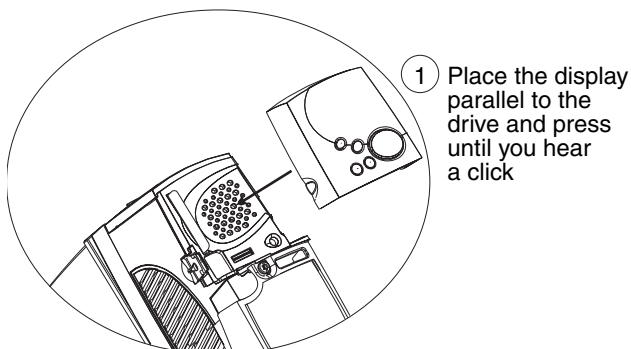


- Display dismantling

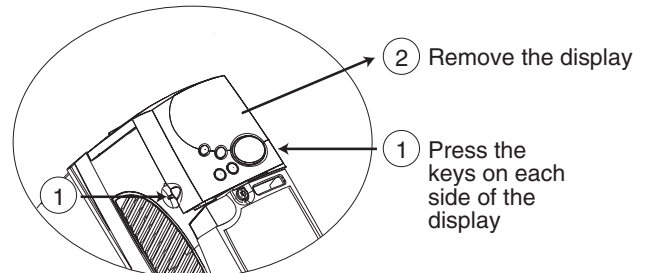

UNIDRIVE SP Setting

G4 - Use of LED display

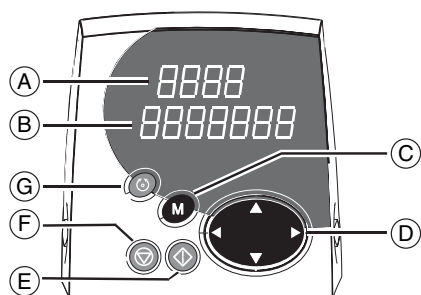



Command	Ref.	Function
	(A)	Upper display made of 4 displays 7 segments allowing the display of: - the variable speed drive operating status, - the adjustment parameters, made of menu and of parameter
	(B)	Lower display made of 7 displays 7 segments used to display: - the operating mode, - the parameter content, - the default code.
	(C)	Touche Mode is used to pass from the normal mode to the setting mode.
	(D)	The 2 arrows are used to move on the displays 7 segments of the lower display in order to modify its value or to pass from one menu to another. The 2 arrows are used to scroll in increase or decrease order of the parameters or of their value.
	(E) (F) (G)	In keyboard mode, these keys allow the foll. commands: - Run, - Stop, default deletion, - Inversion of the direction of rotation.

UNIDRIVE SP Setting


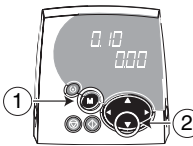
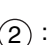

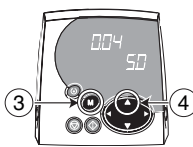
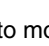
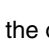
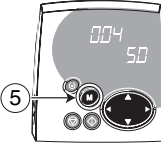
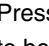

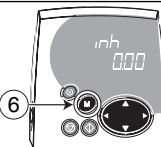
G5 - Selection and modification of a parameter

This procedure describes the use of the Unidrive SP LED display.

CAUTION :





- This procedure has been drawn up for initial commissioning.
- If the variable speed drive is already powered up, the first parameter displayed cannot be **0.10**. Simply select the parameter to be displayed or modified using the  or  keys.

Note : In setting mode, if there is no operator action for 4 minutes, the display stops flashing and returns automatically to the initial variable speed drive status.

Action	Comment
	Power-up Disabled variable speed drive (terminal 31 opened) (initial status)
	① : Access to the setting mode. Parameter 0.10 flashes on display. ② : The  and  keys are used to access the parameter to be modified. For instance, select parameter 0.04 .
	③ : Access to parameter modification. The parameter number stops flashing. Its value is indicated in the lower display (the lowest weight digit flashes). ④ : Press and hold down the key, to quickly scroll through the parameter value. The final setting is made by short presses on the same key. For more rapidity, you can move to modify the other digits by  or  .
	⑤ : The new 0.04 value is memorised Press the  or  key to select a new parameter to be modified.
	⑥ : Return to the initial variable speed drive status.

G6 - Control of the drive by means of the keyboard

Connect at least a contact maintained on the safety/enable input (terminal 31) and +24V (terminal 22) of the variable speed drive control terminal block (if necessary, see section E).

- Power up the variable speed drive, the display shows " inh ".
- Set the parameter **0.05** to Pad (4) (speed reference selection by keyboard).
- Display the parameter **0.10** to see the speed measure.
- Power down the contact of terminal 31, the display shows " rdy ".
- press the  key to start.
- Press the  key to increase the speed.
- Press the  key to decrease the motor speed.
- Press the  key to stop the motor, the display shows " rdy " or " stop " for servo mode.

UNIDRIVE SP Setting

G7 - Access level


In factory settings, only 0 menu is accessible to the user.

To access other menus, you must:


- select the parameter **0.49** : its value is at " L1 "

- modify the value of **0.49** at " L2 "

The left and right arrows are now enabled and the menus 1 to 21 are accessible.

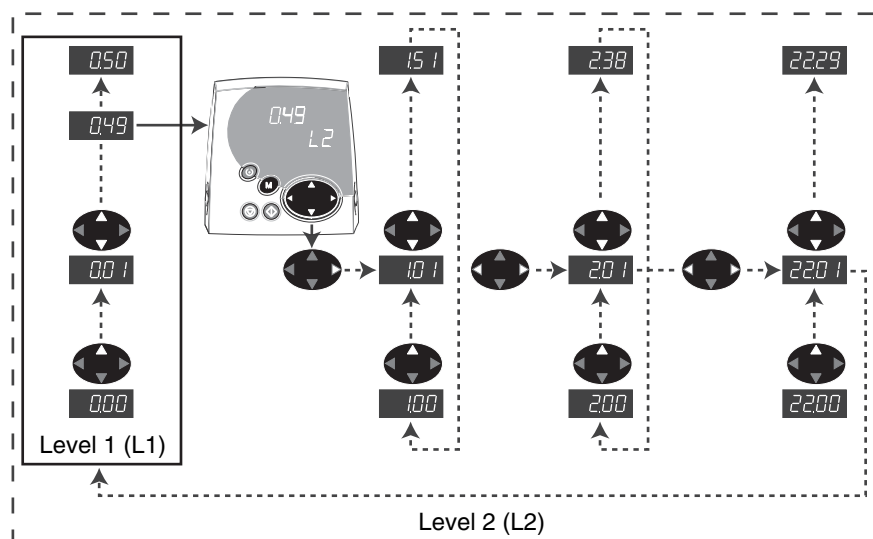

G8 - Storing


Parameter	Setting	Description	Validation
xx.00 (parameter 0 of any menu)	1000	Storing of the parameters modified in the menus 1 to 22	Press the Reset  key


- The modification of the 0 menu parameters are not stored automatically by the variable speed drive.

- The modification of the 1 to 22 menu parameters are not stored automatically, the opposite procedure must be followed.

Note : If the drive is " UU " powered up by default or if the variable speed drive operates by the 48V safety power supply, enter 1001 in **xx.00** to store the parameters.

G9 - Restore the factory settings


Parameter	Setting	Description	Validation
0.00	1233 or 1244	Europe factory setting configuration or USA factory setting configuration	Press the Reset  key


 **Before following this procedure, check that the system safety is assured.**

Note: This procedure is also valid if you use parameter 0 of another, for ex. **1.00** or **4.00**.

In addition, it does not change the operating mode (OPEn.LP, CLVEct, SErVO).

G10 - Modification of the operating mode

Parameter	Setting	Description	Validation
0.00	1253 or 1254	Europe configuration 50 Hz mains supply or USA configuration, 60 Hz mains supply	Press the Reset  key
0.48	OPEn LP (1) or CL VECt (2) or SErVO (3) or rEgEn (4)	Open loop (factory settings) or Vector control in closed loop or Servo mode with Brushless motor or Regenerative mode (not used)	

 **This procedure of modification of the operating mode causes the restoring of the factory settings of the parameters corresponding to the new mode, including the motor parameters (it is necessary to set the motor parameters before starting). The modification of the operating mode must be made with the variable speed drive stopped or disabled.**

Before following this procedure, check that the system safety is assured.

UNIDRIVE SP Setting

G11 - List of modified parameters

Parameter	Setting	Description
xx.00 (parameter 0 of any menu)	12000	All the factory set parameters are no longer accessible, only the modified parameters are visible

During the setting, it is sometimes useful to know which are the drive parameters different from the factory setting. To display only these parameters, follow this procedure.
Note : to disable this function, enter the 0 value in a parameter **xx.00**.

G12 - List of destination parameters


Parameter	Setting	Description
xx.00 (parameter 0 of any menu)	12001	Only destination parameters are visible

If the setting of menus 1 to 22 has been modified, this procedure is used to present the destination parameters of the variable speed drive. This type of parameter is used to transfer a function output to another parameter. (See details at section H3.2).
To display only these parameters, follow this procedure.
Note : to disable this function, enter the 0 value in a parameter **xx.00**.

G13 - Safety code

In certain cases, it is necessary to block the modification of the variable speed drive parameters, maintaining the possibility to read them.

• Disabling of settings by the security code

Parameter	Setting	Description	Validation
0.34	Enter a value between 1 and 999	Selection of the security code	-
0.49	Loc (0)	Enabling of the security code	Press the Reset  key


Parameter **0.49** returns automatically to value "L1" : all the parameters of 0 menu are visible but they cannot be modified.


Only parameter **0.49** can be modified for reading the parameters of other menus.

The value **0.34** returns automatically to 0.

• Access to settings with security code


Select the parameter to be modified.

Press the  key, the display displays "CodE".

By means of the arrows, enter the security code, then press again .

- Correct code : the parameter is in parameter-setting mode, ready to be modified.


- Incorrect code: the parameter remains only in reading mode, as all the other parameters.


To return to the reading mode, select **0.49** and enter the value "Loc", then press the Reset  key.


The security code is enabled again.

• Suppression of a security code

Select a parameter.

Press the  key, the display shows "CodE".

By means of the arrows, enter the security code, then press again .

Select **0.34**, enter 0 value and press again .

• Research of a security code

If the user forgets the security code (variable speed drive blocked only for reading), contact your usual LEROY-SOMER interlocutor.

UNIDRIVE SP Setting

Notes

G

UNIDRIVE SP Commissioning

Contents

H1 - Quick start commissioning.....	3
H2 - Menu 0 : User Menu	8
H2.1 - Parameters list	8
H2.2 - Parameters explanation	11
H3 - Other menus.....	17
H3.1 - Menus	17
H3.2 - Parameter types.....	18
H3.3 - Factory settings.....	19
H3.4 - Use.....	19
H3.5 - Maximum values definitions	20
H4 - Winding/ unwinding diagram with analogue reference.....	22
H5 - Explanation of winding / unwinding analogue parameters	29
H5.1 - Explanation of the parameters of menu 18	29
H5.2 - Explanation of the parameters of menu 19	32
H5.3 - Explanation of the parameters of menu 20	34
H6 - Base menu diagram.....	36
H6.1 - Menu 1 : Frequency or speed reference (selections - limitations - or filters)	36
H6.2 - Menu 2 : Ramps.....	38
H6.3 - Menu 3 : Encoder input and speed loop in open loop.....	40
H6.4 - Menu 3 : Encoder input and speed loop in closed loop and servo.....	42
H6.5 - Menu 4 : Current loop, torque adjustment in open loop.....	44
H6.6 - Menu 4 : Current loop, torque adjustment in closed loop.....	45
H6.7 - Menu 4 : Current loop, torque adjustment in servo	46
H6.8 - Menu 5 : Motor control in open loop.....	47
H6.9 - Menu 5 : Motor control in closed loop and servo	48
H6.10 - Menu 6 : Meter and digital command management.....	50
H6.11 - Menu 7 : Configuration of analogue inputs- outputs	52
H6.12 - Menu 8 : Configuration of digital inputs-outputs.....	54
H6.13 - Menu 9 : Logic functions	56
H6.14 - Menu 10 : Variable speed drive status and diagnosis.....	57
H6.15 - Menu 11 : Parameter setting of menu 0 - serial link -drive characteristics.....	60
H6.16 - Menu 12 : Comparisons, variable transfers	63
H6.17 - Menu 13 : Synchronisation in open loop.....	66
H6.18 - Menu 13 : Synchronisation and indexation in closed loop and servo	68
H6.19 - Menu 14 : PID	70
H6.20 - Menus 15, 16, 17 : SM MODULES	71
H6.20.1 - Introduction	71
H6.20.2 - SM-I/O PLUS module	72
H6.20.3 - SM-UNIVERSAL ENCODER PLUS module.....	76
H6.20.4 - SM-ENCODER PLUS module	78
H6.20.5 - SM-RESOLVER module	79
H6.20.6 - SM-Field bus module.....	80
H6.20.7 - SM-Applications module.....	81
H6.21 - Menu 18 : Application parameters	83
H6.22 - Menu 19 : Application parameters	83
H6.23 - Menu 20 : Application parameters	83
H6.24 - Menu 21 : Operating parameters of a second motor	84
H6.25 - Menu 22 : Parameter setting of menu 0 (to be continued)	85


UNIDRIVE SP Commissioning

Notes




UNIDRIVE SP Commissioning

H1 - Quick commissioning

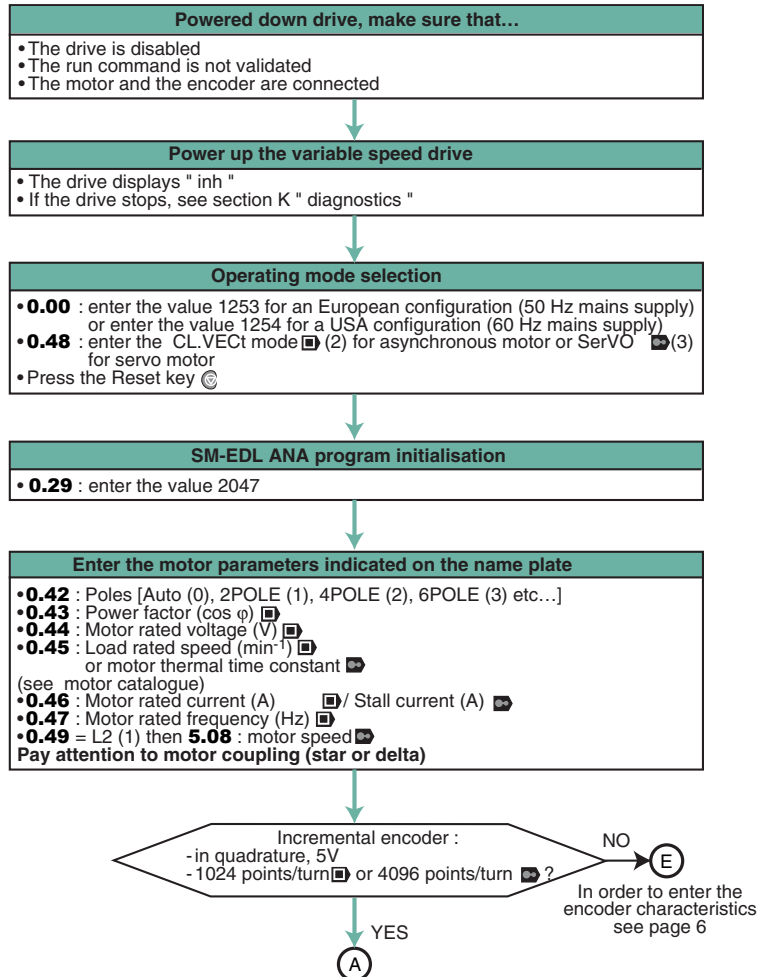

Note : Factory settings, the drive is configured in positive logic. To change the drive to negative logic set **8.29** to On (1) for the drive logic, and eventually **16.29** to On (1) for the SM-I/O Plus module if it is used.

UNIDRIVE SP Commissioning

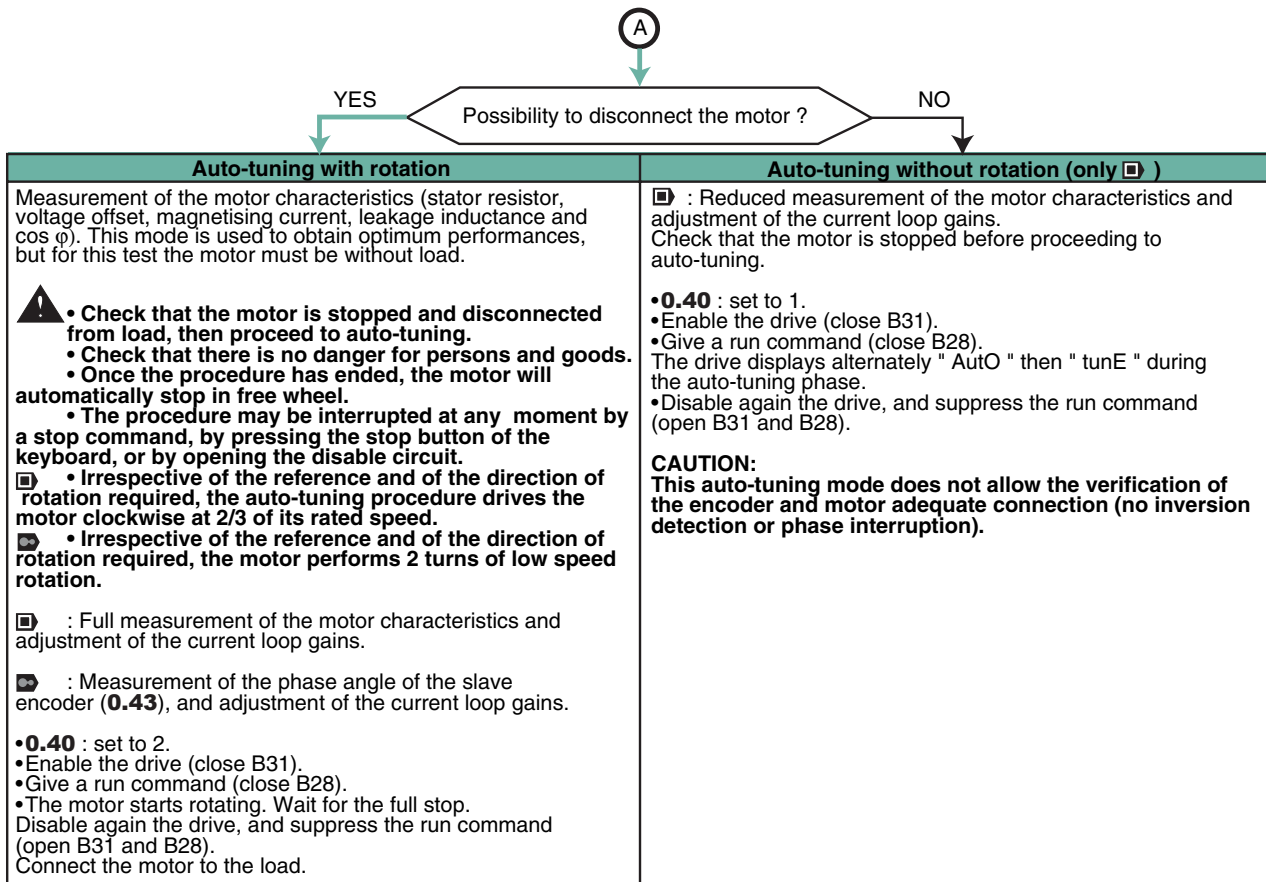

Enter the values of the parameters essential for the application

- **0.16** : Set the mode : Winder = 1, Unwinder = 0.
- **0.19** : Set the reference - pulse input in min^{-1} .
- **0.20** : Set the maximum line speed in $\text{m} \cdot \text{min}^{-1} \times 10$.
- **0.21** : Set the initialisation radius in mm.
- **0.22** and **0.23** :
 Set the minimum and maximum radius of the coil in mm.
- **0.28** : Set the plated motor power in $\text{kW} \times 100$.
- **0.27** : Set the total mechanical reduction (motor/ driven shaft) $\times 100$.
- **0.26** : Set the maximum tension (T_{\max}) in Newton.
- **0.25** : Set the minimum tension in max tension percentage (set in **0.26**) $\times 10$
- **0.24** : Tension when stopped. Set a tension reference percentage after limitations (limited by **0.26** and **0.25**).

CAUTION:
 The relation between max radius/ min radius must not exceed 15.

Storing

- **0.00** : Enter the value 1000
- Press the reset key

C

UNIDRIVE SP Commissioning

Ⓒ

Commissioning

Tests without load : this operating mode is used for the product use.


- Enable the drive (terminal 31 active).
- Operation by pulses :
 - run forward (close the terminal 26 of the drive then the terminal 11 of SM-EDL ANA),
 - run reverse (close the terminal 26 then the terminal 28 of the drive).
- The parameter **0.10** indicates the motor speed.

Product tests :

- After the product use, disable the drive (open the terminal 31).
- Check that the line servo-control is active in order to retain the product.
- Initialise the radius by pulses on the terminal 24 (obligatory initiation on each coil changing or after a drive default).
- Enable the drive (close the terminal 31).
- Activate the terminal 10 of SM-EDL ANA to validate the tension and the terminal 11 (SM-EDL ANA) or 28 (drive) for the direction of rotation.
- The tension is set by the analogue reference (terminal 7 of the drive).
- The following parameters give operation-related indications :
 - 0.10** : Measurement of motor speed in min^{-1} ,
 - 0.11** : Product radius in mm,
 - 0.12** : Line speed $\times 0.1 \text{ m} \cdot \text{min}^{-1}$,
 - 0.13** : Tension reference after limitation in Newton,
 - 0.14** : Slow shaft rated torque C_{max} ($\times 0.1\text{N}$),
 - 0.15** : Control of $C_{\text{max}}/C_{\text{N}}$ in %.

CAUTION:


Depending on the product characteristics, an optimisation of the settings may be necessary.

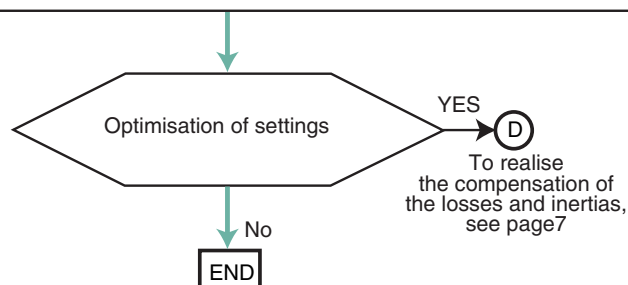

H

UNIDRIVE SP Commissioning

• If the encoder is not a LEROY-SOMER standard incremental encoder, follow the indications below

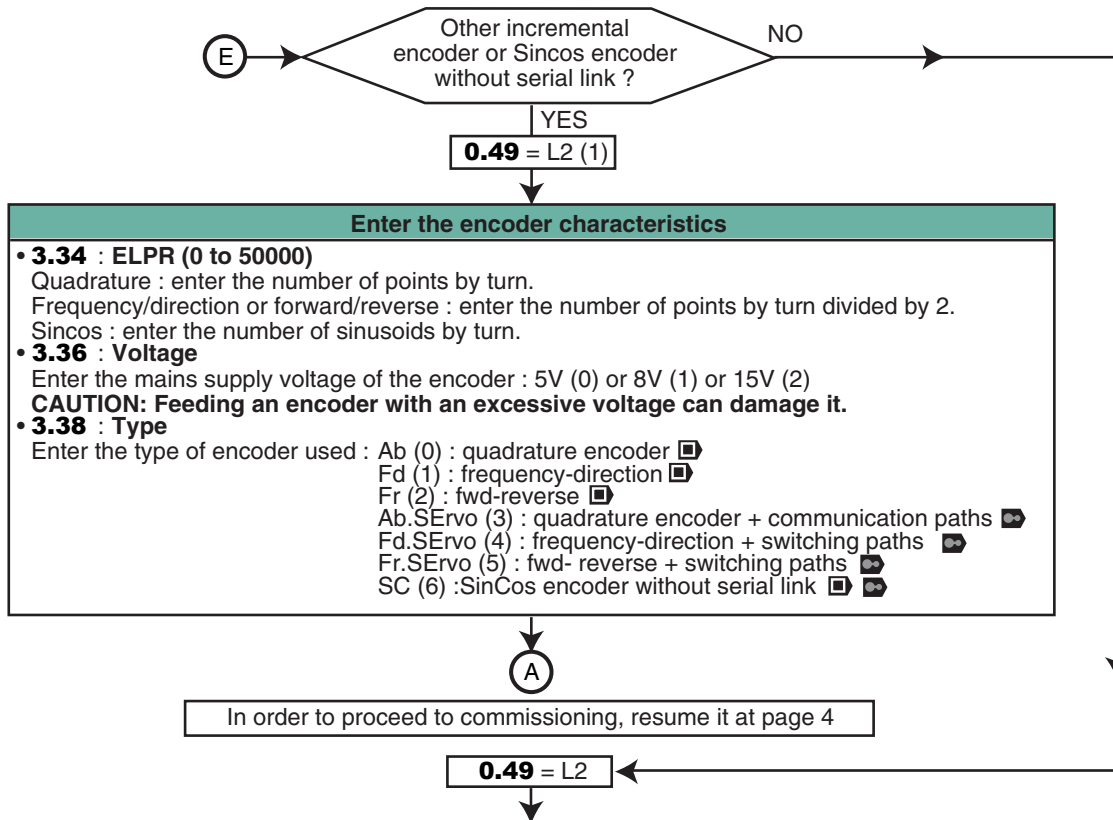

Enter the encoder characteristics	
SinCos encoder with serial link Hiperface or EndAt or EnDat encoder	Sincos encoder with SSI link or SSI encoder
<p>• 3.41 : Auto-configuration Enter the value On (1) for an auto-configuration of the encoder parameters when powering up (3.33, 3.34 and 3.35).</p> <p>• 3.36 : Voltage Enter the encoder mains supply voltage : 5V (0) or 8V (1) or 15V (2). CAUTION: Feeding an encoder with an excessive voltage can damage it.</p> <p>• 3.37 : Transmission speed Enter the speed of the serial link (excepting the SinCos encoder with Hiperface link) : 100 kbauds (0), 200 kbauds (1), 300 kbauds (2), 400 kbauds (3), 500 kbauds (4), 1000 kbauds (5), 1500 kbauds (6), 2000 kbauds (7), 4000 kbauds (8).</p> <p>• 3.38 : Type Enter the type of encoder used : SC.Hiper (7) : SinCos with Hiperface, EndAt (8) : EndAt, SC.EndAt (9) : SinCos with EnDat link.</p>	<p>• 3.41 : Selection of SSI format Enter the value OFF (0) to select the Gray SSI code format. Enter the value On (1) to select the SSI binary format.</p> <p>• 3.33 : Number of turns (number of bits) Enter the maximum number of encoder turns Ex. : if 3.33 = 5, the maximum number of turns will be 2⁵.</p> <p>• 3.34 : Number of increments/turn (ELPR) (SinCos encoder only) Enter the number of sinusoids by turn.</p> <p>• 3.35 : Resolution (number of bits) Enter the resolution of the serial link (number of bits used to represent an encoder turn).</p> <p>• 3.36 : Voltage Enter the encoder mains supply voltage: 5V(0) or 8V(1) or 15V(2). CAUTION: Feeding an encoder with an excessive voltage can damage it.</p> <p>• 3.37 : Transmission speed Enter the linking speed : 100 kbauds (0), 200 kbauds (1), 300 kbauds (2), 400 kbauds (3), 500 kbauds (4), 1000 kbauds (5), 1500 kbauds (6), 2000 kbauds (7), 4000 kbauds (8).</p> <p>• 3.38 : Type Enter the type of encoder used : SSI (10) : SSI encoder, SC.SSI (11) : SinCos with SSI link.</p>

(A)
In order to proceed to commissioning, resume it at page 4

UNIDRIVE SP Commissioning

- Use of a radius measurement sensor

F

0.49 = L2

Scaling of the radius external measure. (analogue input)

- Implement or simulate a coil with load.
- Read the radius external measurement in **18.18** (value in points).
- Enter this value in **20.34**.
- Set the maximum radius of the product to be wound or unwound in **0.23** (value in mm).
- Implement or simulate a coil without load.
- Read the radius external measurement in **18.18** (value in points).
- Enter this value in **20.33**.
- Set the minimum ray of the product to be wound or unwound in **0.22** (value in mm).

B

In order to proceed to commissioning, resume it at page 4

- Inertia and losses compensation

D

0.49 = L2

Losses manual measurement

Make the measurements by means of a coil without load

- Set **19.44** = 1 to validate the loss measurement.
- Activate the terminal 10 (SM-EDL ANA) to validate the tension normal mode.
- Validate the run command of the line (terminal 11 SM-EDL ANA), the drive displays " run " and the motor must remain stopped.
- In order to draw the torque curve = f (speed), display the torque values (**20.28**) and the speed values (**0.10**) as follows :
- by means of the drive keyboard, increase very slowly the value of **20.28** (torque reference) until the moment when the motor begins to turn,
- display immediately this value
- Increase about each 10 points the torque in **20.28** and display the related speeds in **0.10** until obtaining the max speed (read in **19.21**).

CAUTION

After modifying **20.28**, select quickly the parameter **0.10** and display immediately its value.

In fact, the drive will try to increase the motor speed, and **0.10** steps.


- Set **19.44** = 0 and **20.28** = 0 to return to the normal operation.
- Draw the torque curve = f (speed). Determine the 4 points A, B, C and D (faults) as in the example below.

You should set the speed and the torque level corresponding to each fault :

- point A : consider the zero speed for this point, and set the torque in **19.16**,
- point B : set the speed in **19.17** and the torque in **19.18**,
- point C : set the speed in **19.19** and the torque in **19.20**,
- point D : set the torque in **19.22**. The speed is automatically considered for this point by the **19.21** parameter.

To activate the compensations, set **19.37** = 1.

Example of measures :

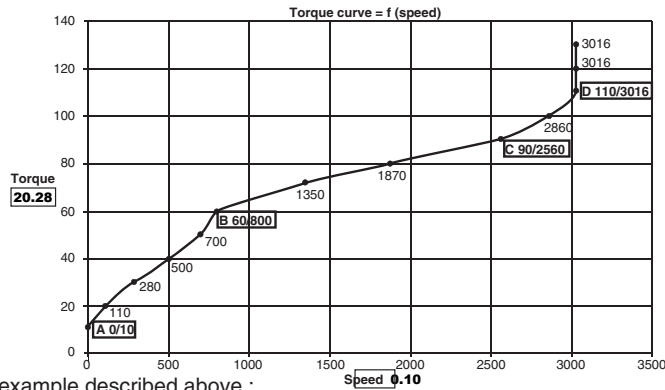

Programming made for the example described above :

	Torque		Speed	
A	19.16	10	Zero speed	
B	19.18	60	19.17	800
C	19.20	90	19.19	2560
D	19.22	110	19.21	Max speed

Inertia calculation

- If the voluminal mass and the width of the coil are known, set their value (in kg/m³ x 10 and in mm) respectively in **18.28** and **20.36**, then set **18.35** = 0.
- Otherwise, set the product weight (kg x 10) in **18.13** and set **18.35** = 1.
- Validate the inertia compensations by setting **18.36** = 1.

Storing

- **0.00** : Enter the value 1000
- Press the reset key

 
END

UNIDRIVE SP Commissioning

H2 - Menu 0 : User menu

H2.1 - Parameter list

The menu 0 allows to group together the most used parameters for a simplified commissioning. Each parameter of menu 0 is the image of a parameter contained in another menu (menu 1 to 22). The correspondence of the parameters of menu 0 is indicated in the " address " column of the table below.



: LS = Reading parameter



: Closed loop vector control



: Servo



: L-E = Reading and writing parameter

EUR : 50 Hz mains supply

USA : 60 Hz mains supply

Parameter	Description	Address	Type	Mode	Variation range	Factory settings
0.00	<ul style="list-style-type: none"> Storage Factory settings Operating mode selection Parameters list 	-	L-E	 	0 to 32767	0
0.01	Minimum speed limit	1.07	L-E	 	\pm LIM N MAX *	0
0.02	Maximum speed limit	1.06	L-E	 	0 to LIM N MAX *	1500.0 min ⁻¹ (EUR) 1800.0 min ⁻¹ (USA) 3000.0 min ⁻¹
0.03	Acceleration ramp	2.11	L-E	 	0 to 3200.000s/1000 min ⁻¹	2.000 s/1000 min ⁻¹ 0.200 s/1000 min ⁻¹
0.04	Deceleration ramp	2.21	L-E	 	0 to 3200.000s/1000 min ⁻¹	2.000 s/1000 min ⁻¹ 0.200 s/1000 min ⁻¹
0.05	Reference selection	1.14	L-E	 	A1.A2 (0), A1.Pr (1), A2.Pr (2), Pr (3), Pad (4), Prc (5)	A1.A2 (0)
0.06	Current limitation	4.07	L-E	 	0 to LIM IM1 MAX (%) *	175.0 %
0.07	Speed loop proportional gain	3.10	L-E	 	0 to 6.5535 (1/rads ⁻¹)	0.0100 (1/rads ⁻¹)
0.08	Speed loop integral gain	3.11	L-E	 	0 to 655.35 (1/rad)	1.00 (1/rad)
0.09	Speed loop derivative gain	3.12	L-E	 	0 to 0,65336 (s)	0
0.10	Calculated motor speed	3.02	LS	 	\pm N MAX (min ⁻¹) *	-
0.11	Product radius	20.31	LS	 	0 to 3276 mm	-
0.12	Line speed	18.05	LS	 	\pm 32767 (x 0.1 m.min ⁻¹)	-
0.13	Tension reference after limitation	18.09	LS	 	0 to 32767 N	-
0.14	Slow shaft rated torque	20.32	L-A	 	\pm Cmax (x 0.1 N.m)	-
0.15	C _{max} /C _n control	19.28	L-A	 	0 to 32767 %	-
























* For the parameter range explanation, see section H3.5

UNIDRIVE SP Commissioning

Parameter	Description	Address	Type	Mode	Variation range	Factory settings
0.16	Winder/ Unwinder	18.42	L-A		0 to 1	1
0.17 and 0.18	Not used	-	-		-	-
0.19	Pulse input reference	1.22	L-E		0 to V_{max} motor (19.09)	150 min ⁻¹
0.20	Maximum line speed	18.25	L-E		0 to 32767 (x 0.1 m.min ⁻¹)	1 (x 0.1 m.min ⁻¹)
0.21	Initialisation radius	19.12	L-E		1 to. 3276 mm	1 mm
0.22	Coil minimum radius	18.22	L-E		1 to 3276 mm	1 mm
0.23	Coil maximum radius	18.23	L-E		2 to 3276 mm	2 mm
0.24	Tension stop	19.11	L_E		0 to 100 %	50 %
0.25	Minimum tension	20.22	L-E		0 to 1000 (x 0.1 %)	0
0.26	Maximum tension	18.24	L-E		0 to 32767 N	1 N
0.27	Mechanical reduction	18.26	L-E		0 to 32767 (x 0.01)	1 (x 0.01)
0.28	Motor power	18.16	L-E		1 to 9000 (x 0.01 kW)	1 (x 0.01 kW)
0.29	Return to factory settings and EDL ANA parameters recopy	20.01	L-E		± 32767	0
0.30	Parameters copy	11.42	L-E		nonE (0), rEAd (1), Prog (2), AutO (3), boot (4)	nonE (0)
0.31	Drive rated voltage	11.33	LS		200 (0), 400 (1), 575 (2), 690 (3) V	-
0.32	Drive rated current	11.32	LS		0 to 9999.99 A	-
0.33	Auto-tuned rated speed.	5.16	L-E		0 to 2	0
0.34	User safety code	11.30	L-E		0 to 999	0
0.35	Communication type	11.24	L-E		AnSI (0), rtU (1), Lcd (2)	rtU (1)
0.36	Serial link transmission speed	11.25	L-E		300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 115200 (9)	19200 (6)
0.37	Serial link address	11.23	L-E		0 to 247	1
0.38	Current loop proportional gain	4.13	L-E		0 to 30000	Drive 200V(TL) : 75 Drive 400V(T) : 150 Drive 575V(TM) : 180 Drive 690V(TH) : 215

* For parameter range explanation, see section H3.5.

UNIDRIVE SP Commissioning

Parameter	Description	Address	Type	Mode	Variation range	Factory settings
0.39	Current loop integral gain	4.14	L-E	 	0 to 30000	Drive 200V(TL) : 1000 Drive 400V(T) : 2000 Drive 575V(TM) : 2400 Drive 690V(TH) : 3000
0.40	Auto-tuning, measurements and calculations	5.12	L-E		0 to 4	0
					0 to 6	
0.41	Carrier frequency	5.18	L-E		3 (0), 4 (1), 6 (2), 8 (3), 12 (4), 16 (5) kHz (16 kHz not available for sizes 3)	3 (0) kHz
					3 (0), 4 (1), 6 (2), 8 (3), 12 (4), 16 (5) kHz (16 kHz not available for sizes 3)	6 (2) kHz
0.42	Motor poles number	5.11	L-E		Auto (0) to 120POLE (60)	Auto (0)
						6POLE (3)
0.43	Cos φ	5.10	L-E		0 to 1.000	0.850
	Encoder phase angle	3.25	L-E		0 to 359.9°	0
0.44	Motor rated voltage	5.09	L-E	 	0 at U _{AC} MOT MAX (V) *	Drive 200V(TL) : 230V Drive 400V(T) : 400V (EUR), 480V (USA) Drive 575V(TM) : 575V Drive 690V(TH) : 690V
0.45	Load motor rated speed	5.08	L-E		0 to 40000.00 min ⁻¹	1450.00 min ⁻¹ (EUR) 1770.00 min ⁻¹ (USA)
	Motor thermal time constant	4.15	L-E		0 to 400.0	20.0
0.46	Motor rated current	5.07	L-E		0 to I _N MAX (A) *	I _{NOM} VAR (11.32)
	Stall current (STALL)					
0.47	Motor rated frequency	5.06	L-E		0 to 1250.0 Hz	50.0 Hz (EUR) 60.0 Hz (USA)
0.48	Operating mode selection	11.31	L-E	 	OPEn LP (1), CL VECt (2), SErVO (3), rEgEn (4)	OPEn LP (1)
0.49	Level 2 access and safety Code storing	11.44	L-E	 	L1 (0), L2 (1), Loc (2)	L1 (0)
0.50	Software version	11.29	LS	 	1.00 to 99.99	-

UNIDRIVE SP Commissioning

H2.2 - Parameter explanation

0.00 : Storing parameter, return to European and USA factory settings, modification of the operating mode, Parameters list

Variation range : 0 to 9999

Factory settings : 0

1000 : storing,

1001 : storing, even in safety power supply mode,

1070 : Reset of option modules,

1233 : return to European factory settings,

1244 : return to USA factory settings,

1253 : selection of the operating mode with return to the European factory settings,

1254 : selection of the operating mode with return to the USA factory settings,

12000 : selection of all parameters the value of which is different from the factory settings.

12001 : selection of all the destination parameters.

Press the Reset key  to validate the settings.

0.01 : Frequency limit or minimum speed

It is the lowest operating speed (established for the two directions of rotation). With the minimum reference, it is the output speed.



Note : This parameter is not taken into consideration during the pulse input.

0.02 : Frequency limit or maximum speed

It is the highest operating speed (established for the two directions of rotation). With the maximum reference, it is the output speed.

Note : The drive integrates an overspeed protection.


0.03 : Acceleration ramp

 and  :



Time adjustment in order to accelerate from 0 to 1000 min⁻¹

Note : The value of **0.03** is applied to the 2 directions of rotation.
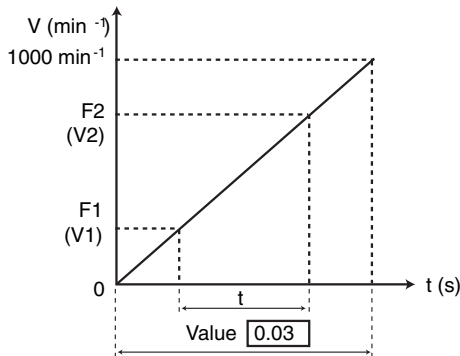
$$\left. \begin{array}{l} \text{Up arrow key icon} \\ \text{Down arrow key icon} \end{array} \right\} \text{Value of } \mathbf{0.03} \text{ (s)} = \frac{t(\text{s}) \times 1000 \text{ min}^{-1}}{(V2-V1) \text{ min}^{-1}}$$




0.04 : Deceleration ramp

 and  :

Time adjustment in order to decelerate from 1000 min⁻¹ to 0.

Note : The value of **0.04** is applied to the 2 directions of rotation.

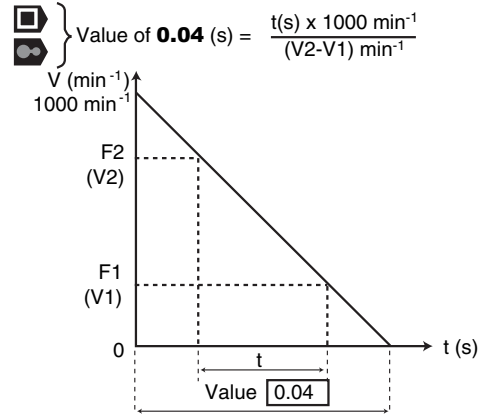

0.05 : References selection

It is the speed reference selection.

A1.A2 (0) : reference selection by the voltage (A1) analogue input 1 or by the voltage (A2) analogue input 2, and run by pulses, by terminals 28 and 29.

A1.Pr (1) : reference selection by the voltage (A1) analogue input 1 or 3 preset references, by terminals 28 and 29.

A2.Pr (2) : reference selection by the voltage (A2) analogue input 2 or 3 preset references, by terminals 28 and 29.

Pr (3) : preset references selection, by terminals 28 and 29.

Pad (4) : reference selection by the keyboard (arrows  and ).

Prc (5) : precision speed reference (not used in menu 0).

Note : Terminals 28 and 29 are automatically configured according to the value of **0.05**.

0.06 : Current limitation


Set the maximum active current (percentage of the rated active current) delivered by the variable speed drive during the motor or the generator operations.

The output speed is limited in order to maintain the active current lower or equal to the limit established by **0.06**.

0.07 : Proportional gain of the speed loop

 and  :

Set the motor speed stability on severe variations reference. Increase the proportional gain until vibrations are in the motor, then decrease the value by 20 to 30 %, by verifying that the motor stability is good on severe variations of speed reference, without load and with load.

0.08 : Integral gain of the speed loop  and

 :

Set the motor speed stability on a load impact. Increase the integral gain in order to obtain the same speed with load and without load on a load impact.

UNIDRIVE SP Commissioning

0.09 : Derivative gain of the speed loop and

Set the motor speed stability on quick reference variations or load power cut. Reduced overshoot .
Generally, let the setting to 0.

0.10 : Calculated motor speed and

This parameter allows to read the real motor speed, coming from the speed sensor (incremental encoder for ex.).

0.11 : Product radius

This parameter indicates the product radius on the spool..

0.12 : Line speed

It indicates the line speed.

0.13 : Tension reference between limits

It indicates the tension reference in " Newton " between limits (established by the tension **0.26** and the minimum tension **0.25**).

0.14 : Slow speed shaft

It indicates the rated torque supplied on the slow speed shaft of the system.

0.15 : C_{max}/C_n control

This parameter displays the ratio of "the maximum torque" demanded on the product and the motor rated torque, following the information and the application demand. The value displayed is 100 %, when the parameter settings are correct.

0.16 : Winder/Unwinder

0 : unwinder.
The compensation derives from the motor torque reference.
The tension correction is not effective.
1 : winder.
The compensation is added to the motor torque reference.

0.17 and 0.18 : Not used

0.19 : Pulse input reference

It is the operating speed when the pulse reference input (terminal 26) is selected, with a Forward or Reverse rotation command.

0.20 : Maximum line speed

Set the maximum speed (VLmax) at which the line must operate.
Setting value : line speed in $m.min^{-1} \times 10$.

0.21 : Initialisation radius

This parameter defines the starting radius of the coil at the beginning of the winding or unwinding.

0.22 : Coil minimum radius

Set the radius corresponding to the smallest radius on which the product will be wound or unwound.

CAUTION :

- The ratio maximum/ minimum radius must not exceed 15.
- Set **0.23** maximum radius before **0.22** minimum radius.

0.23 : Coil maximum radius

Set the radius corresponding to the largest radius on which the product will be wound or unwound.

CAUTION :

The ratio maximum/ minimum radius must not exceed 15.

0.24 : Tension failsafe %

Tension setting to stop at 0 to 100 % of the tension reference from **0.13**.

0.25 : Minimum tension

Setting the minimum tension on the product when the reference is zero.

Setting value : [% of the maximum tension reference (**0.26**)] x 10.

0.26 : Maximum tension

Setting of the maximum tension required for the product , when the reference is maximum. (**18.21** or **20.35**).

0.27 : Mechanical reduction

Total reduction (between the motor and the driven shaft) x 100.

0.28 : Motor power


Power plated on the motor (kW) x 100.


0.29 : Return to the factory settings and recopy the Winding/Unwinding parameters

• Return to the winding/unwinding factory settings with analogue reference

This parameter releases an automatic procedure of return to the factory settings specific to the winding/unwinding application with analogue references.

In order to validate the return to the factory settings, follow the procedure below :

Parameter	Setting	Description	Validation
0.00	1233	European factory settings configuration (50 Hz)	Press the Reset key 
	or 1244	USA factory settings configuration (60 Hz)	
0.29	2047	Winding/unwinding program initialisation	

 •Check that the motor is stopped and the system safety is engaged.





•Recopy winding/unwinding parameters with analogue reference

This parameter allows saving or loading of the Winding/Unwinding parameters of menus 20, 70 and 71 by using the SMARTCARD.

Parameter	Setting	Description
0.29	3333	Save the menus 20, 70 and 71 in the SMARTCARD
0.29	6666	Load menus 20, 70 and 71 of the SMARTCARD in the drive

UNIDRIVE SP Commissioning

0.30 : Parameters copy



0.30	Action
nonE (0)	Any
rEAd (1) + 	Transfer of the parameters stored in the SMARTCARD to the variable speed drive
Prog (2) + 	Variable speed drive parameters transfer to the SMARTCARD
Auto (3) + 	Drive parameters transfer to the SMARTCARD. Then, all parameter modification of menu 0 is automatically saved in the SMARTCARD
boot (4) + 	If when powering up a SMARTCARD is present, the SMARTCARD parameters are automatically transferred and stored in the variable speed drive.

See the procedures from section J.

0.31 : Drive rated voltage

This parameter indicates the drive rated voltage.

0.32 : Drive rated current


This parameter indicates the permanent output current of the drive corresponding to the maximum overload (possibility of an overload of 175 %  and ).

0.33 : Auto-tuned rated speed

The motor slip is calculated starting from the load rated speed **0.45**, and the motor rated frequency **0.47**.

Meanwhile, as the slip varies with the temperature, the drive calculation starting from **0.45** and **0.47** may be incorrect.

Setting **0.33** to 1 or 2 allows to automatically adjust the load rated speed.

In order to keep the new value of **0.45**, proceed to the parameters storing (**0.00** = 1000 + Reset .

This optimisation is active only when the speed exceeds 12.5% of the rated speed and when the motor load is greater than 62.5% of the rated load. The optimisation is not active anymore when the load is lower than 50% of the rated load.

0.34 : User safety code

This parameter allows to enter a personal safety code that disables all parameter modification (except **0.49**).

The personal code reading may be made only at the time of its editing.

Do not choose code 0.

In order to validate or use a code, follow the procedure described at section G12.

0.35 : Type of communication

AnSI (0) : ANSI protocol used

RtU (1) : Modbus RTU protocol used

Define the communication protocol used by the RS485 port of the variable speed drive.

This parameter may be modified by the keyboard, by a SM option or by the serial link itself. If the modification is sent by the serial link, the response to the command will be passed on by using the departure protocol. The master will have to wait 20ms before sending a new command in the new protocol.

Note : ANSI uses 7 bits of data, 1 stop bit and 1 parity bit.

Modbus RTU uses 8 bits of data, 2 stop bits and no parity bit.

Lcd (2) : protocol specific to disable the use of a "client" console.

0.36 : Serial link transmission speed

Used to select the transmission speed of the protocol used.

Note : The speeds 57600 and 115200 are used only for Modbus RTU.

This parameter may be modified by the keyboard, by a SM option or by the serial link itself. If the modification is sent by serial link, the response to the command will be sent by using the departure protocol. The master will have to wait 20ms before sending a new command in the new protocol.

0.37 : Serial link address

Used to define the variable speed drive address, this is always the slave.

Modbus RTU :

For this protocol, the addresses 0 to 247 may be used. The address 0 is used to communicate to the network slave unit (Broadcast), that is why this address must not be introduced in this parameter.

ANSI :

For this protocol, the first digit corresponds to the group, and the second to the variable speed drive address in the group. The maximum number of groups is 9, and the maximum number of addresses in the group is 9. Consequently, the value of **0.37** is limited to 99. Moreover, the address 0 is used to communicate to the network slave unit, and the addresses x0 are used for the slaves of group x, that is why these addresses must not be introduced in this parameter.

0.38 : Current loop proportional gain

0.39 : Current loop integral gain


Determines a number of internal factors of the variable speed drive as in the following :

- Frequency adjustment with current limitation related to the rated frequency and on load impacts.
 - Torque adjustment on slightly loaded machines related to the rated speed.
 - Supply failure or on controlled deceleration ramp when the continuous current bus adjustment is demanded.
- In order to reduce these variations, it is recommended :
- to increase the proportional gain **0.38**,
 - to diminish the integral gain **0.39**.

Note : The gains are automatically set by auto-tuning following the selected procedure (see **0.40**).

UNIDRIVE SP Commissioning

0.40 : Auto-tuning, measures and calculations

 • Make sure that the auto-tuning with rotation does not present a safety risk, and check that the motor is stopped before starting the procedure.

• After the modification of the operating mode or of the motor parameters, renew the auto-tuning.

0 : no auto-tuning.

1 :

 :

Characteristics measurement, stationary motor :

- stator resistance,
- current loop gains,
- transient inductance.

Choose this mode when the load cannot be disconnected from the motor.

Procedure :

- make sure that the motor parameters have been set, and that the motor is stopped,
- enable the variable speed drive (close terminal 31),
- give run command (close terminal 26 or 27). The display indicates alternately "Auto" and "tunE". Wait until the display stabilises at "0.00".

Open terminal 31 and terminal 26 or 27.

The motor is then ready for normal operation.

The parameter **0.40** reaches again 0 from the end of the auto-tuning.

 :

Measurement of the encoder phase angle. The motor must be disconnected.

Procedure :

- make sure that the motor parameters have been set, and that the motor is stopped,
- enable the variable speed drive (close terminal 31),
- give a run command (close terminal 26 or 27).
- The motor turns about 2 times forward, at a very low speed, then it stops. The display indicates alternately "Auto" and "tunE". Wait until the display stabilises at "0.00".

Open terminal 31 and terminal 26 or 27.

The motor is then ready for normal operation.

The parameter **0.40** reaches again 0 from the end of the auto-tuning.

2 :

 :

Measurement of the rotating motor characteristics:

- stator resistance,
- transient inductance,
- $\cos \varphi$,
- current loop gains,

This mode obtains the optimum performances, but the motor must be without load during the procedure.

Procedure :

- make sure that the motor parameters have been set, and that the motor is stopped,
- enable the variable speed drive (close terminal 31),
- give a run command (close terminal 26 or 27).

The motor accelerates up to 2/3 of the rated speed, then it stops in freewheel. During the auto-tuning, the display indicates alternately "Auto" and "tunE". Wait until the display stabilises at "0.00".

Open terminal 31 and terminal 26 or 27.

The motor is then ready for normal operation.

The parameter **0.40** reaches again 0 from the end of the auto-tuning.

 :

Measurement of the encoder phase angle, stator resistance, transient inductance, and automatic setting of the current loop gains.

The motor must be disconnected from the load.

Procedure :

- make sure that the motor parameters have been set, and that the motor is stopped,
- enable the variable speed drive (close terminal 31),
- give a run command (close terminal 26 or 27).

The motor turns about two times, at low speed, then it stops. The display alternately indicates "Auto" and "tunE". Wait until the display stabilises at "0.00".

Open terminal 31 and terminal 26 or 27.

The motor is then ready for normal operation.

The parameter **0.40** reaches again 0 from the end of the auto-tuning.

3 :

 and  :

Measurement of the total inertia (load and motor). The load may remain connected to the motor during the measurement, with the exception of the case in which the load is not linear or if it increases with the speed (erroneous measurement).

Procedure :

- make sure that the motor parameters have been set, and that the motor is stopped,
- enable the variable speed drive (close terminal 31),
- give a run command (close terminal 26 or 27).

The motor turns several times (3/4 of the load rated speed), then it stops. During the auto-tuning, the display alternately indicates "Auto" and "tunE". Wait until the display stabilises at "0.00".

Open terminal 31 and terminal 26 or 27.

The motor is then ready for normal operation.

The parameter **0.40** reaches again 0 from the end of the auto-tuning.

4 :

 :

Current loop gains calculation.

The transient inductance and the stator resistance must be set before validating gains calculation. In order to do so, proceed to an auto-tuning **0.40** = 1 or 2 (if the motor may be disconnected or not) before validating gains calculation.

Note : When the gains calculation is ended **0.40** goes from 4 to 0.

 :

Characteristics measurements, stationary motor :

- stator resistance,
- stator inductance,
- loop gains of the current loop.

Procedure :

- make sure that the motor parameters and the encoder phasing out **0.43** have been set, and that the motor is stopped,
- enable the variable speed drive (close terminal 31),
- give a run command (close terminal 26 or 27). The display alternately indicates "Auto" and "tunE". Wait until the display stabilises at "0.00".

Open terminal 31 and terminal 26 or 27.

The motor is then ready for normal operation.

The parameter **0.40** reaches again 0 from the end of the auto-tuning.

UNIDRIVE SP Commissioning

5  :

Measurement of the encoder phase angle **0.43** with low rotation.

Low current pulses are applied to the motor in order to produce a rotor movement, then it is restored to its initial position. If this procedure fails, it is automatically renewed 2 times (if the measurement is still unsatisfactory, the variable speed drive stops "tunE2").

Then, the drive checks if the direction of rotation of the position sensor is correct.

The phase angle **0.43** is then updated and stored.

This test is correctly carried out with an inertia load, and taking into account the fact that the motor must not be of low power and the friction must be acceptable, the motor must not be highly loaded for this test (inertia lower than $0.715 \times C_{rated} / 5.38 \text{ kgm}^2$).

This test may not be used with sensors equipped with a single serial link, it is better to use another auto-tuning mode for the Ab.servo and Fr.servo types.

6 :

 :

Current loop gains calculation.

This mode is not used for the simple applications of menu 0. For more information, see the Parameter Manual ref. 3655.

Note : This value is not visible on the display that goes from 5 to 0. The return of **0.40** to 0 means that the gains calculation is realised.

0.41 : Carrier frequency

Settle the carrier frequency of the PWM. Sampling frequency of the analogue and digital inputs.

CAUTION :


• According to the cutout frequency and the UNIDRIVE SP rating, it may be necessary to make a derating of the output current. See section B3.3.

• A high carrier frequency reduces the magnetic noise and increases the variable speed drive losses, on the other hand, it increases the motor heating and the emission level of radio-frequency disturbances and diminishes the starting torque.

• When **0.41** is set to a value higher than 3 kHz, and when the IGBT transistors junction temperature reaches a certain alarm threshold, the carrier frequency is automatically reduced (**0.41** remains at the value set by the user). When the variable speed drive cannot reduce further the carrier frequency, it stops "O.ht1".

The drive restores the carrier frequency set immediately after the IGBT temperature becomes lower than the alarm threshold.

0.42 : Motor number of poles

 :

Enter the motor number of poles.

Ex.: 2P (1) : 2 pole motor (3000 min⁻¹),
4P (2) : 4 pole motor (1500 min⁻¹),
6P (3) : 6 pole motor (1000 min⁻¹)....etc.

In factory settings, the value of **0.42** is at "Auto (0)", and the variable speed drive automatically calculates the number of poles according to the rated frequency (**0.47**) and to the load rated speed (**0.45**).

 :

Enter the number of poles indicated on the motor plate. In factory settings, the value of **0.42** is at "6 POLE (3)".

0.43 : Cos φ 
Encoder phase angle 

 :

The cos φ is automatically measured during the rotation auto-tuning phase (**0.40** = 2), and it is set to this parameter. If this procedure may not be realised, enter the value of cos φ set on the motor name plate.

Note : After an auto-tuning **0.40** = 2 in closed loop, the value of cos φ may not be manually modified.

 :

In order to correctly control a servo motor, one must set the phase angle between the rotor and the encoder position.

This phasing out is automatically set during an auto-tuning **0.40** = 1 or 2.

This parameter may be modified at anytime, and it is immediately taken into consideration by the variable speed drive.

Note :

• After a return to factory settings, the value of **0.43** is not modified.

• For a UNIMOTOR motor manufactured starting from 2002, the encoders are stalled in factory (**0.43** = 0).

0.44 : Motor rated voltage

It is the rated voltage registered on the motor plate.

0.45 : Loaded motor rated speed 
Motor thermal time constant 

 :



This is the loaded motor speed marked on the name plate.

Note : The slip compensation is not active if **0.45** reaches 0 or at the synchronous speed value.

 :

This parameter allows the setting of the motor thermal protection.

For the UNIMOTOR, set the coil thermal time constant (table B2.2 of the technical catalogue ref. 3863) in **0.45**.

0.46 : Motor rated current 
Stall current 

 :


This is the motor rated current value marked on the motor name plate. The overload starts from this value.

 :

This is the stall current value (STALL CURRENT) marked on the motor name plate.

CAUTION :

In the case of an ambient temperature of 50°C, check that the value of **0.46** does not exceed the table value of section B3.3.

 • In order to avoid the fire risks when the motor is overloaded, **0.46** must be correctly set.

0.47 : Motor rated frequency 

This is the point when the motor operation goes from the constant torque to the constant power.

In standard operation, it is the frequency marked on the motor name plate.

UNIDRIVE SP Commissioning

0.48 : Operation mode selection

Allows selection of the operating mode.

To modify the operating mode, follow the procedure described in section G9.

The factory drive settings are automatically adjusted according to the selected operating mode.

CL.VECt (2) : operation in vector control in closed loop with encoder.

Servo (3) : operation in Servo mode with autosynchronous motor (servo).

REgEn (4) : regenerative mode, not used.

Note :

- Returning to the factory settings does not modify the operating mode.
- The operating mode modification may be realised only when the variable speed drive is stopped.

0.49 : Access level 2 and safety code storing

L1 (0) : access level 1. Only the parameters of menu 0 (**0.00 to 0.50**) are accessible to the keyboard.

L2 (1) : access level 2. The parameters of all menus are accessible to the keyboard.

Loc (2) : used to store or to reactivate a safety code (see the procedure described in section G12).

0.50 : Software version

Indicates the first 2 digits of the software version installed in the variable speed drive.



UNIDRIVE SP Commissioning

H3 - Other Menus

! Before attempting to adjust the variable speed drive using the help diagrams, it is essential to have respected the instructions for installation, connection and commissioning described in previous chapters.

Moreover, in order to ensure product and personal safety, precautions must be taken when setting parameters marked by the symbol **!**.

For more details, see document ref. 3655 available in software version on the CD ROM delivered with the variable speed drive.


H3.1 - Menus

According to the application, it is sometimes necessary to optimise the variable speed drive in addition to that accessible by menu 0.

For this reason, all variable speed drive functions have been grouped into menus (22 menus).

For the winding/unwinding application with analogue references, the user has at his disposal setting diagrams, as well as parameters explanations of menus 18, 19 and 20 related to the application.

Meanwhile, all basic functions of the variable speed drive and of the SM modules remain accessible by menus 1 to 17, 21 and 22 (Diagrams).

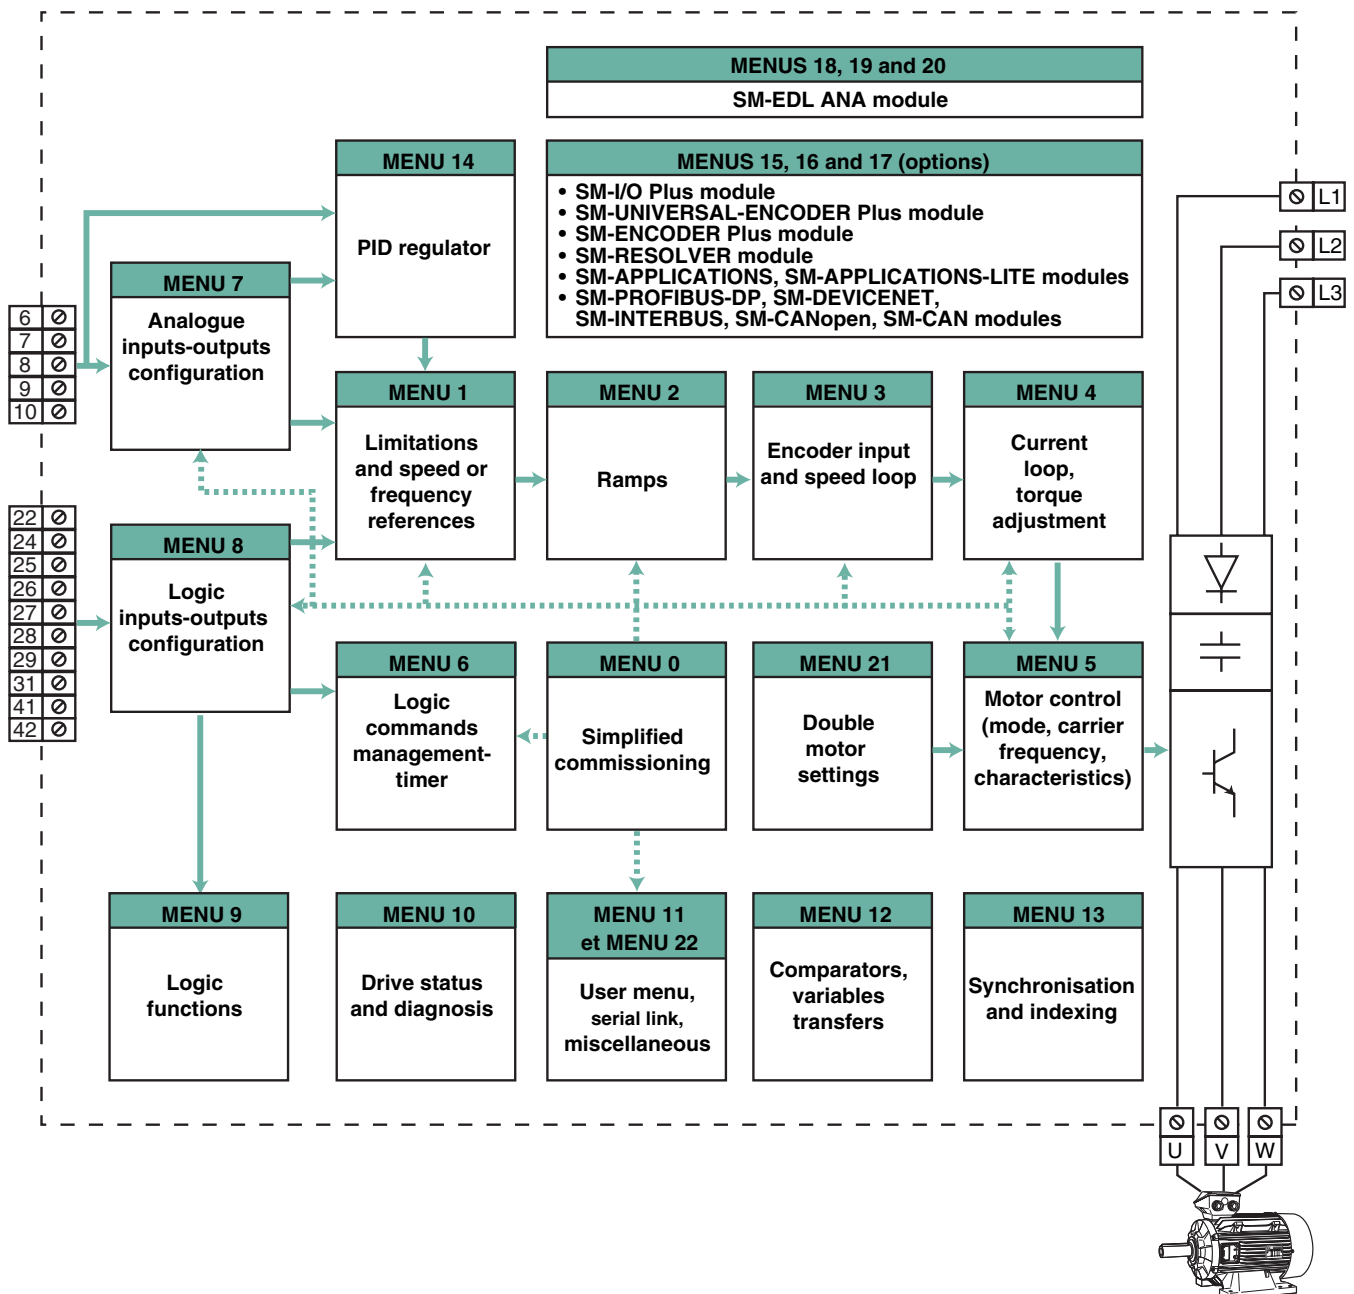

UNIDRIVE SP Commissioning


H3.2 - Types of parameters

For each menu, a diagram schematises the menu parameter function.

The variation ranges that may not be schematised are integrated into a table below each diagram.

Symbols :

1.06 : A number in bold format makes reference to a parameter.

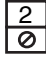 : Makes reference to an input or output terminal of the variable speed drive.


• Reading/writing parameters

1.21 : The parameters contained in a rectangle or L-E identified parameters are Reading and Writing accessible parameters.

They can be assigned for connection to :

- digital inputs for bit parameters,
- analogue inputs for non-bit parameters,
- internal function outputs (comparators, logic operation, arithmetic operation ...).


• Reading parameters

 : The parameters contained in a lozenge or LS identified parameters are read only parameters.

They are used to give information regarding the operation of the variable speed drive and they may be connected to :

- digital inputs for bit parameters,
- analogue inputs for non-bit parameters,
- internal function outputs (comparators, logic operation, arithmetic operation ...).

• Reading / Assignment parameters

 : The parameters contained in a hexagon or L-A identified parameters are parameters that may not be assigned to digital inputs (for the bit parameters) or to analogue inputs (for the non-bit parameters).

 
This type of parameter cannot be thus directly modified.

• Binary parameters

On the keyboard, they take the value " OFF " when they are disabled, and " On " when they are enabled.

By serial link, they take the value " 0 " when they are disabled, and "1" when they are enabled.


For a simplified reading of the diagrams, these parameters are represented by contacts, whose position corresponds to the factory settings.



• Decimal parameters

On the keyboard, they take a mnemonic value (ex.: A1.A2, Pr...), and by serial link, they take a value 0, 1, 2, 3 etc...

For a simplified reading of the diagrams, these parameters are represented by contacts, whose position corresponds to the factory settings.

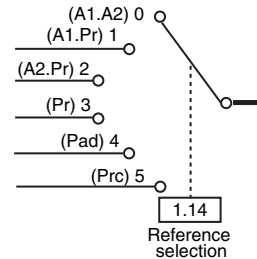

• Digital parameter

A numeric parameter is used to :


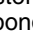
- set a value that will be taken into account in the variable speed drive calculations (ex. : Irated name **5.09**),
- give indications on the variable speed drive operation (ex.: before ramp reference **1.03**).

The maximum value of certain parameters may vary depending on the type of variable speed drive and on the operating mode used, or depending on the influence of other parameters.

To simplify, the maximum values of these parameters are expressed by the mnemonics whose explanation is detailed in section H3.5.

Examples : REF. MAX, I MAX UTIL, U_{AC} MOT MAX ETC...


• " Source " parameters

A source parameter gives the possibility to the user to assign a parameter as a function input. After the modification of a source, press the Reset  key for its reception by the variable speed drive (or store by **0.00** = 1000 + ).

The source value corresponds to :

$$\frac{\text{Input value} \times 100 \%}{\text{Max. value of the source parameter}}$$

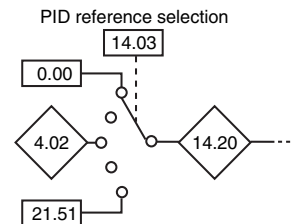

Example :



14.20 = 100 % when **4.02** is equal to its maximum theoretical value.

UNIDRIVE SP Commissioning

• " Destination " parameter


A destination parameter gives the possibility to the user to assign a parameter as a function output. After the modification of a destination, press the Reset  key for its reception by the variable speed drive **0.00** = 1000 + .

The destination value corresponds to :

- 0 or 1 if a binary parameter is assigned as destination,
- $\frac{\text{Output value} \times \text{max. value of the destination parameter}}{100 \%}$

if a non binary parameter is assigned as destination.

Example::

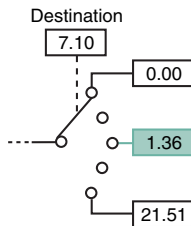

When the function output is at 100 %, **1.36** reaches its maximum theoretical value, that is REF MAX.

Note : If a protected parameter is assigned as destination, this assignment will not be taken into account.

H3.3 - Factory settings

The operation of the variable speed drive in factory settings is represented by a green line.

For the sources and destinations, the parameters assigned in factory settings are represented with green.

H3.4 - Use

• Assignments :

- Unknown parameter :

If an unknown parameter is assigned to a source or in a destination, then the value 0 will be considered by the variable speed drive.


- Double assignment:

A parameter cannot be assigned 2 times as destination. In case of involuntary double assignment, the variable speed drive starts "dESi" by default, and it persists until the assignment-related problem is settled (except menus 15, 16 and 17).

Note : It may be necessary to check the parameters already assigned in factory settings, represented with green on the diagrams.

- Association :

Do not assign a destination parameter in a source parameter.

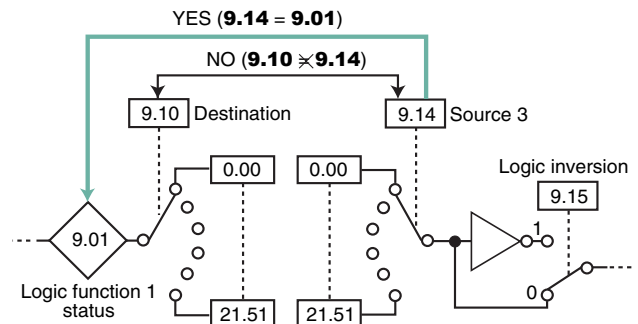

• After the modification of a destination, the former destination parameter returns to zero value, save the case of a return to factory value. In case of a transfer by SMARTCARD to the variable speed drive, the former destination parameter preserves its former value, unless its value is modified by SMARTCARD.

UNIDRIVE SP Commissioning

H3.5 - Definitions of maximum values

Range	Definition
REF MAX [1] : 3000.0 Hz [2] and [3] : 40000.0 min ⁻¹	Maximum frequency reference ([1]) or maximum speed reference ([2] and [3]) • If 1.08 = 0 : REF MAX = 1.06 • If 1.08 = 1 : REF MAX = 1.06 or - (1.07) If the second motor is selected, the limits correspond to 21.01 (instead of 1.06) and 21.02 (instead of 1.07).
LIM N MAX 40000.0 min ⁻¹	Maximum applied to the speed reference limitations A maximum limit may be applied to the speed reference so that the encoder rated frequency should not exceed 500 kHz. The maximum is defined by: $\text{LIM N MAX (min}^{-1}\text{)} = 410\text{kHz} \times 60 / \text{ELPR}$ $= 2.46 \times 10^7 / \text{ELPR}$ ELPR quadrature encoder : number of points by turn ELPR frequency encoder / direction : number of points by turn / 2 ELPR resolver : resolution / 4 ELPR SinCos : number of sinusoids by turn ELPR serial link encoder : resolution / 4
N MAX 40000.0 min ⁻¹	Maximum speed This maximum is used for certain speed-related parameters of menu 3. $\text{N MAX} = 2 \times \text{REF MAX}$
I_N MAX 9999.99 A	Maximum motor rated current $I_N \text{ MAX} \leq 1.36 \times \text{Maximum variable speed drive rated current (11.32)}$
I_{MAX} VAR 9999.99 A	Maximum variable speed drive current The maximum variable speed drive current corresponds to the level "OIAC" overvoltage default start, such as: $I_{\text{MAX VAR}} = \text{Maximum variable speed drive rated current (11.32)} / 0.45$
LIM IM1 MAX 1000.0 %	Maximum current limit set by motor 1 [1] and [2] : $\text{LIM IM1 MAX} = \left[\frac{\left[\frac{I_{\text{MAX}}}{\mathbf{5.07}} \right]^2 + \cos^2 \varphi - 1}{\cos \varphi} \right] \times 100 \%$ <p>Note: I_{MAX} corresponds to 1.75 x (I_{sp} with maximum overload) if the current set in 5.07 is lower or equal to the maximum value of the current with maximum overload given in 11.32, otherwise I_{MAX} corresponds to 1.1 x (I_{sp} with reduced overload). Cos φ = 5.10</p> [3] : $\text{LIM IM1 MAX} = \frac{I_{\text{MAX}}}{\mathbf{5.07}} \times 100 \%$ <p>Nota : I_{MAX} corresponds to the variable speed drive rated current (11.32) x 1.75.</p>
LIM IM2 MAX 1000.0 %	Maximum current limit set for motor 2 $\text{LIM IM2 MAX} = \left[\frac{\left[\frac{I_{\text{MAX}}}{\mathbf{21.07}} \right]^2 + \cos^2 \varphi - 1}{\cos \varphi} \right] \times 100 \%$ <p>Note : I_{MAX} corresponds to 1.75 x (I_{sp} with maximum overload) if the current set in 21.07 is lower or equal to the maximum value of the maximum overload current given in 11.32 unless I_{MAX} corresponds to 1.1 x (I_{sp} with reduced overload). Cos φ = 21.10</p> [3] : $\text{LIM IM1 MAX} = \frac{I_{\text{MAX}}}{\mathbf{21.07}} \times 100 \%$ <p>Note : I_{MAX} corresponds the variable speed drive rated current (11.32) x 1.75.</p>
I_{ACTIVE} MAX 1000.0 %	It is the value of LIM IM1 MAX or LIM IM2 MAX depending on the settings used (motor 1 or 2).
I_{MAX} UTIL 1000.0 %	Limitation of the current parameters by user (4.24) The user may select a maximum for 4.08 (torque reference) and 4.20 (load percentage) to scale the analogue inputs / outputs with 4.24 . This maximum is limited by LIM IM1 MAX or LIM IM2 MAX depending on the selected motor.

UNIDRIVE SP Commissioning

Definitions of maximum values (continued)


Range	Definition
U_{AC} MOT MAX 690V	Maximum output voltage It is the maximum motor voltage that can be used: TL: 240 V T : 480 V TM : 575V TH : 690V
U_{AC} OUT MAX 930 V	Maximum output voltage This value corresponds to the maximum voltage produced by the variable speed drive, including the operation in quasi-square modulation: $U_{AC} \text{ OUT MAX} = 0.78 \times U_{DC} \text{ MAX}$ TL: 325 V T : 650 V TM : 780V TH : 930V
SEUIL U_{DC} MAX 1150 V	DC voltage threshold TL: 400 V T : 800 V TM : 950V TH : 1150V
U_{DC} MAX 1190 V	Maximum DC bus voltage It is the maximum voltage of the DC bus TL: 415 V T : 830 V TM : 995V TH : 1190V
P MAX 9999.99 kW	Maximum power in kW It is the maximum power at U _{AC} OUT maximum, maximum current controlled and power factor equal to 1. $P \text{ MAX} = \sqrt{3} \times U_{AC} \text{ OUT MAX} \times I_N \text{ MAX} \times 1.75$



UNIDRIVE SP Commissioning

H4 - Winding/unwinding diagram with analogue reference


• Allocation of digital inputs and setting of the speed reference

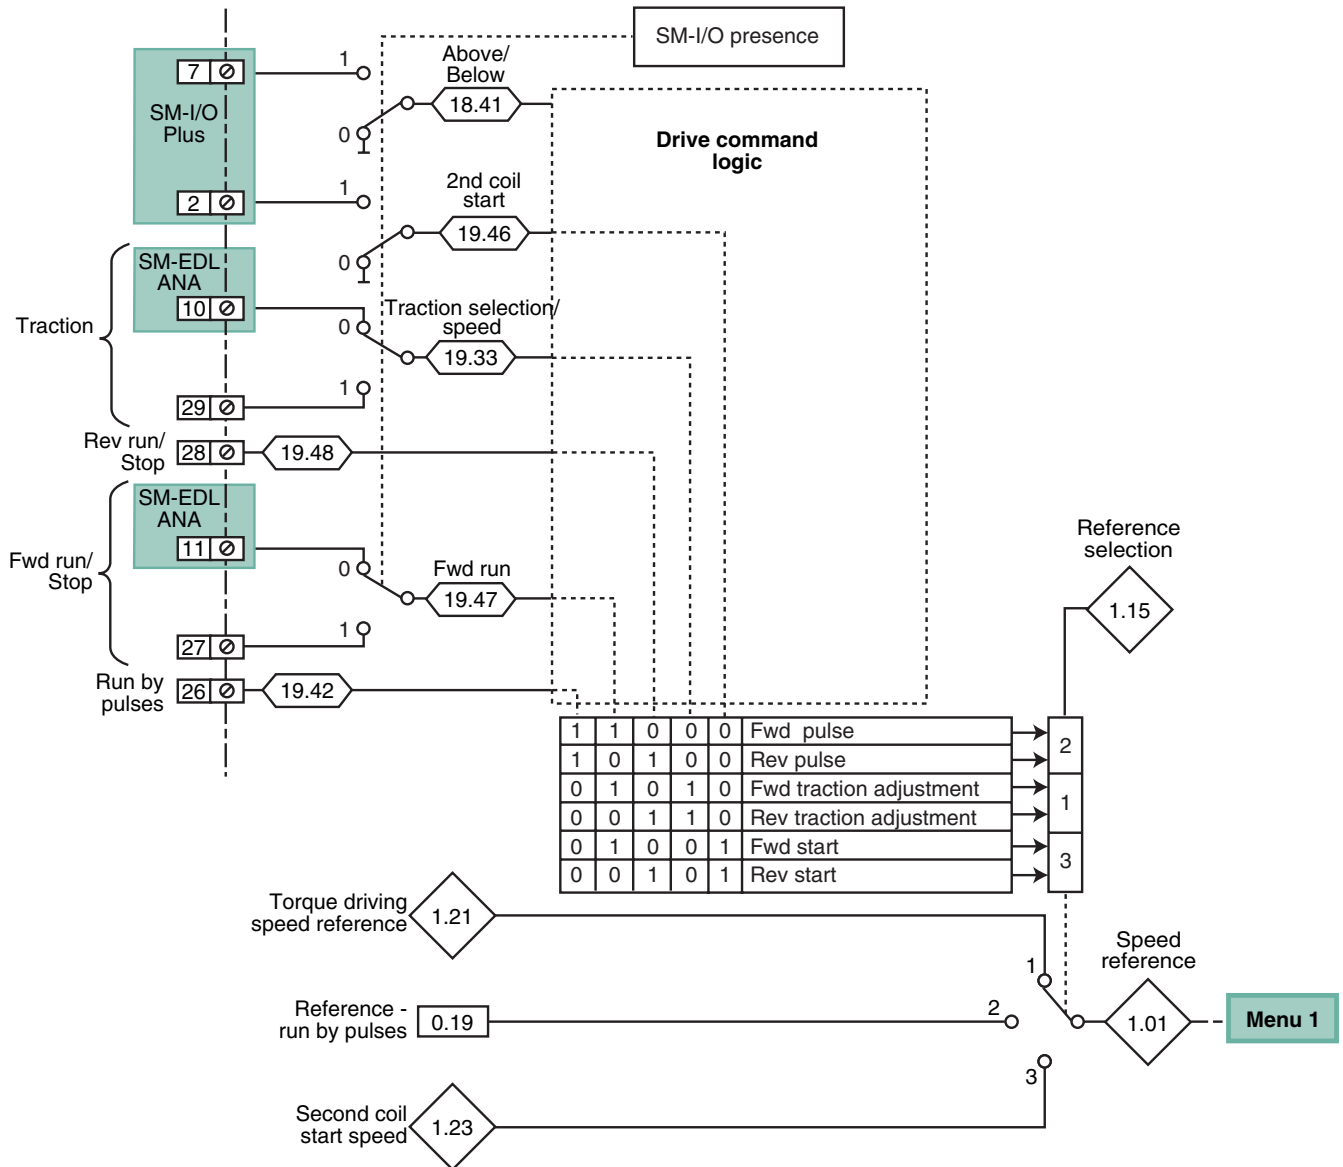

Parameters	Variation range		Factory settings	
0.19	0 to V_{max} motor (19.09)		150 min ⁻¹	
1.01	\pm REF. MAX		-	
1.21	0 to 1.1 x V_{max} motor (19.09)		-	
1.23	0 to V_{max} motor (19.09)		-	
18.41	OFF (0) or On (1)		0	
19.33 - 19.42 19.46 to 19.48	OFF (0) or On (1)		-	

UNIDRIVE SP Commissioning


•Tension reference

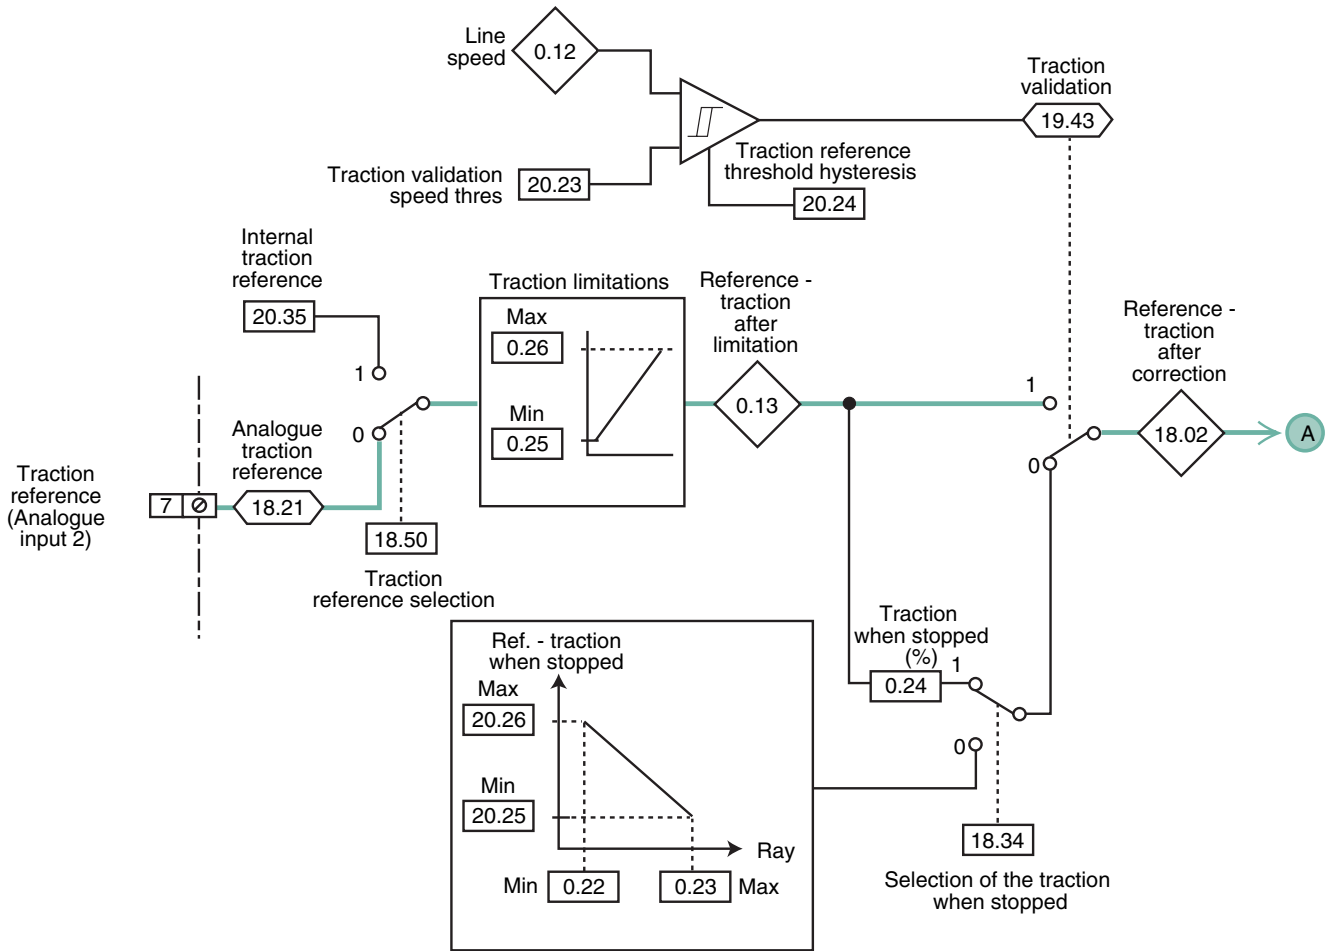

Parameters	Variation range		Factory settings	
0.12	±32767 (x 0.1 m.min ⁻¹)		-	
0.13	0 to 32767 N		-	
0.22	1 to 3276 mm		1 mm	
0.23	2 to 3276 mm		2 mm	
0.24	0 to 100 %		50 %	
0.25	0 to 1000 (x0.1 %)		0	
0.26	0 to 32767 N		1 N	
18.02	0 to 32767 points		-	
18.21	± 32767 points		-	
20.23	0 to VL _{max} (0.20)		2	
20.24	0 to VL _{max} (0.20)		1	
20.25 - 20.26	0 to 100 %		0	
20.35	± 32767 points		0	

UNIDRIVE SP Commissioning


•Tension correction - PID with force sensor

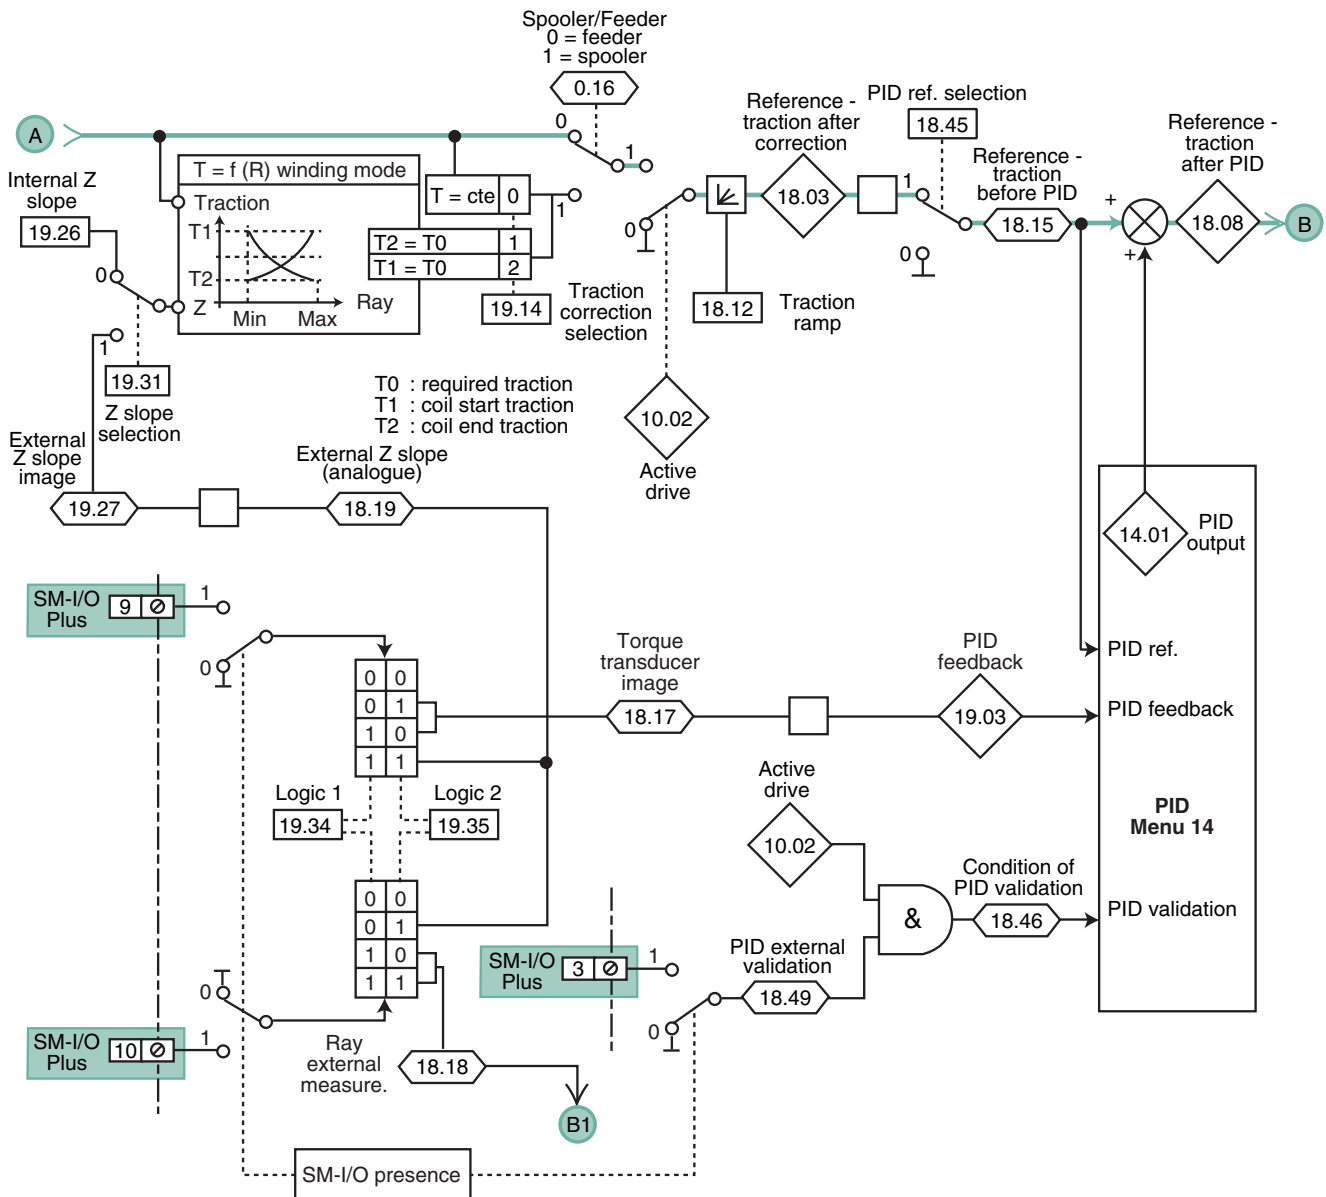

Parameters	Variation range		Factory settings	
18.46	OFF (0) or On (1)		-	-
14.01	± 100 %		-	-
18.03 - 18.08 18.15 - 19.03	0 to 32767 points		-	-
18.12	0 to 120 seconds		-	10s
18.17 to 18.19	± 32767 points		-	-
19.34	OFF (0) and On (1)		-	1
18.49 - 19.35	OFF (0) and On (1)		-	0
19.14	0 to 2		-	0
19.26	100 to 1000 points		-	100 points
19.27	0 to 1000 points		-	-

UNIDRIVE SP Commissioning


• Radius calculation - Radius initialisation

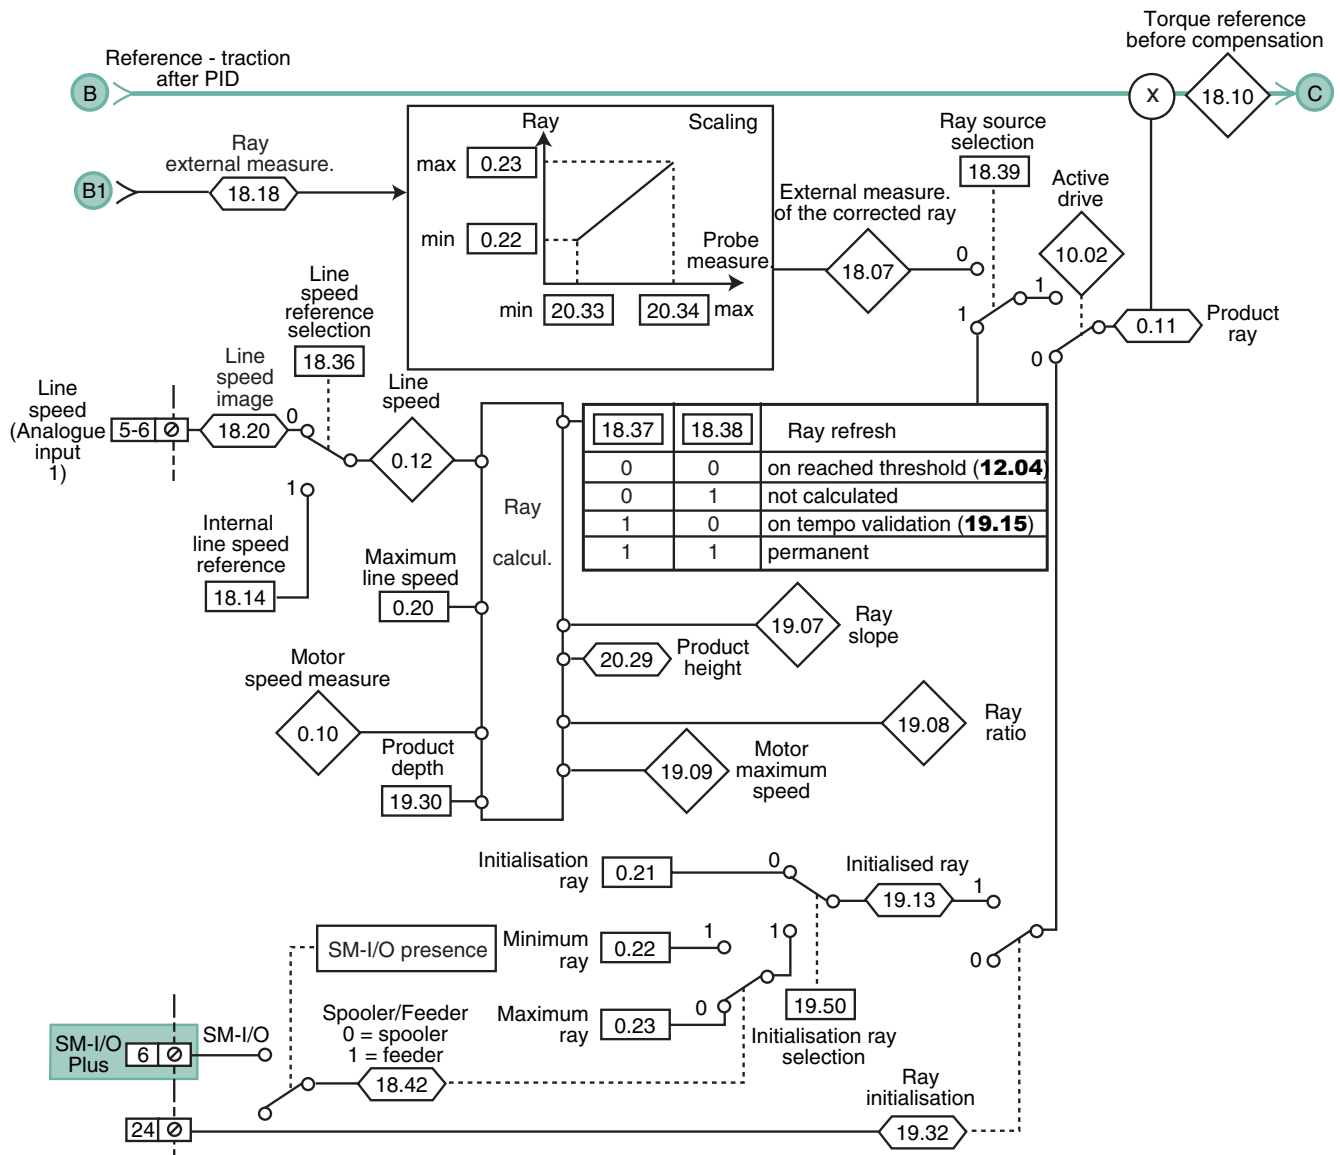

Parameters	Variation range		Factory settings	
0.10	± REF. MAX		-	
0.11 - 20.29	0 to 32767 mm		-	
0.12 - 18.20	± 32767 (x 0.1 m.min ⁻¹)		-	
0.20	0 to 32767 (x 0.1 m.min ⁻¹)		1 (x 0.1 m.min ⁻¹)	
0.21 - 0.22	1 to 3276 mm		1 mm	
0.23	2 to 3276 mm		2 mm	
10.02 - 19.32	OFF (0) or On (1)		-	
18.07 - 18.10 - 19.13	0 to 10000 points		-	
18.14 - 20.33	0 to 32767 points		0	
18.18	± 32767 points		-	
18.36 - 18.37 - 18.38 - 19.50	OFF (0) or On (1)		0	
18.39 - 18.42	OFF (0) or On (1)		1	
19.07	0 to 32767 (x 0.1 points/second)		-	
19.08	100 to 1500 (x 0.01 points)		-	
19.09	1 to 32767 min ⁻¹		-	
19.30	0 to 32767 μm		0	
20.34	0 to 32767 points		32767 pts	

UNIDRIVE SP Commissioning


• Inertia compensation

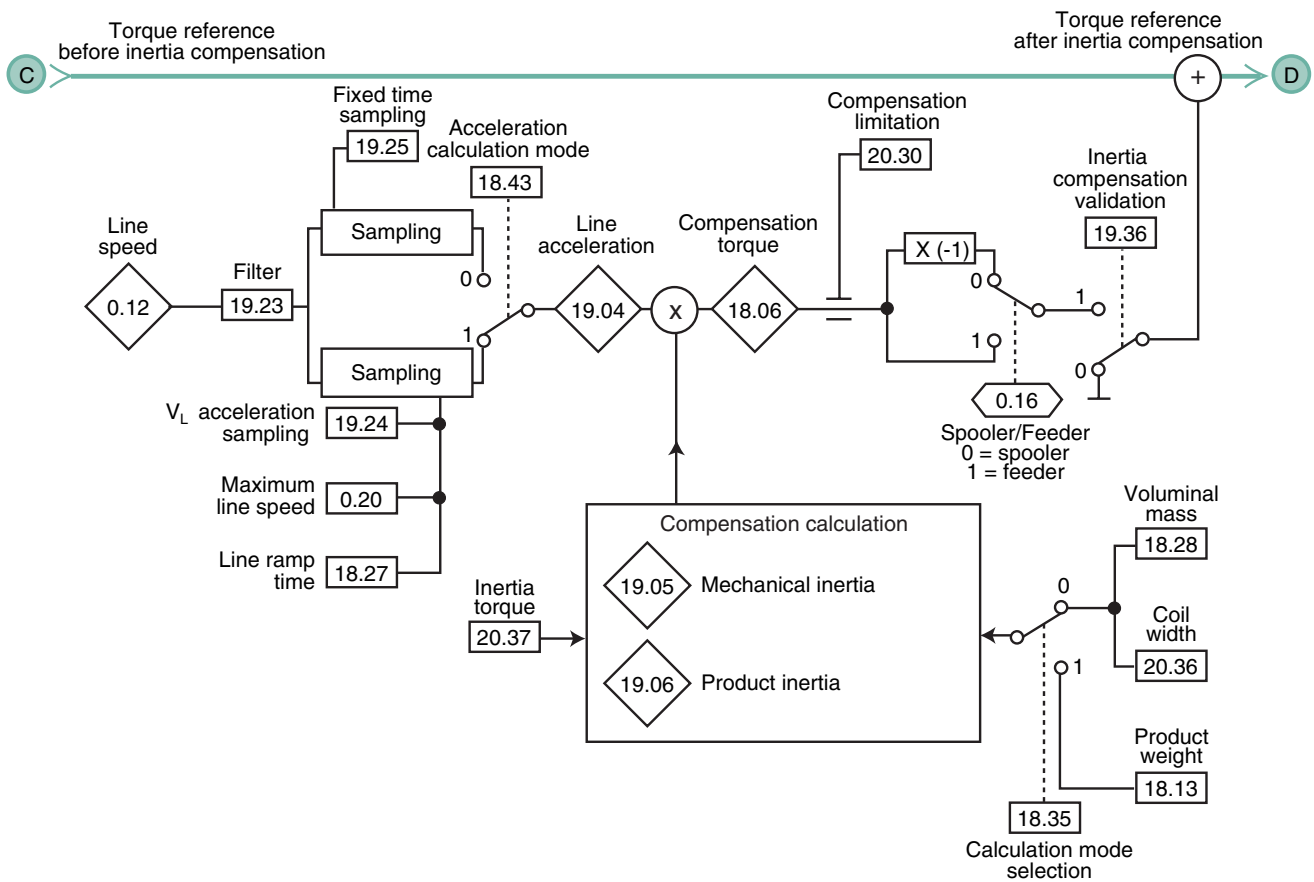

Parameters	Variation range		Factory settings	
0.12	±32767 (x 0.1 m.min ⁻¹)		-	
0.20	0 to 32767 (x 0.1 m.min ⁻¹)		1 (x 0.1 m.min ⁻¹)	
18.06	0 to 10000 points		-	
18.13	1 to 32767 (x 0.1 kg)		1 (x 0.1 kg)	
18.27	0 to 32767 (x 0.01 second)		1 (x 0.01 second)	
18.28	1 to 32767 (x 0.1 kg/m ³)		1 (x 0.1 kg/m ³)	
19.04	± 32767 points		-	
19.05 - 19.06	0 to 32767 points		-	
19.23	± 200 points		0 pts	
19.24	0 to 32767 ms		1 ms	
19.25	1 to 32767 ms		1 ms	
20.30	0 to 500 (x 0.01 %)		10 (x 0.01 %)	
20.36	1 to 32767 mm		1 mm	
20.37	1 to 32767 (x 0.1 kg.m ²)		1 (x 0.1 kg.m ²)	

UNIDRIVE SP Commissioning


• Torque reference scaling and mechanical losses measurement

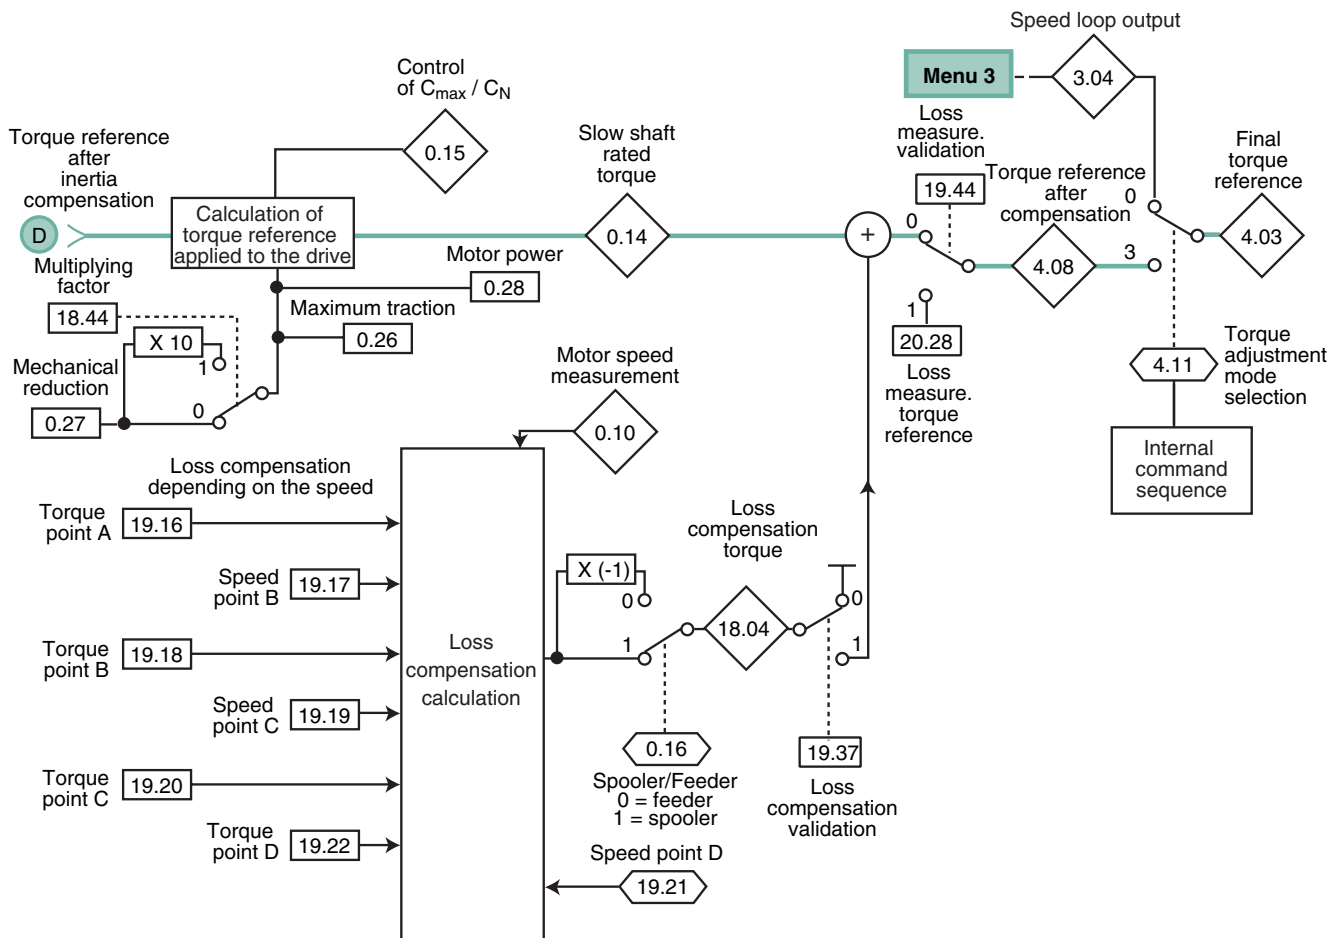


Parameters	Variation range		Factory settings	
0.10	± REF. MAX		-	
0.14	± Cmax (x 0.1 N.m)		-	
0.15	0 to 32767 %		-	
0.26	0 to 32767 N		1N	
0.27	1 to 32767 (x 0.01)		1 (x 0.01)	
0.28	1 to 9000 (x 0.01 kW)		1 (x 0.01 kW)	
3.04 - 4.03	± I _{ACTIF} MAX (%)		-	
4.08	± I _{MAX} UTIL. (%)		-	
4.11	0 to 4		-	
18.04	0 to 500 (x 0.1 %)		-	
18.42	OFF (0) or On (1)		1	
19.17	0 to Vmax motor (19.09)		100 min ⁻¹	
19.18	0 to 500 (x 0.1 %)		10 (x 0.1 %)	
19.19	0 to Vmax moteur (19.09)		200 min ⁻¹	
19.20	0 to 500 (x 0.1 %)		15 (x 0.1 %)	
19.21	0 to Vmax moteur (19.09)		-	
19.22	0 to 500 (x 0.1 %)		20 (x 0.1 %)	
20.28	0 to 1500 (x 0.1 %)		0 (x 0.1 %)	

UNIDRIVE SP Commissioning

• "Coil end" function

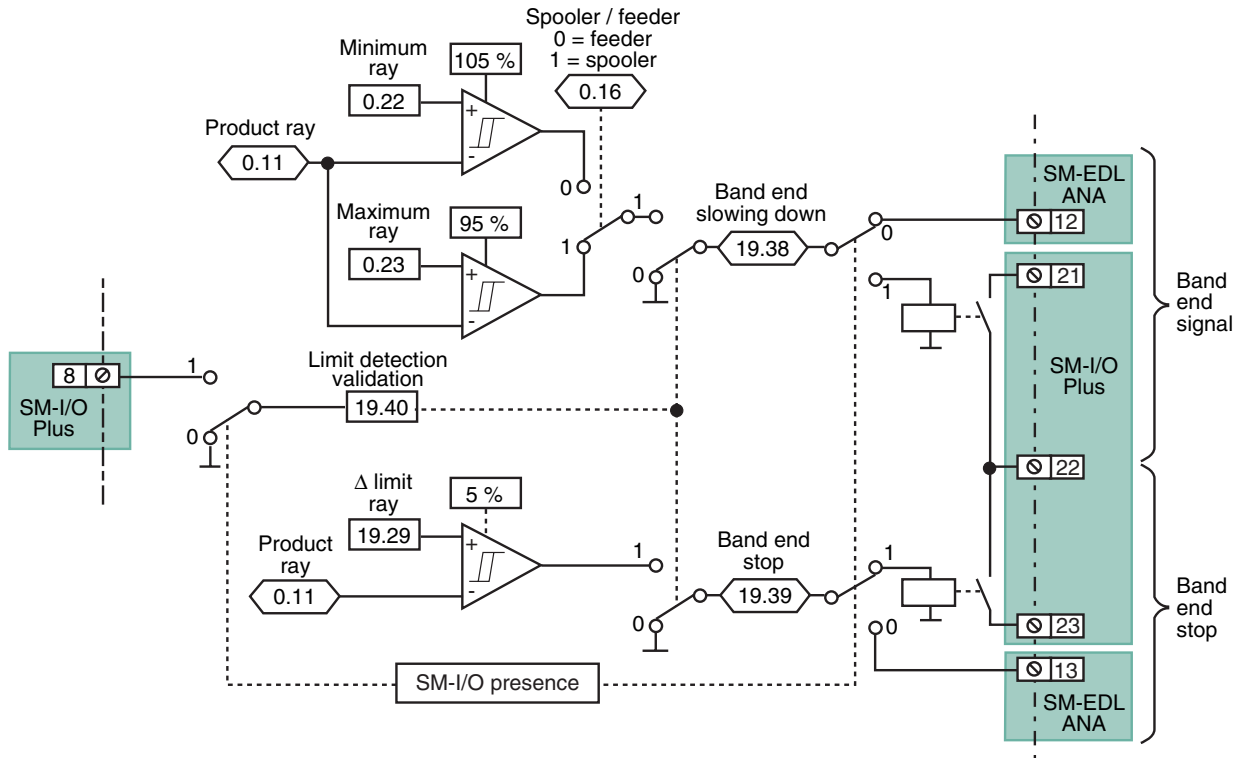

• Defaults management

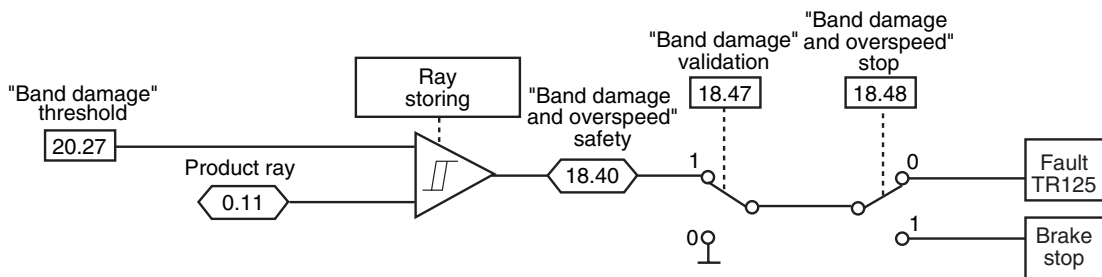

Parameters	Variation range		Factory settings	
0.11	0 to 32767 mm		-	
0.22	1 to 3276 mm		1 mm	
0.23	2 to 3276 mm		2 mm	
18.40 - 19.38 - 19.39	OFF (0) or On (1)		-	
19.29	0 to 32767 mm		1 mm	
20.27	1 to 100 %		20 %	

UNIDRIVE SP Commissioning

H5 - Explanation of analogue winding/unwinding parameters

H5.1 - Explanations of Menu 18 parameters

18.01 : Radius

It indicates the coil radius (converted into points).

18.02 : Tension reference before correction

Tension reference image before possible correction.

18.03 : Tension reference after correction

Tension reference image after correction

18.04 : Losses compensation torque

It indicates the compensation torque of the mechanical losses issued from an internal calculation.

18.05 : Line speed

It indicates the line speed.

18.06 : Inertia compensation torque

It indicates the inertia compensation torque issued from an internal calculation.

18.07 : External measurement of the correct radius

Reading the radius external measurement if **18.39** = 0.

18.08 : Tension reference after PID

It indicates the tension reference after the PID loop.

18.09 : Tension reference after limitation

It indicates the tension reference in " Newton " after the limitations (established by the maximum tension **18.24** and the minimum tension **20.22**).

18.10 : Torque reference before compensation

It indicates the motor torque reference before inertia compensation.

18.11 : Not used

18.12 : Tension ramp

This ramp acts on the tension reference. It will be used for the products sensitive to the rapid transient tension when there is a reference modification by the operator.

18.13 : Product mass

If the inertia compensation is necessary, set the product mass in kg x 10 (at maximum radius).

18.14 : Internal line speed reference

It allows to set an internal line speed reference.
The value is taken into consideration when **18.36** = 1.

18.15 : Tension reference before PID

It indicates the tension reference before PID.

If **18.45** = 1, this parameter indicates the tension reference issued from **18.03**. If **18.45** = 0, the value of **18.15** may be set by the user, and it will be used as reference for PID.

18.16 : Motor power

Power plated on the motor (kW) x 100.

18.17 : Force sensor image

If an force sensor is used, the signal will be applied on the analogue input 4 (terminal 9 SM-I/O).

In order to validate the taking into consideration of **18.17**, set :
19.34 = 1 and **19.35** = 0, or
19.34 = 0 and **19.35** = 1

18.18 : Radius external measurement

The radius may be measured by a detector, the signal of which will be applied on the analogue input 5 (terminal 10 SM-I/O).

In order to validate the taking into consideration of **18.18**, set: **19.34** = 1.

18.19 : External Z slope (analogue)

The value of Z defines the minimum and maximum radius tension report :

- T1 = minimum radius tension,
- T2 = maximum radius tension,
- Z = T1 / T2.

It may be applied on the analogue inputs 4 or 5 (terminal 9 or 10 SM-I/O).

In order to validate the taking into consideration of **18.19**, set as follows :

- if the signal is received on the analogue input 4 (terminal 9 SM-I/O) : **19.34** = 1 and **19.35** = 1.
- if the signal is received on the analogue input 5 (terminal 10 SM-I/O) : **19.34** = 0 and **19.35** = 1.

For more information, see **19.14**.

18.20 : Line speed image

It indicates the line speed image that is issued from the analogue input 1 (terminal 5 and 6).

18.21 : Analogue tension reference

It indicates the tension reference image that is issued from the analogue input 2 (terminal 7). The value in this parameter must be of 32767 points when the reference is 10V.

18.22 : Coil minimum radius

Set the radius corresponding to the lowest radius on which the product will be wound or unwound.

CAUTION :

- The maximum/minimum radius ratio must not exceed 15.
- Set **18.23** "maximum radius" before **18.22** "minimum radius".

18.23 : Coil maximum radius

Set the radius corresponding to the highest radius on which the product will be wound or unwound.

CAUTION :

- The maximum/minimum radius ratio must not exceed 15.

UNIDRIVE SP Commissioning

18.24 : Maximum tension

Maximum tension settings wanted on the product, when the reference is maximum (**18.21** or **20.35**)

18.25 : Maximum line speed

Set the maximum speed (VLmax) at which the line must operate.

Setting value : line speed in m.min⁻¹ x 10.

18.26 : Mechanical reduction

Total reduction (between the driven shaft and motor) x 100.

18.27 : Line ramp time

If the inertia compensation is validated, this parameter sets the drive on the acceleration time 0 at the maximum line speed (period that must be identical for the deceleration).

Set this period in seconds x 100.

18.28 : Voluminal mass

If the inertia compensation is necessary, set the product voluminal mass in kg/m³x10.

18.29 : Bus control word

Drive control by field bus. It allows commands to the variable speed drive by only one parameter. If it is necessary, see section I.

	Word	Activated parameter	Designation
Bit 0	18.29 = 1	10.33	Drive reset
Bit 1	18.29 = 2	19.47	Run forward/Stop
Bit 2	18.29 = 4	19.42	Pulse input reference validation
Bit 3	18.29 = 8	19.48	Run reverse/Stop
Bit 4	18.29 = 16	-	-
Bit 5	18.29 = 32	18.42	Winder/Unwinder
Bit 6	18.29 = 64	19.33	Tension /speed selection
Bit 7	18.29 = 128	19.32	Radius initialisation
Bit 8	18.29 = 256	19.40	Coil end detection validation
Bit 9	18.29 = 512	18.41	On/Under
Bit 10	18.29 = 1024	-	-
Bit 11	18.29 = 2048	-	-
Bit 12	18.29 = 4096	-	-
Bit 13	18.29 = 8192	-	-

18.30 : Status word by bus

Drive control by field bus. It allows information on the drive status to be obtained by a single parameter. If it is necessary, see section I.

	Word	Activated parameter	Designation
Bit 0	19.30 = 1	18.42	Winder/Unwinder
Bit 1	19.30 = 2	19.33	Tension/Speed selection
Bit 2	19.30 = 4	19.47	Run forward/Stop
Bit 3	19.30 = 8	19.48	Run reverse/Stop
Bit 4	19.30 = 16	19.42	Pulse input reference validation
Bit 5	19.30 = 32	19.43	Tension validation
Bit 6	19.30 = 64	19.38	Coil end slowing down
Bit 7	19.30 = 128	19.39	Coil end stop
Bit 8	19.30 = 256	18.40	"Overspeed and band breaking" safety
Bit 9	19.30 = 512	10.01	Ready drive
Bit 10	19.30 = 1024	10.02	Active output drive
Bit 11	19.30 = 2048	10.03	Zero speed
Bit 12	19.30 = 4096	10.08	Active current limitation
Bit 13	19.30 = 8192	10.14	Reverse rotation

18.31 to 18.33 : Not used

18.34 : Tension limit selection

0 : the tension limit reference is determined according to the coil radius (limited by **20.25** and **20.26**).

1 : the tension limit reference corresponds to the parameter **19.11** (percentage of **18.09** tension reference).

18.35 : Selection of the inertia compensations calculation mode

Variation range : 0 or 1

Factory settings : 0

The compensation torque is radius function

$$= \left[\frac{r^3}{K_1} + \frac{K_2}{r} \right] \times \frac{dV_L}{dt}$$

with :

r = **20.31**

K_1 = **19.05**

K_2 = **19.06**

V_L = **18.05**

0 : the K_1 coefficient is calculated starting from the coil width and the voluminal mass.

1 : the K_1 coefficient is calculated starting from the product mass.

18.36 : Linear speed reference selection

0 : the line speed reference taken into consideration, is issued from the analogue input 1 (**18.20**).

1 : the line speed reference taken into consideration, corresponds to the value calculated in **18.14**.

UNIDRIVE SP Commissioning

18.37 : Selector 1

18.38 : Selector 2
(radius refreshment)

According to the parameter settings of selectors 1 and 2, one may have the possibility to use the radius calculated as follows:

18.37	18.38	Radius refreshment
0	0	<ul style="list-style-type: none"> On a reaching threshold (12.04). It allows to take into consideration the radius calculated only starting from a threshold established by 12.04 expressed in % of the motor speed (3.02)
0	1	Not calculated
1	0	<ul style="list-style-type: none"> Following a time out, the calculated radius refreshment is set by a timer set in 19.15
1	1	<ul style="list-style-type: none"> Permanently, the calculated radius is constantly taken into account by the variable speed drive

18.39 : Radius source selection

0 : use of the external radius measurement with the help of a sensor, the signal of which is applied on terminal 10 SM-I/O.
1 : use of the radius calculated internally.

18.40 : " Band breaking and overspeed " safety

It indicates the system status, that is the product breaking and the motor overspeeding.

18.41 : On/Under

This parameter allows to reverse the direction of the torque when in " tension " or the direction of rotation of the coil when in "speed regulation".

The digital input terminal 7 (SM-I/O) allows selection of the product arrival on or under the coil.

0 : on.
1 : under.

18.42 : Winder/Unwinder

0 : unwinder.

The different compensations derived from the motor torque reference. The tension correction is not effective.

1 : winder.

The various compensations are added to the motor torque reference.

18.43 : Acceleration calculation mode

This parameter selects the acceleration calculation mode.

0 : sampling in set time.

The inertia compensation will be effective only if the line acceleration (dV_L/dt) is detected in a period of time higher or equal to the time set in 19.25.

1 : sampling on set acceleration.

The inertia compensation will be effective only for a constant acceleration set by the maximum line speed V_{Lmax} (18.24) and by the ramp time V_L (18.27). The sampling is made according to a period set in 19.24..

18.44 : Multiplying factor

This parameter allows to multiply by 10 the reduction ratio 18.26. Allowing a variation range of 0 to 3276.7.

18.45 : PID reference selection

0 : the PID reference is set with the help of the drive keyboard in 18.15.

1 : the tension reference displayed in 18.15 is issued from the tension reference after correction (18.03).

18.46 : PID validation condition

This parameter allocated to the PID validation source (14.09 = 1846) is 1 when the following conditions are put together :
- digital input 3 (SM-I/O) validated (18.49 = 1),
- active UMW drive (10.02 = 1).

18.47 : " Coil breaking " validation

0 : deactivated "coil breaking" safety.

1 : activated "coil breaking" safety.

18.48 : " Coil breaking and overspeed " stop

This parameter allows to choose the stop type on band breaking or motor overspeed.

0 : freewheel stop with default indication "tr 81".

1 : " brake stop " without default indication.

18.49 : PID external validation

This parameter driven by the digital input 3 (SM-I/O) is one of the PID validation conditions. (See 18.46).

18.50 : Tension reference selection

It allows to select the tension reference.

0 : The tension reference (18.21) is taken into consideration.

1 : the internal tension reference (20.35) is taken into consideration.



UNIDRIVE SP Commissioning

H5.2 - Explanation of menu 19 parameters

19.01 : Motor speed

When the motor reaches the low radius maximum speed, this address must indicate 10000 points.

19.02 : Not used

19.03 : PID return

It indicates the value of the PID return issued from **18.17**.

19.04 : Line acceleration

It indicates the line acceleration.

19.05 : Mechanical inertia

It indicates the calculation value of the mechanical inertia.

19.06 : Product inertia

It indicates the calculation value of the product inertia, following the selection realised with the help of **18.35**.

19.07 : Radius slope

It indicates the internal radius slope $\times 10$. This parameter is bound to **19.30** (product thickness). It limits the radius evolution by taking into consideration the product thickness on condition that **19.30** should not be 0.

19.08 : Radius ratio

It indicates the maximum radius ratio (**18.23**) by the minimum radius of the coil (**18.22**). This report must not in any case exceed 15.00.

19.09 : Motor maximum speed

This parameter calculated by the software determines the maximum speed that the motor may reach with small diameter.

19.10 : Not used

19.11 : Tension limit %

Stopped tension settings of 0 to 100 % of the tension reference issued from **18.09**.

19.12 : Initialisation radius

This parameter defines the coil departure radius at the beginning of the winding or of the unwinding (it allows the coils renewal having products to be unwinded).

19.13 : Initialised radius

It indicates the radius taken into consideration at the time of a (re)start.

19.14 : Tension correction selection

This parameter allows to obtain coils more or less core tighten :

0 : no correction (constant tension).

1 : the demanded tension (T0) corresponds to the maximum radius tension T2 .

2 : the demanded tension (T0) corresponds to the minimum radius tension T1

Legend :

- T1 = minimum radius tension

- T2 = maximum radius tension

- T0 = tension reference (**18.02**).

19.15 : Radius calculation refreshment timer

Set the radius calculation refreshment time.

Value to be set:

time in seconds $\times 10$.

19.16 : Point A torque

See the procedure of mechanical losses manual measurement (section H1 Quick commissioning).

19.17 : Point B speed

See the procedure of mechanical losses manual measurement (section H1 Quick commissioning).

19.18 : Point B torque

See the procedure of mechanical losses manual measurement (section H1 Quick commissioning).

19.19 : Point C speed

See the procedure of mechanical losses manual measurement (section H1 Quick commissioning).

19.20 : Point C torque

See the procedure of mechanical losses manual measurement (section H1 Quick commissioning).

19.21 : Point D speed

The D speed break is automatically settled to the value calculated in **19.09**.

19.22 : Point D torque

See the procedure of mechanical losses manual measurement (section H1 Quick commissioning).

19.23 : Line speed filter

It allows to remove or to lighten the perturbations on the line speed.

19.24 : V_L acceleration sampling

This parameter settles the time constant of the acceleration/ deceleration measurement in sampling mode on set acceleration.

19.25 : Sampling in set time

This parameter settles the time constant of the acceleration/ deceleration measurement in sampling mode in set time.

UNIDRIVE SP Commissioning

19.26 : Internal Z slope

The value of Z defines the ratio of minimum and maximum radius tension:

- T1 = minimum radius tension,
- T2 = maximum radius tension,
- $Z = T1 / T2$

19.26 is active when 19.31 = 0.

Set the selected value of Z multiplied by 100.

For more information, see 19.14.

19.27 : External Z slope image

Limited scaling of 18.19.

The value read in this parameter must be divided by 100 in order to have the value of the Z slope.

The Z value defines the minimum and maximum radius tension:

- T1 = minimum radius tension,
- T2 = maximum radius tension,
- $Z = T1 / T2$

19.27 is active when 19.31 = 1.

For more information, see 19.14.

19.28 : C_{max}/C_n control

This parameter displays the ratio between "the maximum torque" demanded on the product and the motor rated torque, following the application data and needs. The value displayed is of 100 %, when the setting is correct.

19.29 : Coil end radius Delta

Setting of the stop threshold or of the automatic slowing down according to the coil measured radius. This parameter manages the radius value at which one may want to stop the unwinding or the winding.

In the case of a unwinder, the slowing down or stop radius is the sum of the minimum radius and of the planned delta.

In the case of a winder, the slowing down or stop radius is the difference between the maximum radius and the planned delta.

19.30 : Product thickness

Set the product thickness.

If one wants to slow down the calculated radius evolution, one will introduce a value lower to the thickness real value, but one risks to delay certain calculations (inertia compensation for example)..

19.31 : Z slope selection

0 : Internal Z slope issued from 19.26.

1 : External Z slope issued from 19.27 (terminal 51 or 52).

19.32 : Radius initialisation

Parameter validated when the digital input of terminal 24 is active.

CAUTION :

This operation takes place the drive being disabled (10.02 = 0) and at each coil change.

After a drive default or a a coil change, and if the ratio between the minimum and maximum coil diameter is important, proceed to the initialisation too.

19.33 : Speed/Tension regulation selection

Variation range : 0 or 1

This parameter is allocated to the digital input terminal 29 of the drive if there is a SM-I/O of connection, otherwise to terminal 10 of the SM-EDL COD.

0 : speed regulation validation (for the run by pulses).

1 : torque regulation validation (for the winder/unwinder function).

19.34 : Allocation logic 1

19.35 : Allocation logic 2

The combination of 19.34 and 19.35 turns the analogue inputs 4 and 5 (terminals 9 and 10 of the SM-I/O) to the following destinations :

19.34	19.35	Selection	
0	0	free	free
0	1	18.17	18.19
1	0	18.17	18.18
1	1	18.19	18.18

19.36 : Inertia compensation validation

0 : inactive compensation.

1 : active compensation.

19.37 : Mechanical losses compensation variation

0 : inactive compensation.

1 : active compensation.

19.38 : Coil end slowing down

It indicates the detection of the "coil end slowing down" zone. If the SM-I/O is connected :

0 : the relay 1 (terminals 21 and 22 of the SM-I/O) is not activated.

1 : the relay 1 is activated.

If there is no SM-I/O :

0 : terminal 11 of the SM-EDL ANA is not activated.

1 : terminal 11 of the SM-EDL ANA is activated.

CAUTION :

When the time delay radius refreshment is active (18.37 = 1 and 18.38 = 0), the time set in 19.15 may delay the band end detection.

19.39 : Coil end stop

It indicates the detection of the " coil end stop " zone.

If the SM-I/O is present :

0 : the relay 2 (terminals 23 and 22 of the SM-I/O) is not activated.

1 : the relay 2 is activated.

If there is no SM-I/O :

0 : terminal 12 of the SM-EDL ANA is inactive.

1 : terminal 12 of the SM-EDL ANA is active.

CAUTION :

When the time delay radius refreshment is active (18.37 = 1 and 18.38 = 0), the time set in 19.15 may delay the band end detection.

19.40 : Coil end detection validation

This parameter is allocated at the digital input of terminal 8, if the SM-I/O is present.

0 : the coil end detection validation is inactive.

1 : the coil end detection validation is active.

UNIDRIVE SP Commissioning

19.41 : Selection of the speed reference for the product cutting

When the winder has an automatic cutting system, it is possible to keep after the cutting a constant coil speed that will be set in **20.21** or the one corresponding to the radius where it is located:

1 : the speed is kept,

0 : the speed is equal to the value of **20.21**.

In order to obtain this, after the cutting one must devalidate the digital input of terminal 10 of the SM-EDL ANA or terminal 29 of the drive, if a SM-I/O is present.

19.42 : Pulse input reference validation

The digital input (terminal 26) selects the run by pulses speed reference set in **01.22** (RP2 presettled reference).

19.43 : Tension validation

0 : the tension limit reference is validated.

1 : the analogue tension reference is validated when the line speed is upper to the threshold set in **20.23**. Then **19.43** turns again to 0, when the line speed is lower to the threshold value (**20.23**) - hysteresis (**20.24**).

19.44 : Losses measurement validation

0 : The manual measurement of the mechanical losses is not validated.

1 : validation of the mechanical losses manual measurement.

19.45 : Not used

19.46 : Second coil start

The digital input terminal 2 of the SM-I/O conditions the drive for the bobbin or chuck start when the winder is equipped with an automatic change of the coil without stopping the line (double winder).

The drive, in this case, operates in speed regulation and the reference is issued from the line speed.

0 : tension regulation or pulse input.

1 : second coil starting speed (**1.23**).

19.47 : Run forward/Stop

This parameter is commanded by the digital input of terminal 27 of the drive, if there is a SM-I/O or terminal 11 of the SM-EDL ANA without SM-I/O.

0 : deactivated forward rotation command.

1 : activated forward rotation command.

19.48 : Run reverse/Stop

This parameter is commanded by the digital input of terminal 28 of the drive.

0 : deactivated reverse rotation command.

1 : activated reverse rotation command.

19.49 : Not used

19.50 : Selection of the initialisation radius

0 : the value of the initialisation radius is given by **19.12**.

1 : the value of the initialisation radius is equal to the minimum radius **18.22** in winder or to the maximum radius **18.23** in unwinder.


H5.3 - Explanation of the 20 menu parameters

20.01 : Return to the factory settings and copy again the Winding/Unwinding parameters

• Return to the winding/unwinding factory settings with line encoder

This parameter starts an automatic procedure of return to the factory settings specific to the winding/unwinding application with line encoder.

In order to validate the return to the factory settings, follow the procedure below :

Parameter	Setting	Description	Validation
0.00	1233	European factory settings configuration (50 Hz)	Press the Reset key 
	1244	USA factory settings configuration (60 Hz)	
20.01	2047	Winding/unwinding program initialisation	



• Check that the motor is stopped and the system safety is engaged.

• Copy again the winding/unwinding parameters with line encoder

This parameter allows to save or to load the Winding/Unwinding parameters of menus 20, 70 and 71 by using the SMARTCARD.

Parameter	Setting	Description
20.01	3333	Save menus 20, 70 and 71 on SMARTCARD
20.01	6666	Load menus 20, 70 and 71 of the SMARTCARD in the drive

20.02 to 20.14 : Not used

20.15 : Defaults validation

By a binary conversion, this parameter allows the validation of the defaults related to the winding unwinding application with analogue references.

20.16 to 20.18 : Not used

20.19 : Word mask of bus control

The mask allows to validate the command word bits (**18.29**) and so to mix the command by field bus or by digital inputs.

Example :

20.19 = 15 = 0000 0000 0000 1111

bit 0 = 1 : drive reset **10.33** by command word.

bit 1 = 1 : run forward/Stop **19.47** by command word .

bit 2 = 1 : run by pulse reference validation **19.42** by command word.

bit 3 = 1 : run reverse /Stop **19.48** by command word.

bit 4 = 0

...

Note : check that the digital inputs destination does not correspond to the bit commanded by field bus.

Example :

8.25 = **19.48** (Run reverse /Stop).

Put **8.25** = **0.00** (no use of this digital input of terminal 28).

20.20 : Not used

UNIDRIVE SP Commissioning

20.21 : Preset speed for the second coil start

Speed setting after cutting. This speed is selected by **19.41**.

20.22 : Minimum tension

Setting of the minimum tension on the product when the reference is zero.

Setting value : [% of the maximum tension reference (**18.24**) x 10.

20.23 : Speed threshold of tension validation

When the line speed reaches the value set in this parameter, the tension reference issued from **18.21** drives the winder or the unwinder.

Value to be set :

value in $\text{m}\cdot\text{min}^{-1} \times 10$.

20.24 : Tension reference threshold hysteresis

When the tension reference is validated and if the line speed becomes lower to the threshold **20.23** - hysteresis **20.24**, then the tension validation **19.43** turns again to 0.

Value to be set :

value in $\text{m}\cdot\text{min}^{-1} \times 10$.

20.25 : Maximum radius tension limit reference

Setting of a tension limit corresponding to the maximum radius **0.23**.

It allows to obtain a different tension limit according to the coil radius.

20.26 : Minimum radius tension limit reference

Setting of a tension limit corresponding to the minimum radius **0.22**.

It allows to obtain a different tension limit according to the coil radius.

20.27 : Band cutting threshold

It allows to set a starting threshold equal to the maximum variation admitted for the radius.

20.28 : Losses measurement torque reference

See manual measurement procedure of the mechanical losses in the quick commissioning procedure, section H1.

20.29 : Product height

It indicates the product height stored on the coil.

20.30 : Inertia compensation limitation

Inertia compensation limitation displayed in **18.06**.

Value to be set:

value wanted in % x 100.

20.31 : Product radius

This parameter indicates the product radius on the chuck.

20.32 : Slow shaft rated torque

It indicates the rated torque supplied on the slow shaft of the implied system.

20.33 : Minimum probe measurement

It allows to set the equivalence between the number of points of the probe and the minimum radius (see § H1 of the quick start commissioning).

20.34 : Maximum probe measurement

It allows to set the equivalence between the number of points of the probe and the maximum radius (see § H1 of the quick start commissioning).

20.35 : Internal tension reference

It allows to set the internal tension reference.

20.36 : Coil width

If the inertia compensation is necessary, set the coil width.

20.37 : Moment of inertia

If the inertia compensation is necessary, set the total inertia (chuck + full coil).


Value to be set : inertia in $\text{m}^2\cdot\text{kg} \times 10$.

20.38 to **20.50** : Not used

UNIDRIVE SP Commissioning

H6 - Basic menu diagrams


H6.1 - Menu 1 : Frequency or speed reference (selections - limitations - or filters)

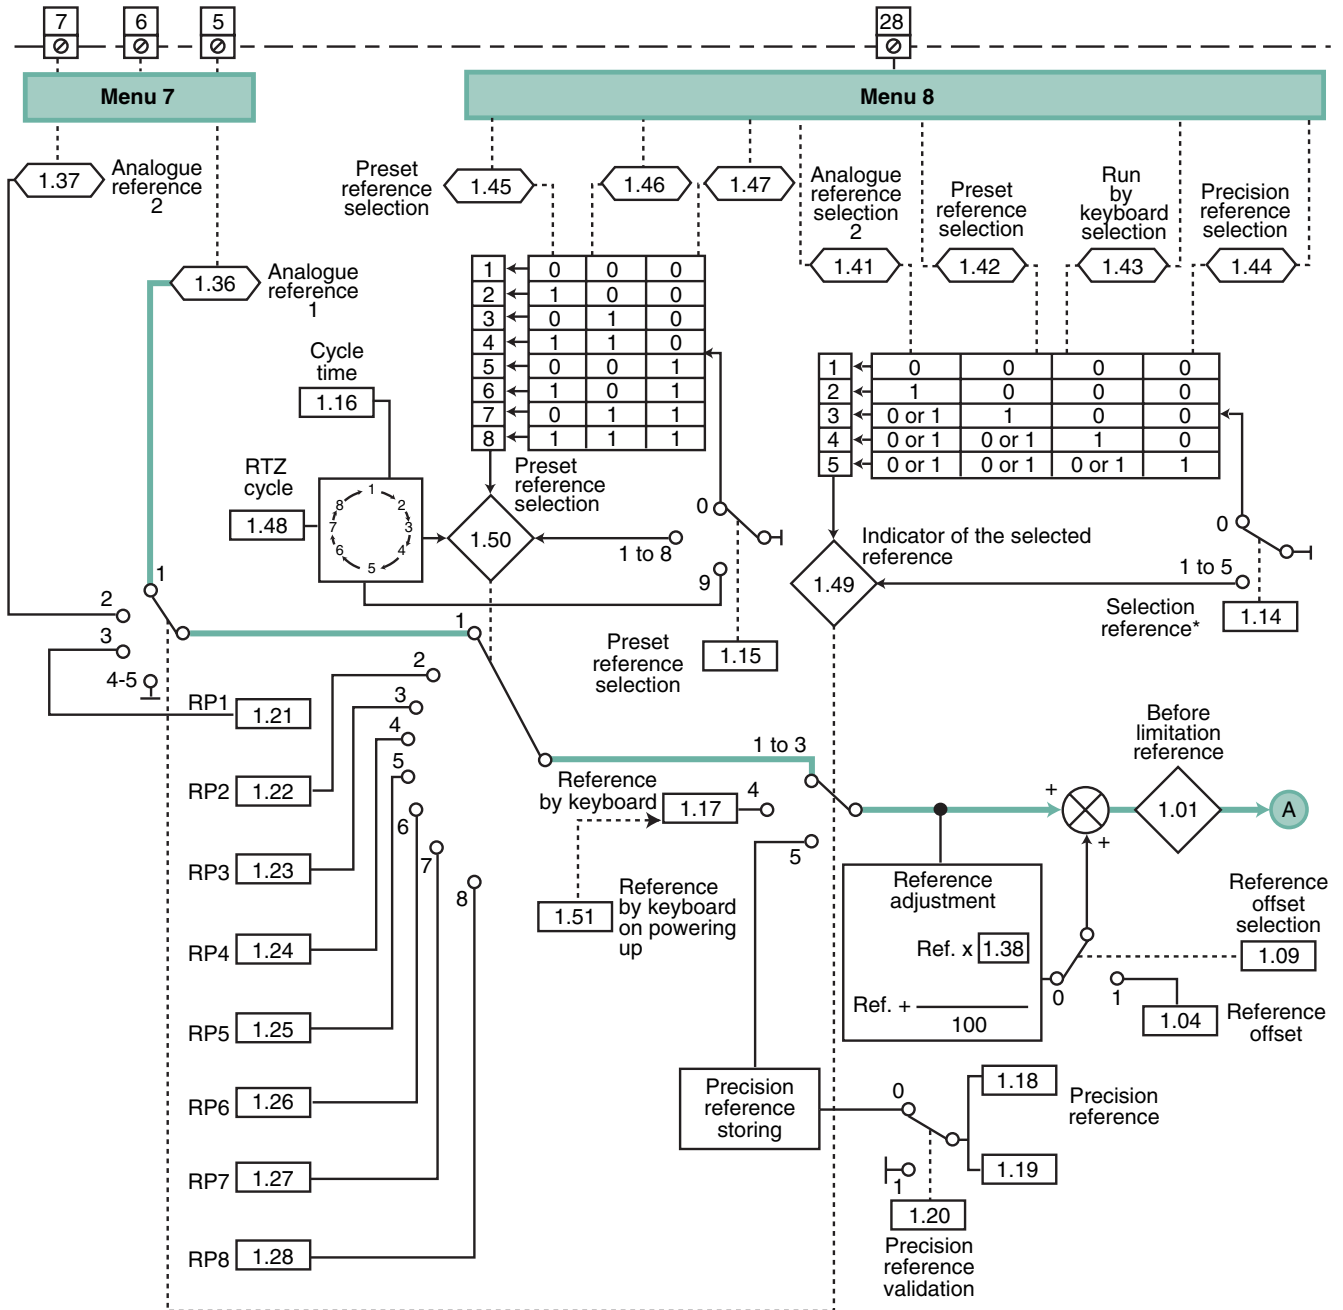

Parameters	Variation range			Factory settings		
1.01	± REF. MAX			-		
1.04	± 3000.0 Hz	± 40000.0 min ⁻¹		0		
1.14	A1.A2 (0), A1.Pr (1), A2.Pr (2), Pr (3), Pad (4), Prc (5)			A1.A2 (0)		
1.16	0 to 400.0 s			10.0 s		
1.17 - 1.18 - 1.36 - 1.37 1.21 to 1.28	± REF. MAX			0		
1.19	0 to 0.099 Hz	0 to 0.099 min ⁻¹		0		
1.38	± 100.00 %			0		
1.48	OFF (0) or On (1)			OFF (0)		
1.51	rESEt (0), LAsT (1), PrS1 (2)			rESEt (0)		

UNIDRIVE SP Commissioning

Menu 1 (continued)

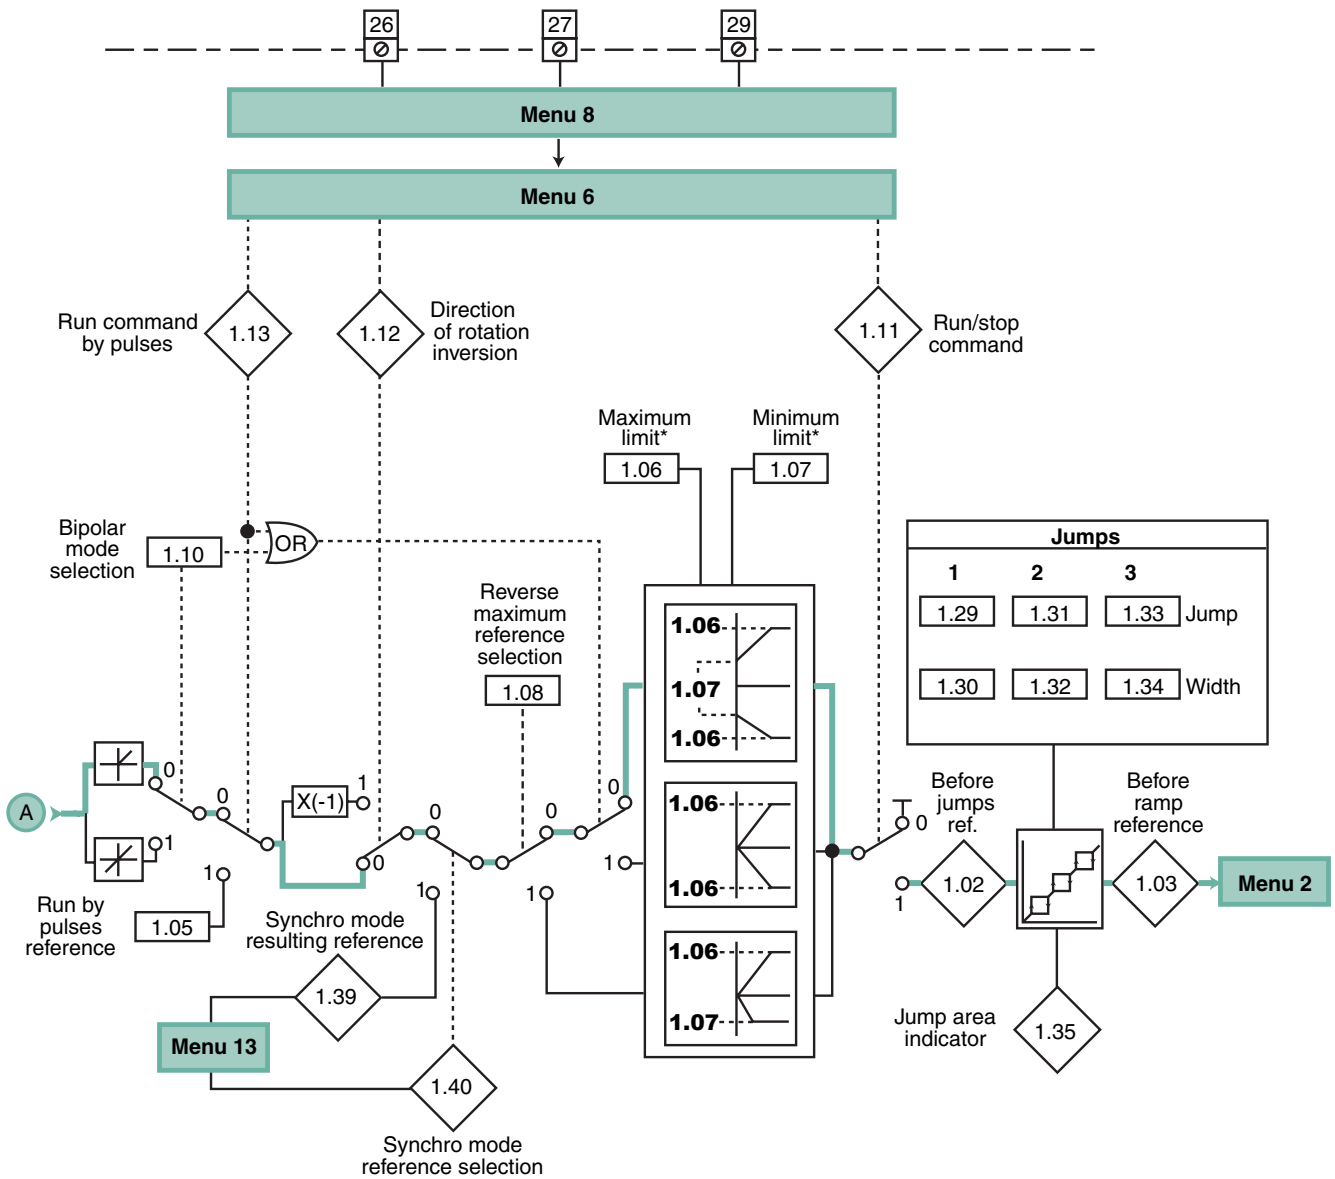


* When motor 2 is selected (**11.45** = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range		Factory settings		
1.02 - 1.03	± REF. MAX		-		
1.05	0 to 400.0 Hz	0 to 4000.0 min ⁻¹	0		
1.06	0 to 3000.0 Hz	± LIN N. MAX	EUR : 50 Hz USA : 60 Hz	EUR : 1500.0 min ⁻¹ USA : 1800.0 min ⁻¹	3000.0 min ⁻¹
1.07	± 3000.0 Hz	± REF. MAX	0		
1.29 - 1.31 - 1.33	0 to 3000.0 Hz	0 to 40000 min ⁻¹	0		
1.30 - 1.32 - 1.34	0 to 25.0 Hz	0 to 250 min ⁻¹	0.5 Hz	5 min ⁻¹	
1.35	OFF (0) or On (1)		-		
1.39	± 3000.0 HZ	± 40000.0 min ⁻¹	-		

UNIDRIVE SP Commissioning

H6.2 - Menu 2 : Ramps

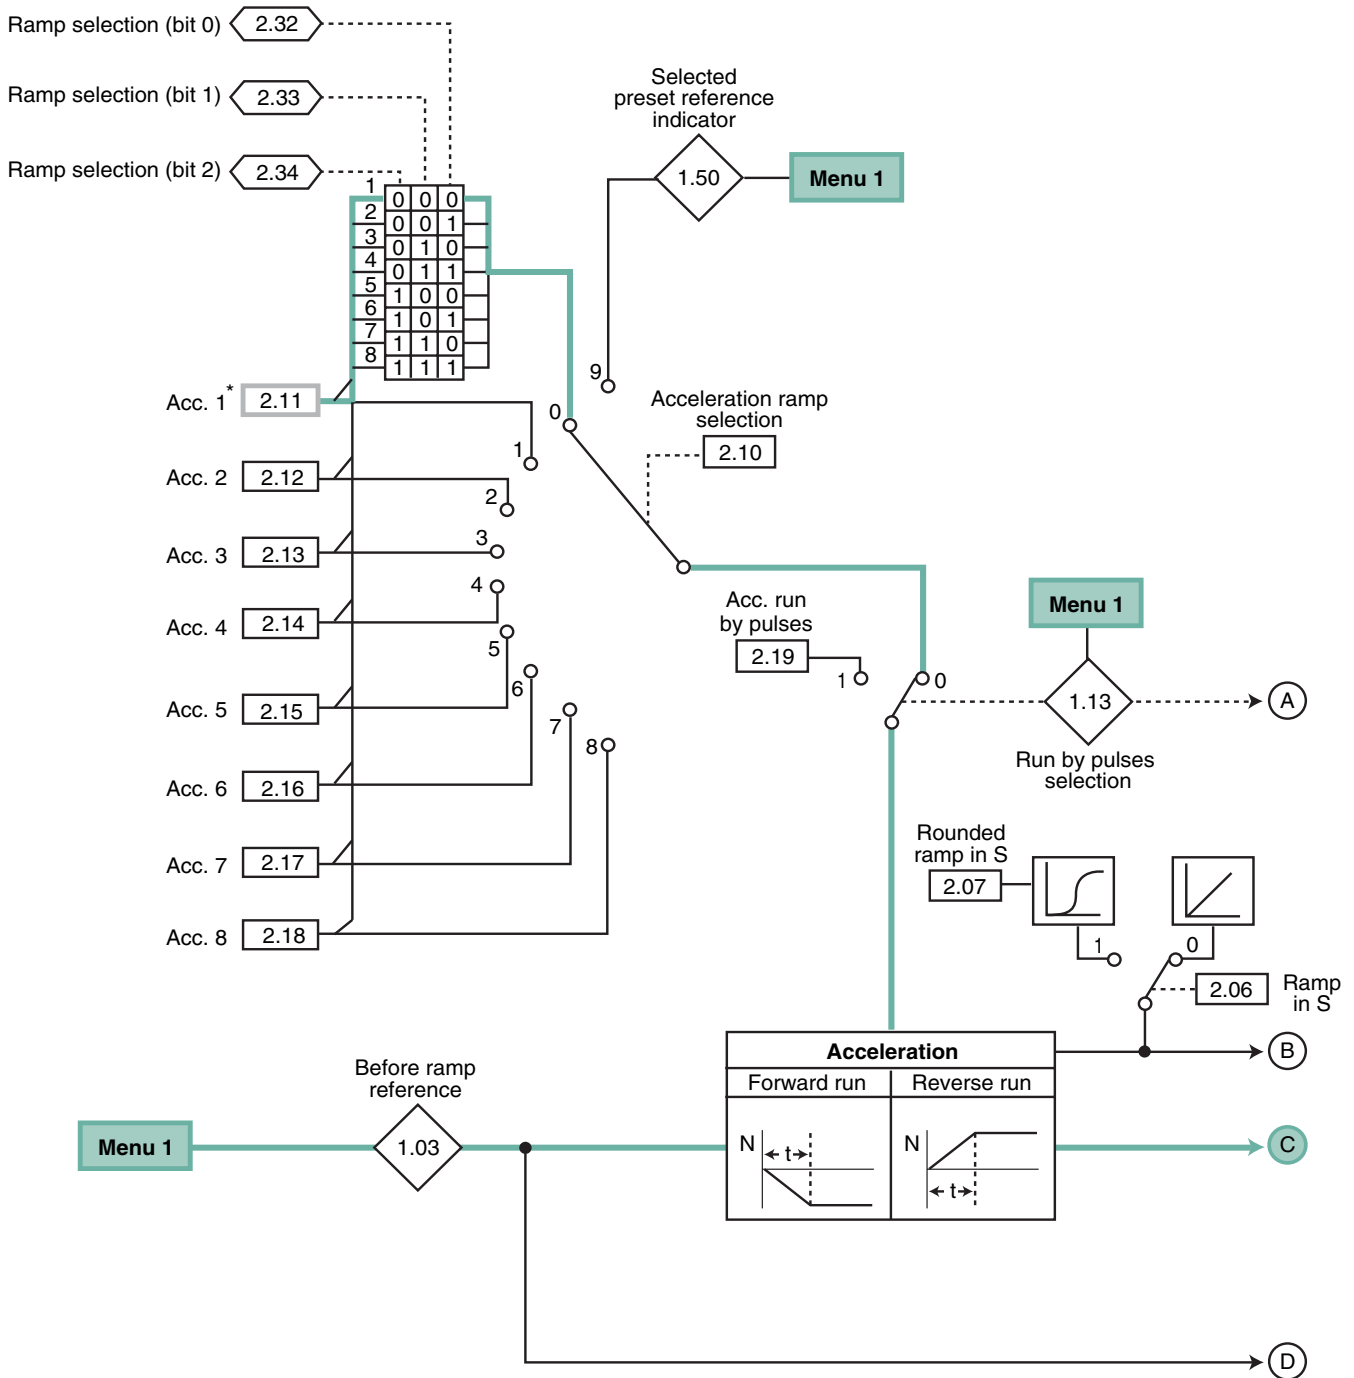


* When motor 2 is selected (**11.45** = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range			Factory setting		
2.07	0 to 300.0s ² /	0 to 100.000s ² /1000min ⁻¹	3.1s ² /100Hz	1.500s ² /1000min ⁻¹	0.030s ² / 1000min ⁻¹	
2.11 to 2.18	0 to 3200.0s/	0 to 3200.000 s/1000 min ⁻¹	5.0s/100Hz	2.000s/1000min ⁻¹	0.0200s/1000min ⁻¹	
2.19	0 to 3200.0s/	0 to 3200.000 s/1000 min ⁻¹	0.2s/100Hz		0	

UNIDRIVE SP Commissioning


Menu 2 (continued)

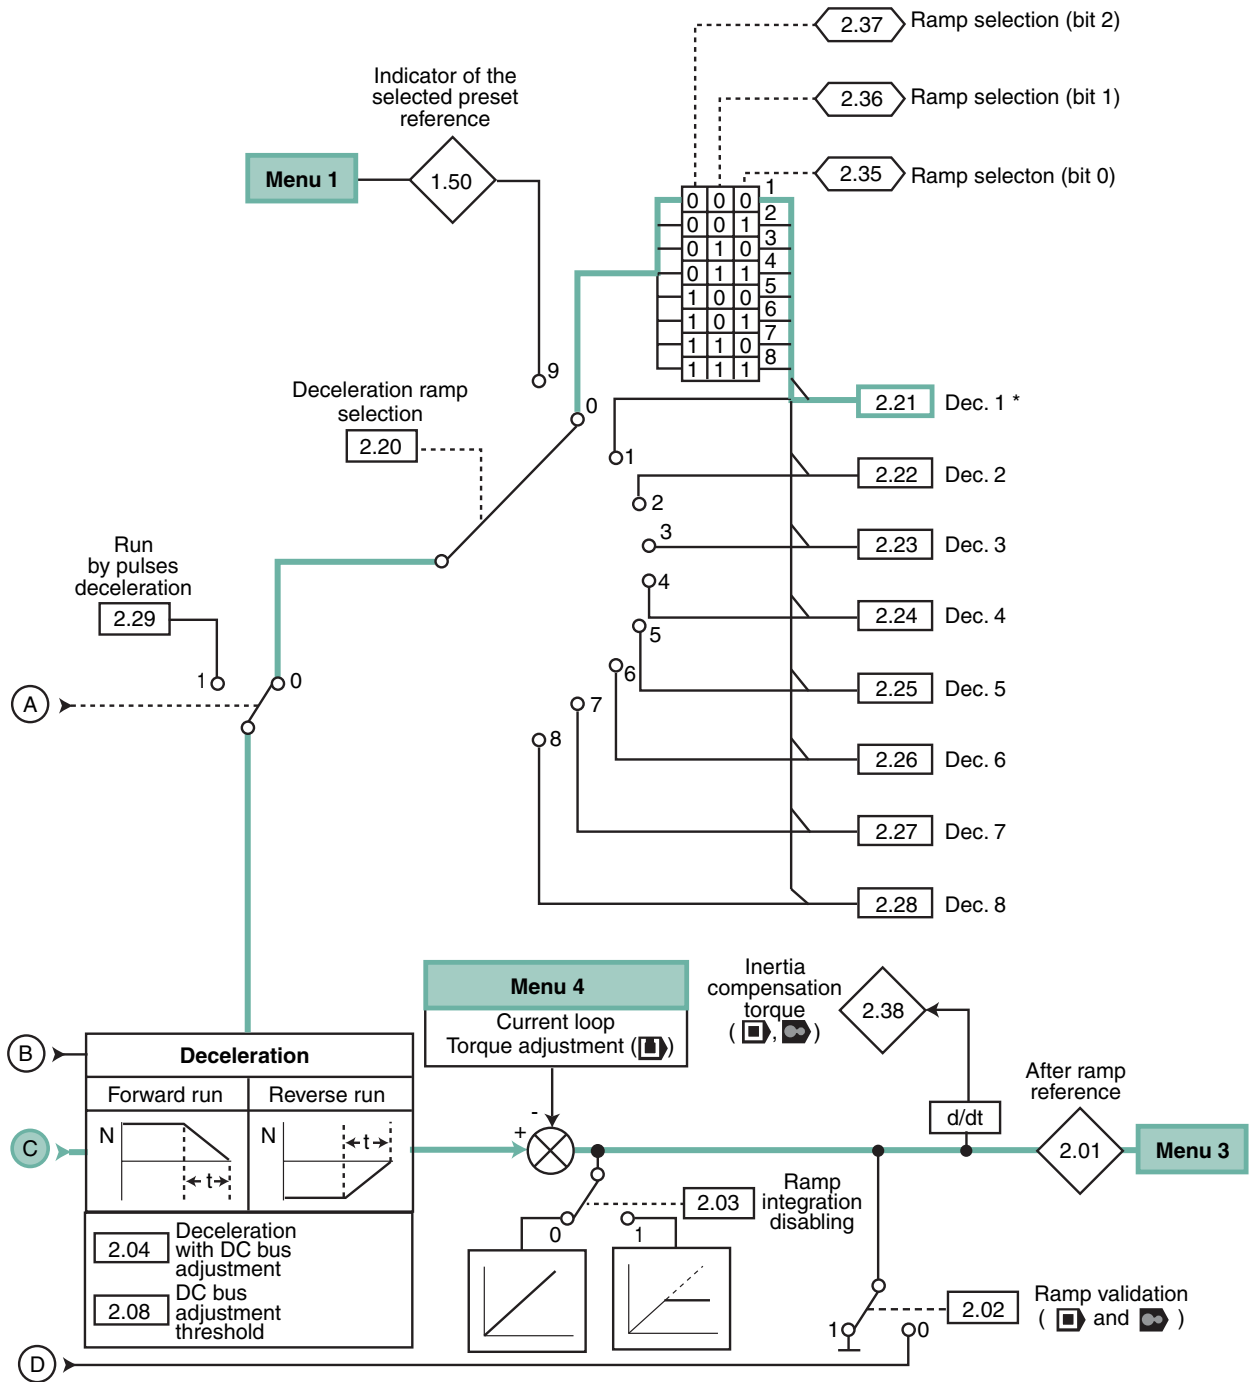



Parameters	Variation range			Factory settings		
2.01	± REF. MAX			-		
2.04	FASt (0), Std (1), Std.hV (2)	FASt (0), Std (1)		Std (1)		
2.08	0 to THRESHOLD U _{cc} MAX (V)			TL : 375V T : EUR = 750V / USA = 775V TM : 895V TH : 1075V		
2.21 to 2.28	0 to 3200.0s/100Hz	0 to 3200.000s/1000min ⁻¹		10.0s/100Hz	2.000s/1000min ⁻¹	0.0200s/1000min ⁻¹
2.29	0 to 3200.0s/100Hz	0 to 3200.000s/1000min ⁻¹		0.2s/100Hz	0	
2.38	± 1000.0 %			-		

UNIDRIVE SP Commissioning

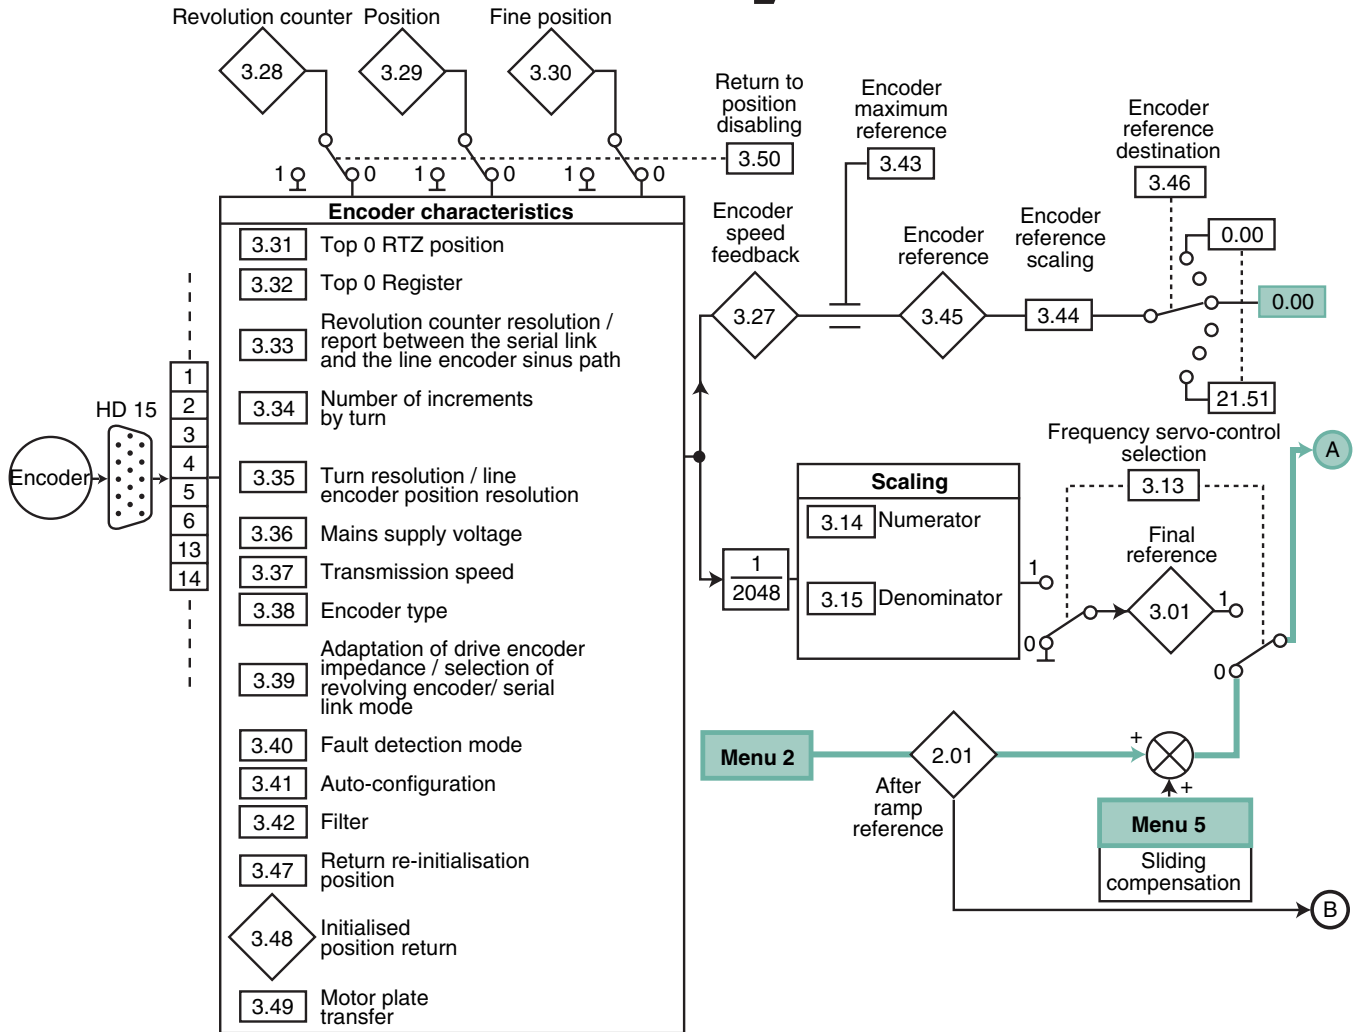
H6.3 - Menu 3 : Encoder input and speed loop in open loop



Parameters	Variation range 	Factory settings 
3.01	± 1000.0 Hz	-
3.14	0 to 1.000	1.000
3.15	0.001 to 1.000	1.000
3.27	± 40000.0 min ⁻¹	-
3.28	0 to 65535 tours	-
3.29	0 to 65535 (1/2 ¹⁶ per turn)	-
3.30	0 to 65535 (1/2 ³² per turn)	-
3.31 - 3.32 - 3.41 3.47 - 3.49	OFF (0) or On (1)	OFF (0)
3.33	0 to 255	16
3.34	0 to 50000	1024
3.35	0 to 32 bits	0
3.36	5V (0), 8V (1), 15V (2)	5V (0)
3.37	100 (0), 200 (1), 300 (2), 400 (3), 500 (4), 1000 (5), 1500 (6), 2000 (7) K Bauds	300 (2) K Bauds
3.38	Ab (0), Fd (1), Fr (2), Ab.SErvo (3), Fd.SErvo (4), Fr.SErvo (5), SC (6), SC.Hiper (7), EndAt (8), SC.EndAt (9), SSI (10), SC.SSI (11)	Ab (0)
3.39	0 to 2	1
3.40	0 to 3	0
3.42	0 to 5 (0 to 16 ms)	0
3.43	0 to 40000 min ⁻¹	1500 min ⁻¹
3.44	0 to 4.000	1.000
3.45	± 100.0 %	-
3.48	OFF (0) or On (1)	-

UNIDRIVE SP Commissioning

Menu 3 in open loop (continued)

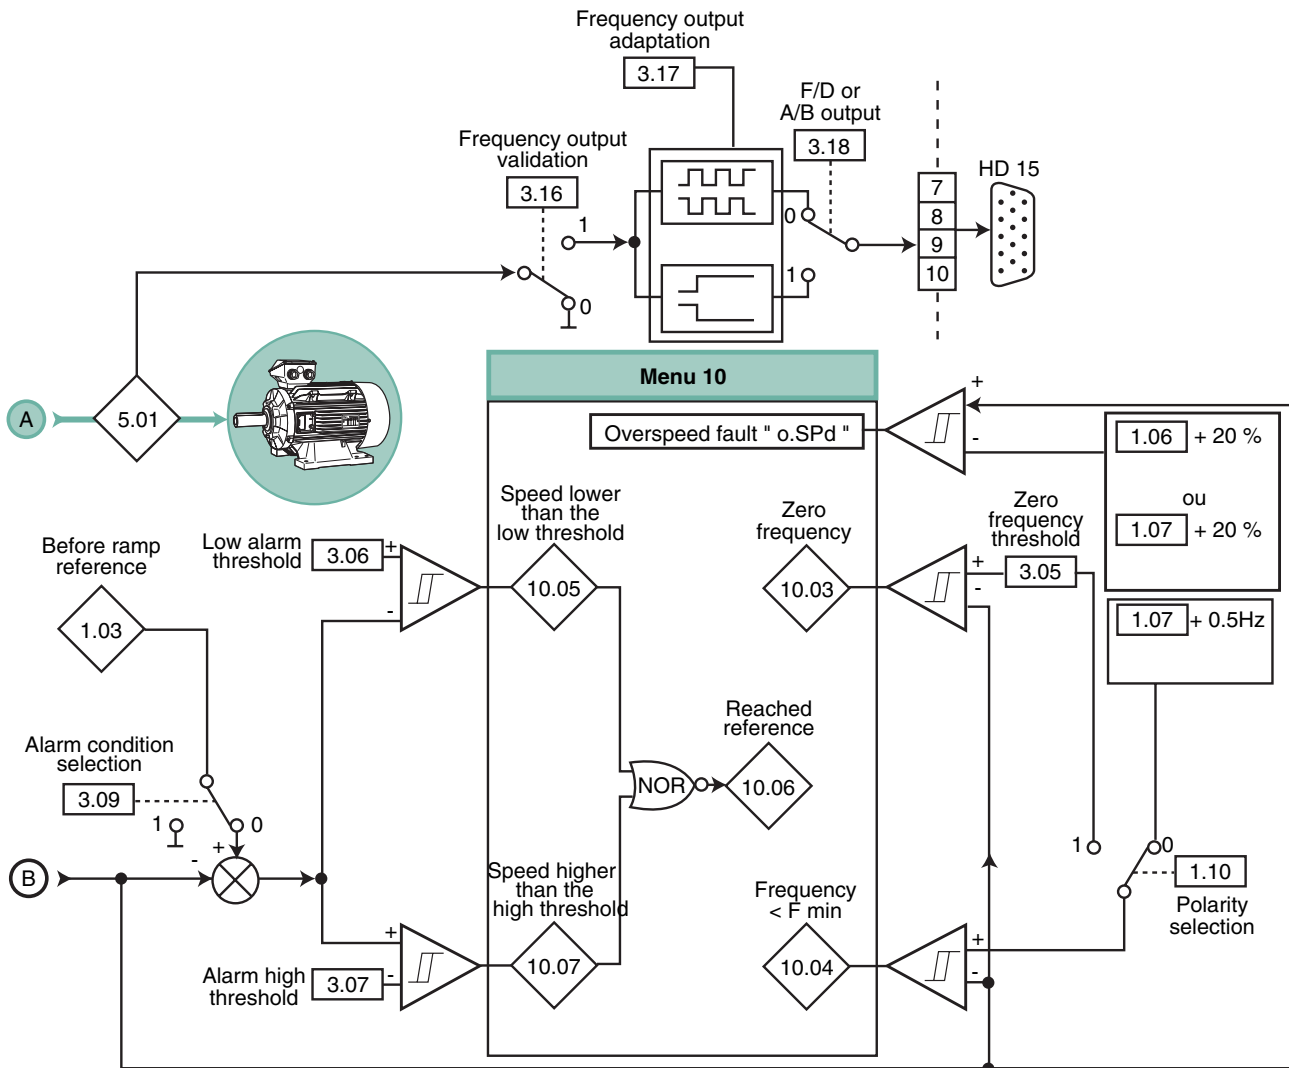


According to the encoder type, set at least the parameters below

Incremental encoder or SinCos without serial link	SinCos encoder with Hiperface or EndAt link or EnDat encoder	SinCos encoder with SSI link or SSI encoder
3.34 : ELPR (0 to 50000) 3.36 : Voltage 3.38 : Type	3.36 : Voltage 3.37 : Transmission speed (accept the encoder with Hiperface link) 3.38 : Type 3.41 : Auto-configuration	3.33 : Number of turns 3.34 : ELPR (only for a SinCos encoder) 3.35 : Resolution 3.36 : Voltage 3.37 : Transmission speed 3.38 : Type 3.41 : SSI format selection





Parameters	Variation range	Factory settings
3.05	0 to 20.0 Hz	1.0 Hz
3.06 - 3.07	0 to 3000.0 Hz	1.0 Hz
3.17	OFF (0) or On (1)	On (1)

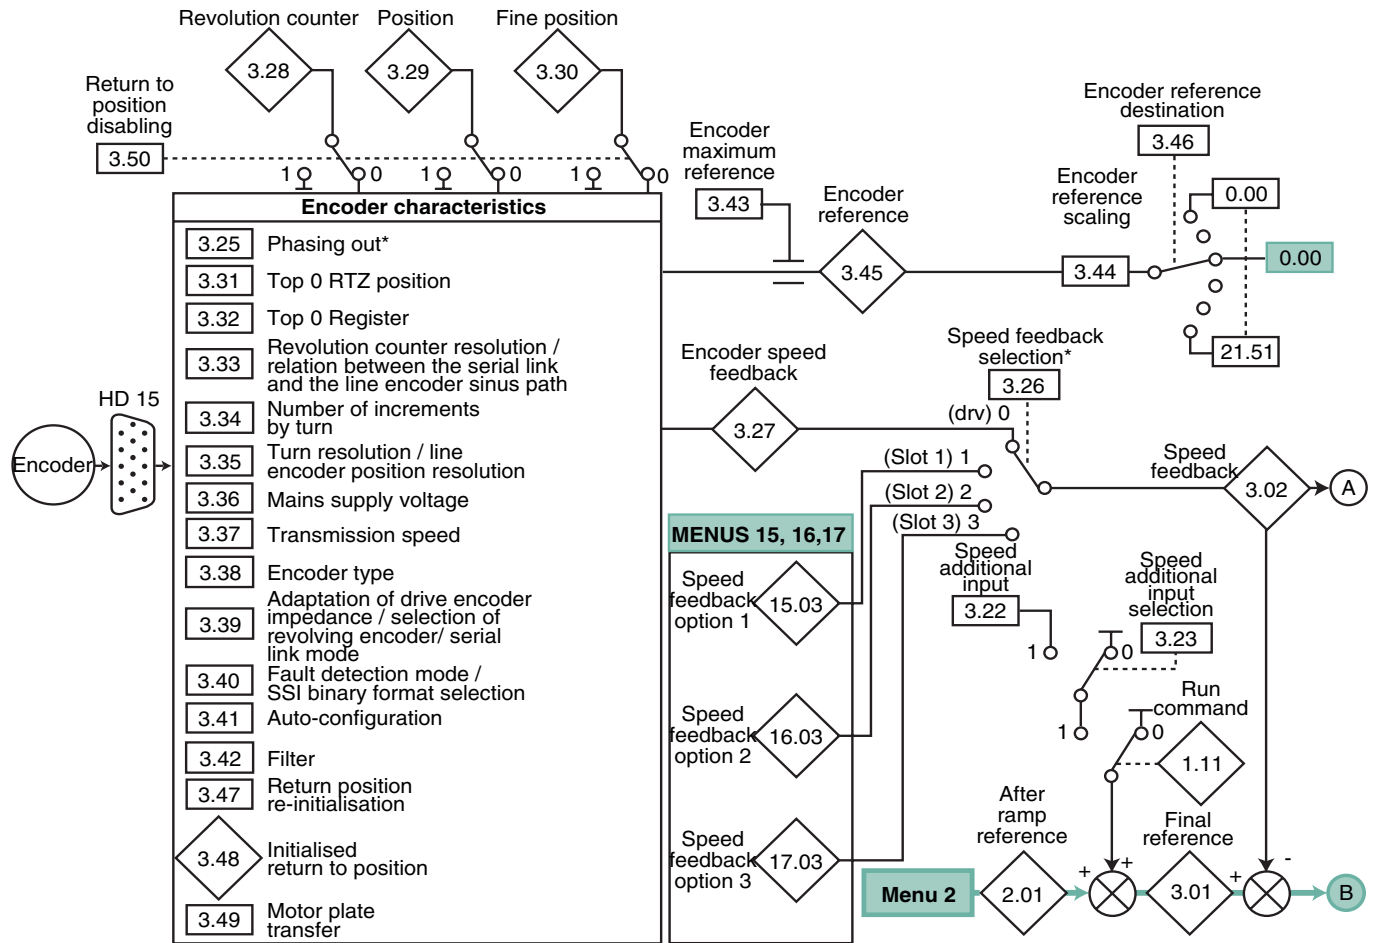UNIDRIVE SP Commissioning

H6.4 - Menu 3 : Encoder input and speed loop in closed loop and servo and




* When motor 2 is selected (**11.45** = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range		Factory settings	
				
3.01 - 3.02	± N MAX		-	
3.22	± REF. MAX		0	
3.25	-	0 to 359.9°	-	0
3.27	± 40000.0 min ⁻¹		-	
3.28	0 to 65535 turns		-	
3.29	0 to 65535 (1/2 ¹⁶ th of turn)		-	
3.30	0 to 65535 (1/2 ³² th of turn)		-	
3.31 - 3.32 - 3.41 3.47 - 3.49	OFF (0) or On (1)		OFF (0)	
3.33	0 to 255		16	
3.34	0 to 50000		1024	4096
3.35	0 to 32 bits		0	
3.36	5V (0), 8V (1), 15V (2)		5V (0)	
3.37	100 (0), 200 (1), 300 (2), 400 (3), 500 (4), 1000 (5), 1500 (6), 2000 (7), 4000 (8) Kbaud		300 (2) Kbaud	
3.38	Ab (0), Fd (1), Fr (2), Ab.SERvo (3), Fd.SERvo (4), Fr.SERvo (5), SC (6), SC.Hiper (7), EndAt (8), SC.Endat (9), SSI (10), SC.SSI (11)		Ab (0)	Ab.SERvo (3)
3.39	0 to 2		1	
3.40	0 to 7		1	
3.42	0 to 5 (0 to 16ms)		0	
3.43	0 to 40000 min ⁻¹		1500 min ⁻¹	3000 min ⁻¹
3.44	0 to 4.000		1.000	
3.45	± 100.0 %		-	
3.48	OFF (0) or On (1)		-	

UNIDRIVE SP Commissioning

Menu 3 in closed loop and servo (continued)

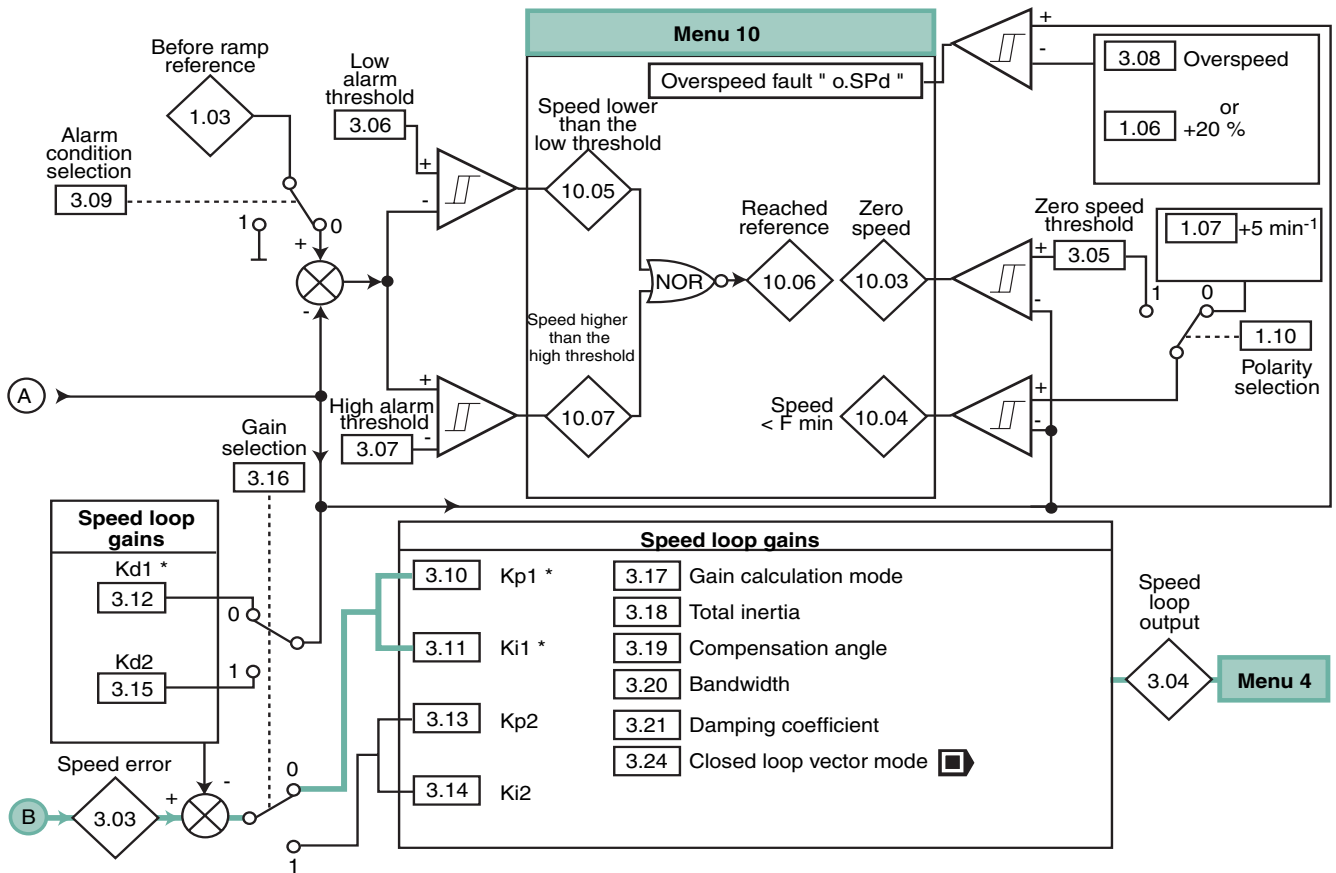


According to the encoder type, set at least the parameters below

Incremental encoder or SinCos without serial link	SinCos encoder with Hiperface or EndAt link or EnDat encoder	SinCos encoder with SSI link or SSI encoder
3.34 : ELPR (0 to 50000) 3.36 : Voltage 3.38 : Type	3.36 : Voltage 3.37 : Transmission speed (except the encoder with Hiperface link) 3.38 : Type 3.41 : Auto- configuration	3.33 : Number of turns 3.34 : ELPR (only for a SinCos encoder) 3.35 : Resolution 3.36 : Voltage 3.37 : Transmission speed 3.38 : Type 3.41 : SSI format selection



Parameters	Variation range		Factory settings	
	□	▶	□	▶
3.03	± N MAX		-	
3.04	± I _{ACTIVE} MAX (%)		-	
3.05	0 to 200 min ⁻¹		5 min ⁻¹	
3.06 - 3.07	0 to 40000 min ⁻¹		5 min ⁻¹	
3.08	0 to 40000 min ⁻¹		0	
3.10 - 3.13	0 to 6.5535 (1/rads ⁻¹)		0.0100 (1/rads ⁻¹)	
3.11 - 3.14	0 to 655.35 (1/rad)		1.00 (1/rad)	
3.12 - 3.15	0 to 0.65535 (s)		0	
3.17	0 to 3		0	
3.18	0 to 100.0000 kgm ²		0	
3.19	0 to 359.9 °		4.0 °	
3.20	0 to 255 Hz		10 Hz	
3.21	0 to 10.0		1.0	
3.24	0 to 3	-	0	-

UNIDRIVE SP Commissioning

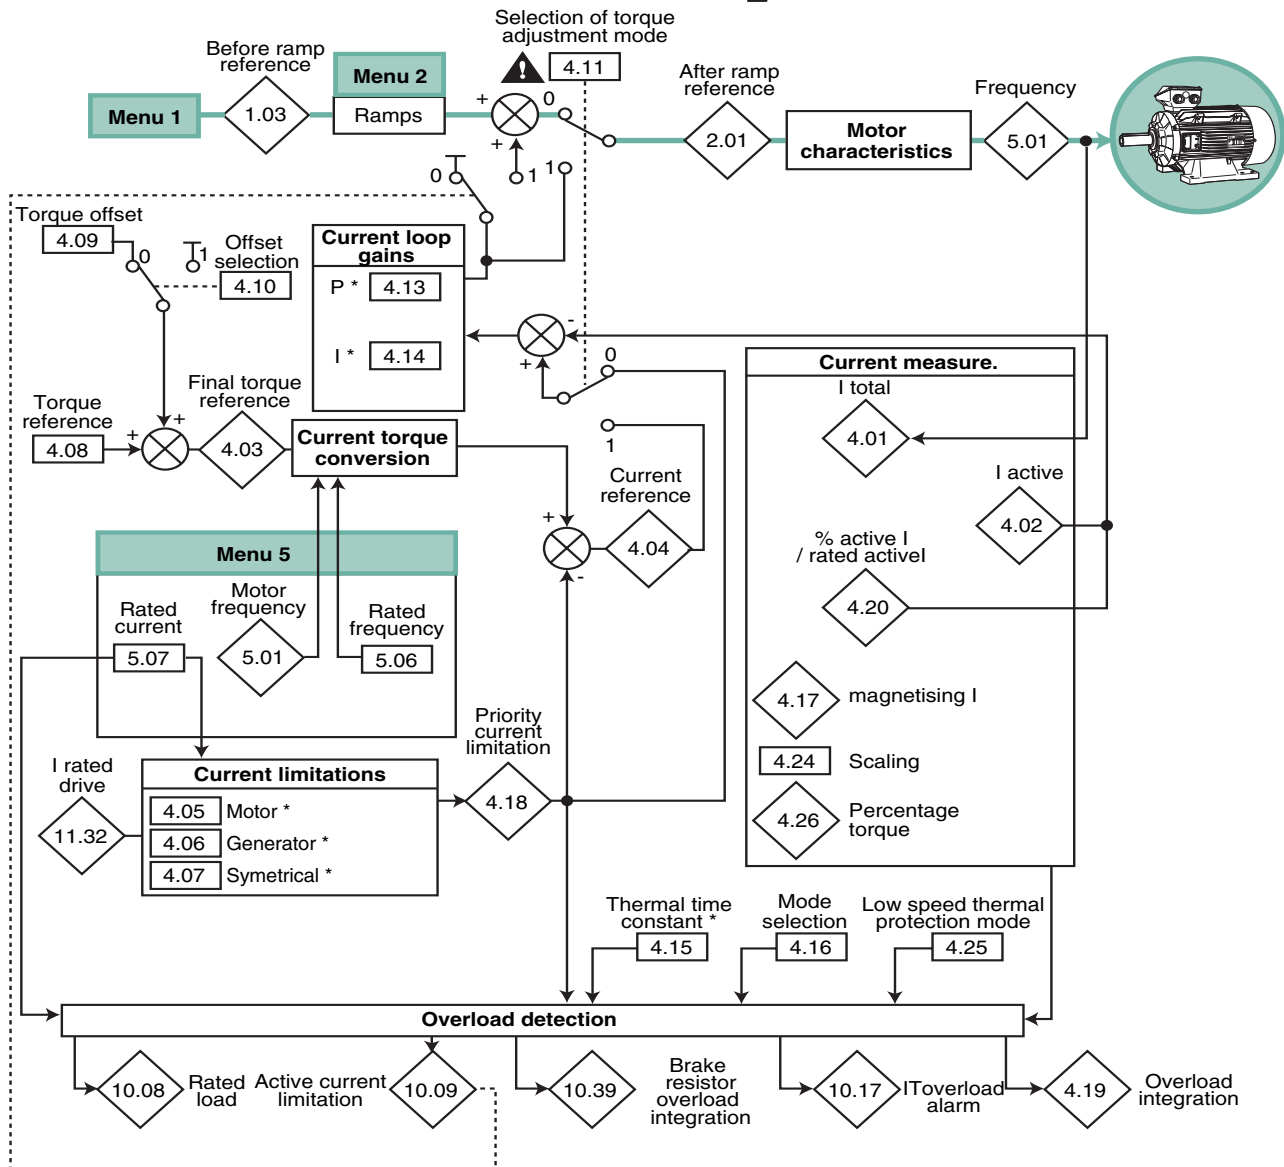H6.5 - Menu 4 : Current loop, torque adjustment in open loop




* When motor 2 is selected (**11.45** = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range 	Factory settings 
4.01	0 to I_{MAX} VAR (A)	-
4.02 - 4.17	$\pm I_{MAX}$ VAR (A)	-
4.03 - 4.04 - 4.18	$\pm I_{ACTIVE}$ MAX (%)	-
4.05 - 4.06 - 4.07	0 to LIM. IM1 MAX (%)	165.0 %
4.08 - 4.09	$\pm I_{MAX}$ UTIL. (%)	0
4.13	0 to 30000	20
4.14	0 to 30000	40
4.15	0 to 400.0 s	89.0 s
4.16 - 4.25	OFF (0) or On (1)	OFF (0)
4.19	0 to 100.0 %	-
4.20	$\pm I_{MAX}$ UTIL. (%)	-
4.24	0 to I_{ACTIF} MAX (%)	165.0 %
4.26	$\pm I_{MAX}$ UTIL. (%)	-



UNIDRIVE SP Commissioning

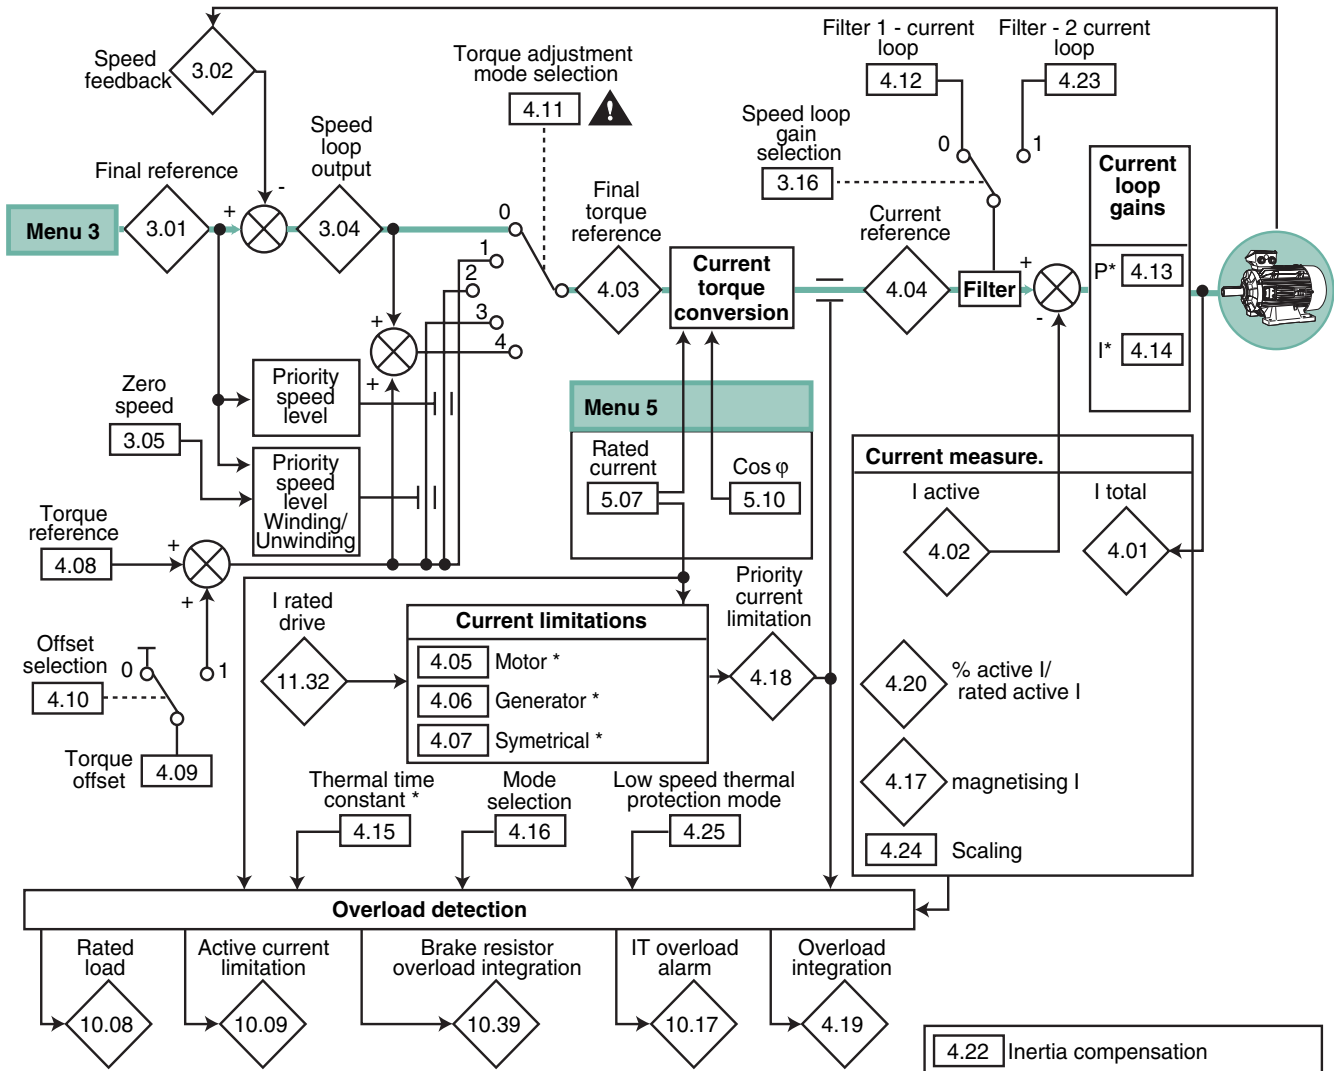H6.6 - Menu 4 : Current loop, torque adjustment in closed loop




- ⚠ • When the torque command mode without speed control is validated (4.11 = 1) and on the zero resistant torque, the drive accelerates up to the overspeed threshold 3.08 (stop). If 3.08 is at 0, the maximum speed reached will be 1.06 + 20 %.
- When modes 2 or 3 are selected, the drive does not take into account the stopping mode set and generates a stop without ramp.

* When motor 2 is selected (11.45 = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range 	Factory settings 
4.01	0 to I _{MAX} VAR (A)	-
4.02 - 4.17	± I _{MAX} VAR (A)	-
4.03 - 4.04 - 4.18	± IACTIVE MAX (%)	-
4.05 - 4.06 - 4.07	0 to LIM. IM1 MAX (%)	175.0 %
4.08 - 4.09	± I _{MAX} UTIL. (%)	-
4.12 - 4.23	0 to 25.0 ms	0
4.13	0 to 30000	TL : 75 / T : 150 / TM : 180 / TH : 215
4.14	0 to 30000	TL : 1000 / T : 2000 / TM : 2400 / TH : 3000
4.15	0 to 400.0 s	89.0 s
4.16 - 4.22 - 4.25	OFF (0) or On (1)	OFF (0)
4.19	0 to 100 %	-
4.20	± I _{MAX} UTIL. (%)	-
4.24	± IACTIVE MAX (%)	175.0 %

UNIDRIVE SP Commissioning

H6.7 - Menu 4 : Current loop, servo torque adjustment

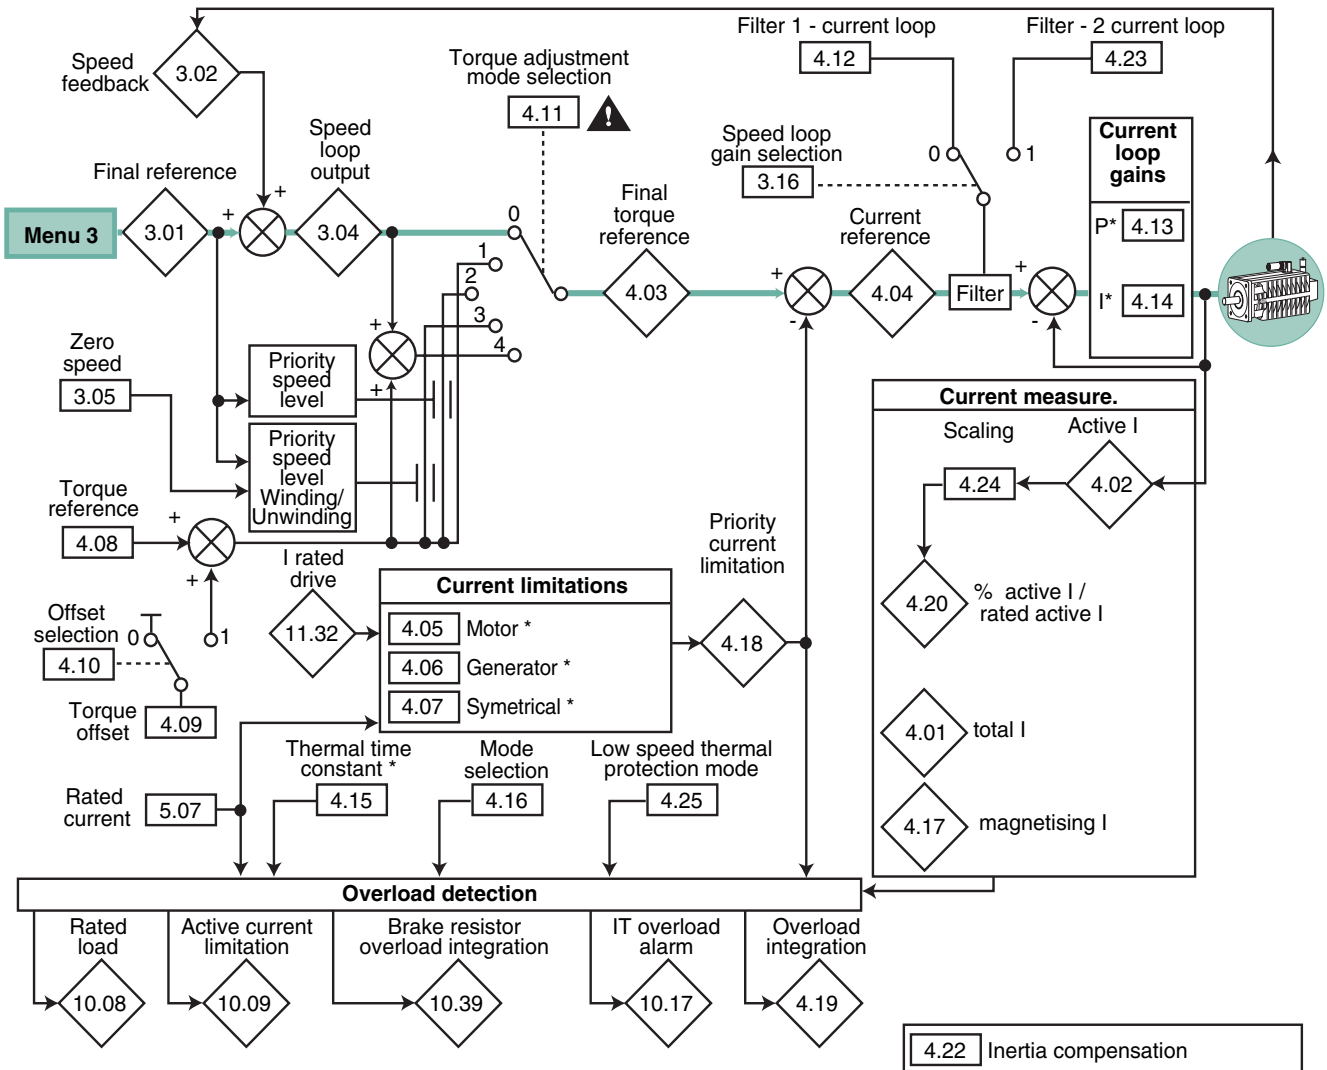


⚠ When the torque command mode without speed control is validated (**4.11 = 1**) and on the zero resistant torque, the drive accelerates up to the overspeed threshold **3.08** (stop). If **3.08** is at 0, the maximum speed reached will be of **1.06 + 20 %**.
 • When the modes 2 or 3 are selected, the drive does not take into account the stopping mode set and generates a stop without ramp.

* When motor 2 is selected (**11.45 = On** (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range	Factory settings
4.01	0 to I_{MAX} VAR (A)	-
4.02 - 4.17	$\pm I_{MAX}$ VAR (A)	-
4.03 - 4.04 - 4.18	$\pm I_{ACTIVE}$ MAX (%)	-
4.05 - 4.06 - 4.07	0 to LIM. IM1 MAX (%)	175.0 %
4.08 - 4.09	$\pm I_{MAX}$ UTIL. (%)	-
4.12 - 4.23	0 to 25.0 ms	0
4.13	0 to 30000	TL : 75 / T : 150 / TM : 180 / TH : 215
4.14	0 to 30000	TL : 1000 / T : 2000 / TM : 2400 / TH : 3000
4.15	0 to 3000.0 s	20.0 s
4.16 - 4.22 - 4.25	OFF (0) or On (1)	OFF (0)
4.19	0 to 100 %	-
4.20	$\pm I_{MAX}$ UTIL. (%)	-
4.24	$\pm I_{ACTIVE}$ MAX (%)	175.0 %



UNIDRIVE SP Commissioning

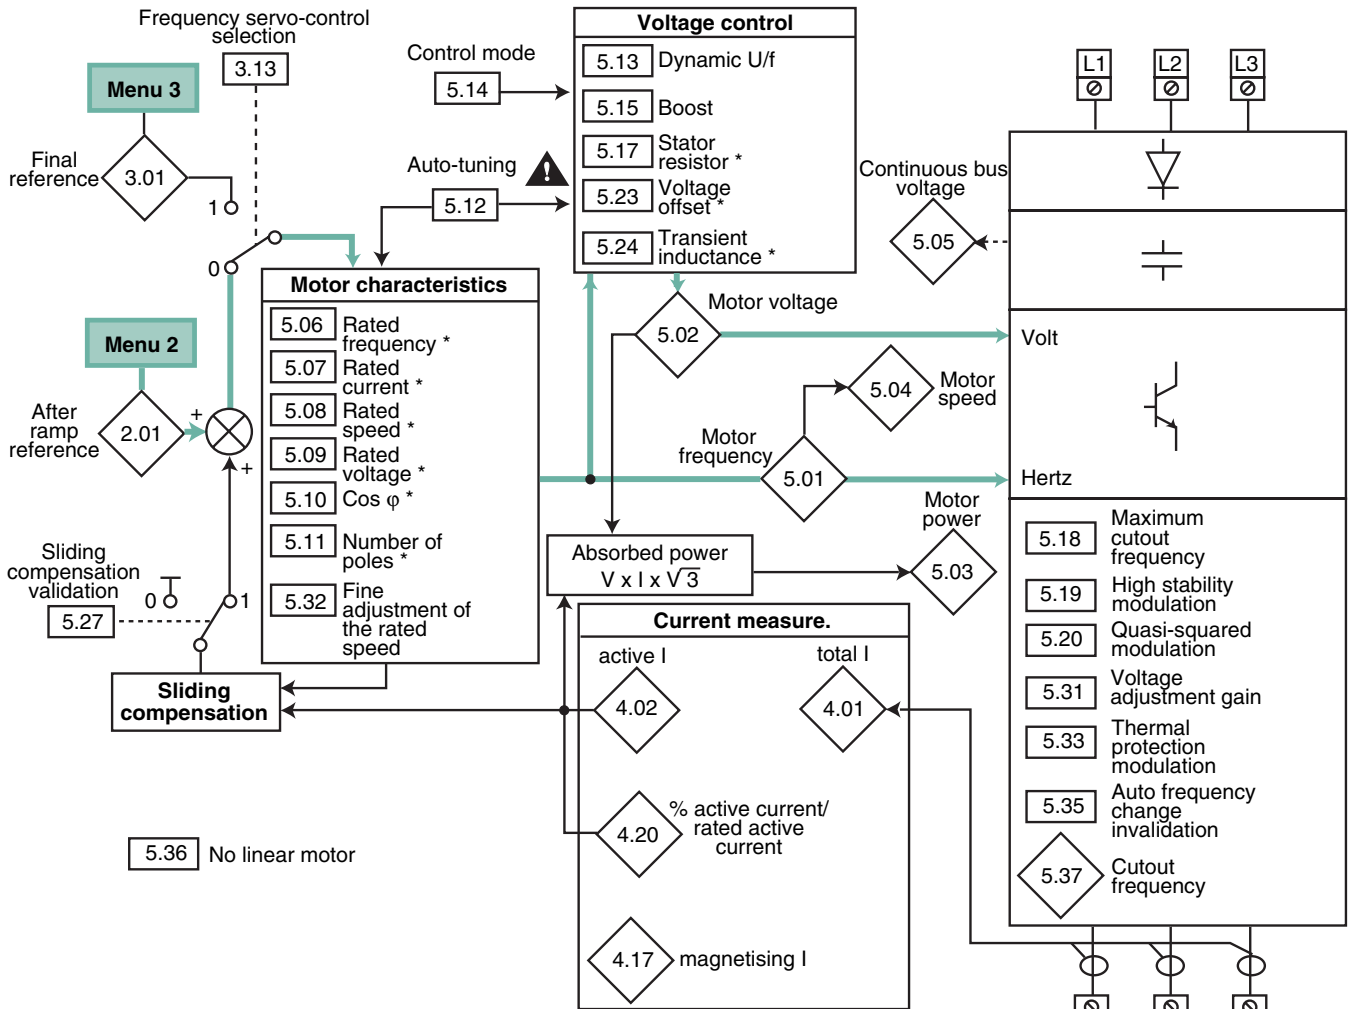H6.8 - Menu 5 : Motor control in open loop




- For certain values of 5.12, the drive drives the revolving motor. Check that this operation is safe and that the motor is stopped before auto-tuning.
- After modification of the motor parameters, restart auto-tuning.

* When motor 2 is selected (**11.45** = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range 	Factory settings 
5.01	± REF. MAX (Hz)	-
5.02	0 to U _{AC} OUT MAX (V)	-
5.03	± P MAX (kW)	-
5.04	± 180000 min ⁻¹	-
5.05	0 to U _{DC} MAX (V)	-
5.06	0 to 3000 Hz	EUR : 50.0 Hz / USA : 60.0 Hz
5.07	0 to I _N MAX (A)	I _{RATED} VAR (11.32)
5.08	0 to 180000 min ⁻¹	EUR : 1500 min ⁻¹ / USA : 1800 min ⁻¹
5.09	0 to U _{AC} MOT. MAX (V)	TL : 200V / T : EUR = 400V, USA = 480V / TM : 575V / TH : 690V
5.10	0 to 1,000	0.850
5.11	Auto to 120 Poles (0 to 60)	Auto (0)
5.12	0 to 2	0
5.13 - 5.35 - 5.19 - 5.20	OFF (0) or On (1)	OFF (0)
5.14	Ur_S (0), Ur (1), Fd (2), Ur_Auto (3), Ur_I (4), SrE (5)	Ur_I (4)
5.15	0 to 25.0 % de U _{RATED} MOT.	3.0 %
5.17	0 to 65.000 Ω	0
5.18	3 (0), 4 (1), 6 (2), 8 (3), 12 (4), 16 (5) kHz	3 (0) kHz
5.23	0 to 25.0 V	0
5.24	0 to 500.000 mH	0
5.31	0 to 30	1
5.36	0 to 655.35 mm	0
5.37	3 (0), 4 (1), 6 (2), 8 (3), 12 (4), 16 (5), 6 rEd (6), 12 rEd (7)	-

UNIDRIVE SP Commissioning

H6.9 - Menu 5 : Motor control in closed loop and servo

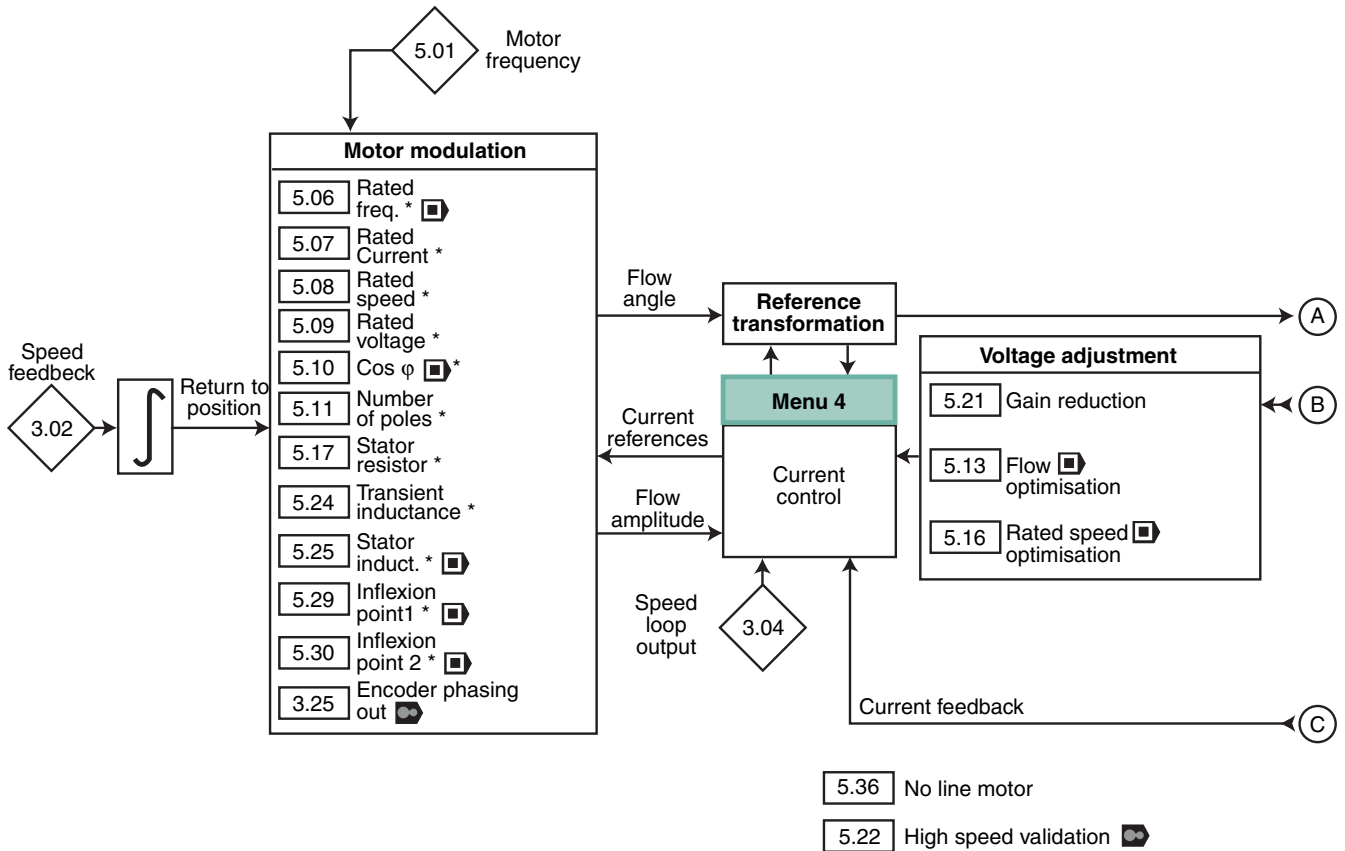


* When motor 2 is selected (**11.45** = On (1)), these parameters are no longer active and they are replaced by menu 21 parameters.

Parameters	Variation range		Factory settings	
5.01	± 1250.0 Hz		-	
5.06	0 to 1250.0 Hz	-	EUR : 50.0Hz / USA : 60.0Hz	-
5.07	0 to I_R MAX (A)		I_{RATED} VAR (11.32)	
5.08	0 to 40000.00 min ⁻¹		EUR : 1450.00 min ⁻¹ USA : 1770.00 min ⁻¹	3000.00 min ⁻¹
5.09	0 to U_{AC} MOT. MAX (V)		TL : 200V / T : EUR = 400V, USA = 480V / TM : 575V / TH : 690V	
5.10	0 to 1.000	-	0.850	-
5.11	Auto to 120POLE (0 to 60)		Auto (0)	6POLE (3)
5.13	OFF (0) or On (1)	-	OFF (0)	-
5.16	0 to 2	-	0	-
5.17	0 to 65.000 Ω		0	
5.21	OFF (0) or On (1)		OFF (0)	
5.22	-	OFF (0) or On (1)	-	OFF (0)
5.24	0 to 500000 mH		0	
5.25	0 to 5000.00 mH	-	0	-
5.29	0 to 100 % of the rated flux	-	50 %	-
5.30	0 to 100 % of the rated flux	-	75 %	-
5.36	0 to 655.35 mm		0	

UNIDRIVE SP Commissioning

Menu 5 in closed loop and servo (continued)

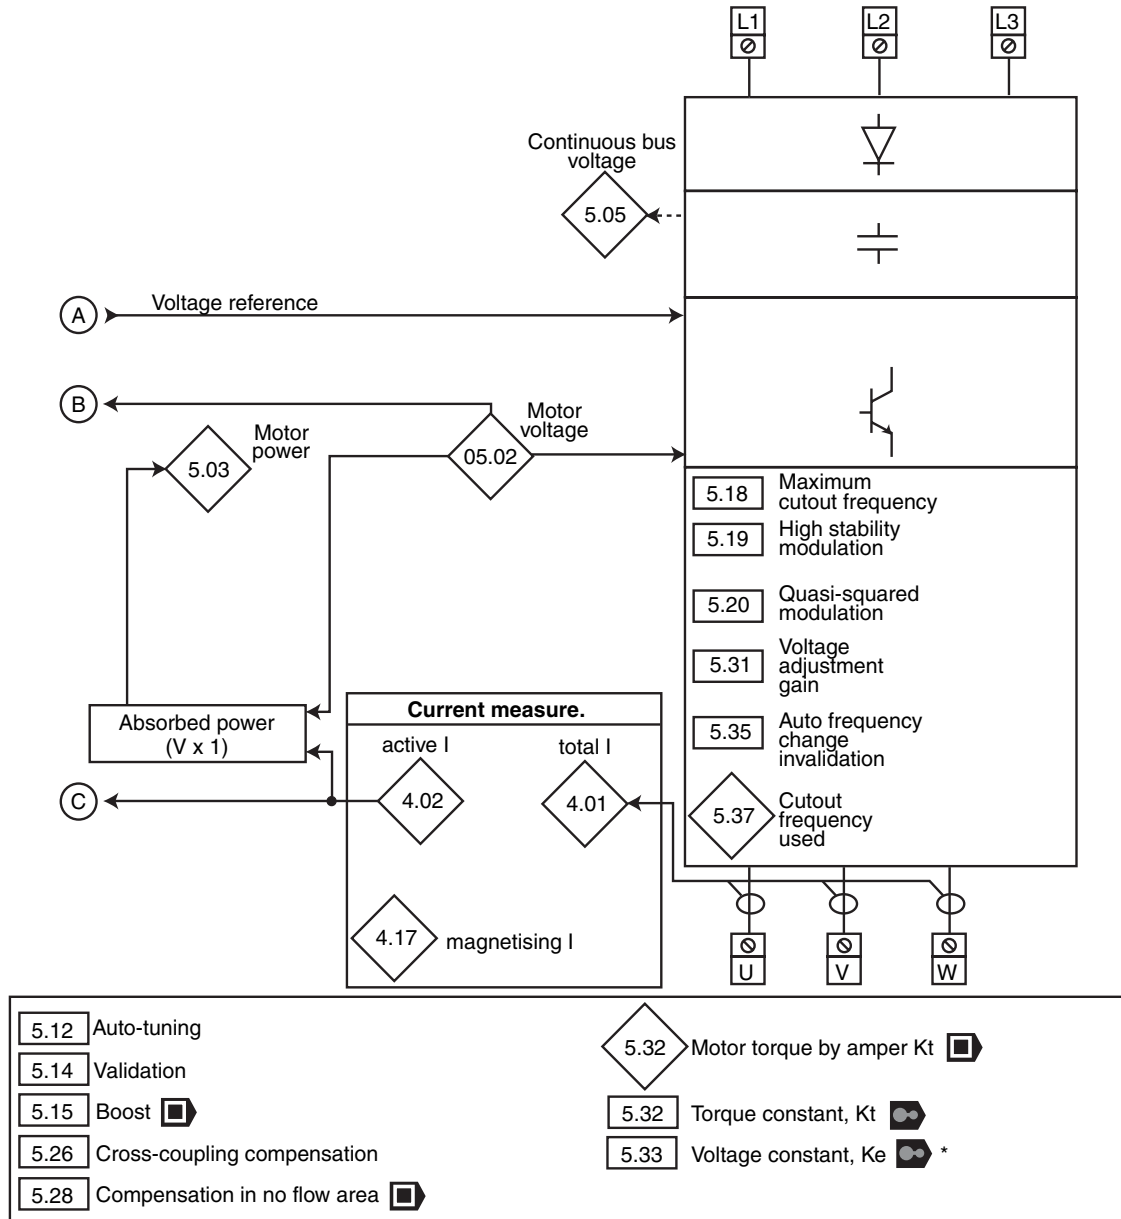


- For certain values of 5.12, the drive drives the revolving motor. Check that this operation is safe and that the motor is stopped before the auto-tuning.
- After the modification of the motor parameters, renew the auto-tuning.

Parameters	Variation range		Factory settings	
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.02	0 to U_{AC} OUT MAX (V)		-	-
5.03	\pm P MAX (kW)		-	-
5.05	0 to U_{DC} MAX (V)		-	-
5.12	0 to 4	0 to 6	0	
5.14	-	nonE (0), PhEnl (1), PhInit (2)	-	nonE (0)
5.15	0 to 25.0 % U_{RATED} MOT.	-	1.0	-
5.18	3 (0), 4 (1), 6 (2), 8 (3), 12 (4), 16 (5) kHz		3 (0) kHz	6 (2) kHz
5.19 - 5.20 - 5.26	OFF (0) or On (1)		OFF (0)	
5.35	OFF (0) or On (1)		OFF (0)	
5.28	OFF (0) or On (1)	-	OFF (0)	-
5.31	0 to 30		1	
5.32	0 to 500.00 NmA ⁻¹		-	1.60 NmA ⁻¹
5.33	-	0 to 10000 V	-	98 V
5.37	3 (0), 4 (1), 6 (2), 8 (3), 12 (4), 16 (5), 6 rEd (6), 12 rEd (7)		-	

UNIDRIVE SP Commissioning

H6.10 - Menu 6 : Management of digital commands and meters

- Management of digital commands

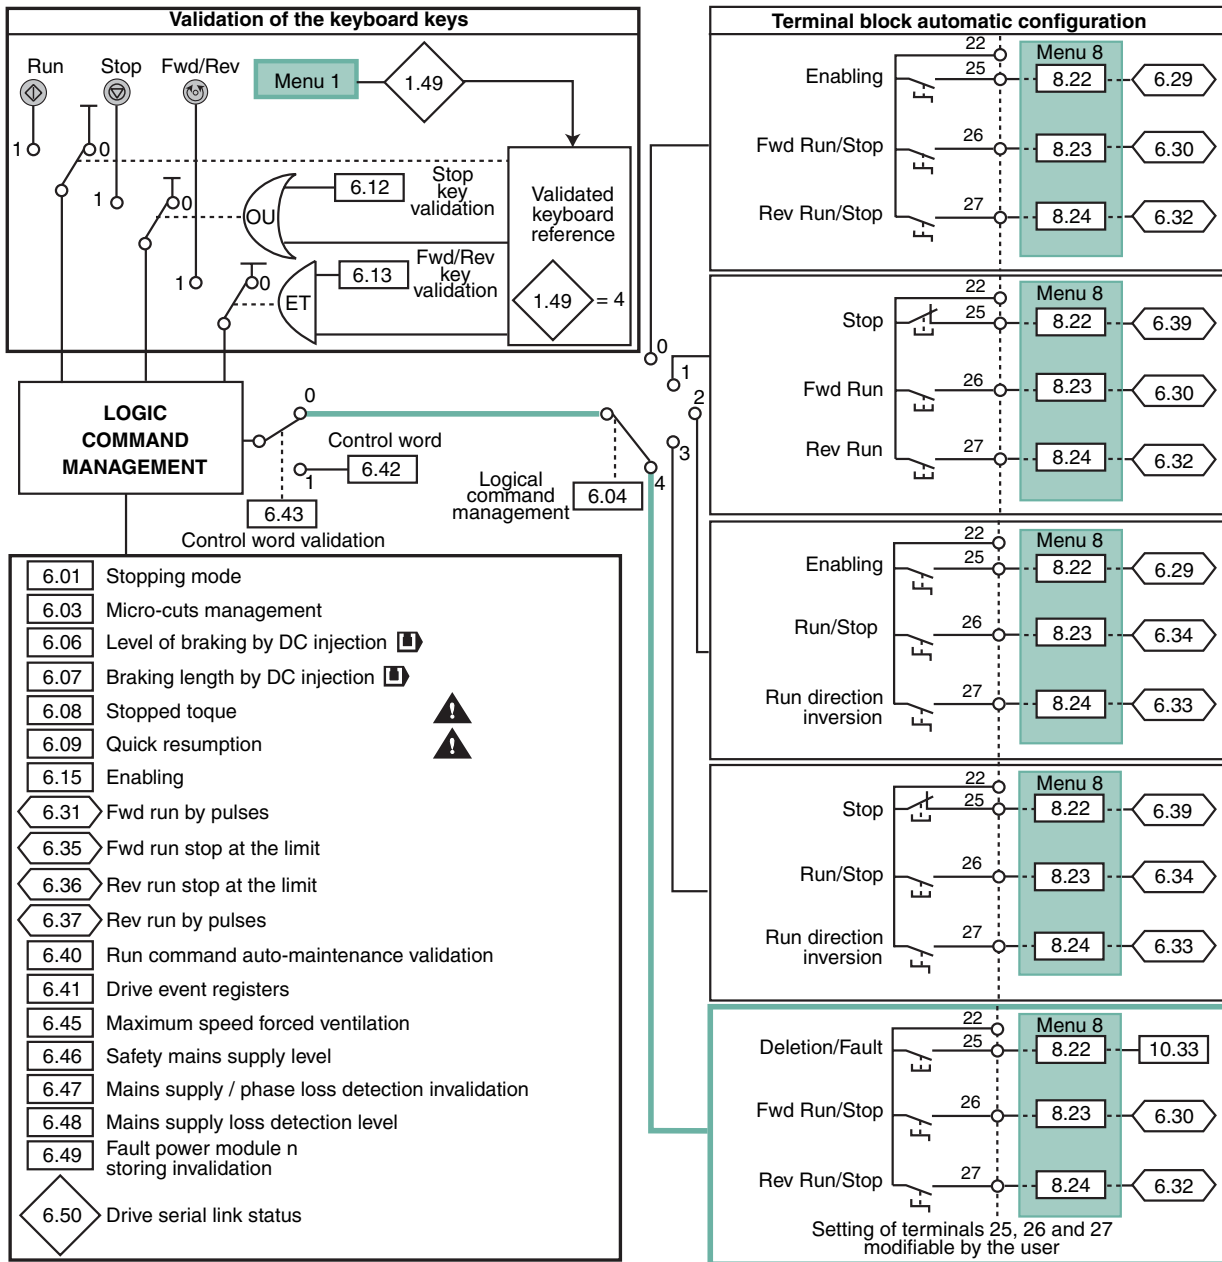


⚠ • If the stopped torque is validated, voltage presence at the stopped motor terminals.
 • If the motor is just a little loaded, the quick resumption validation may cause the revolving of the machine in a non defined direction, with the motor acceleration. Make sure that there is no danger for persons and goods.

Parameters	Variation range			Factory settings		
	☑	☐	⚡	☑	☐	⚡
6.01	COASt (0), rP (1), rP.dcl (2), dcl (3), td.dcl (4), disable (5)	COASt (0), rP (1), no.rP (2)		rP (1)		no.rP (2)
6.03	diS (0), StoP (1), ridE.th (2)			diS (0)		
6.06	0 to 150.0 %			100.0 %		-
6.07	0 to 25.0 s			1.0 s		-
6.08	OFF (0) or On (1)			OFF (0) On (1)		
6.09	0 to 3	0 to 1		0		1
6.12 - 6.13 - 6.30 - 6.31 - 6.32 6.33 - 6.34 - 6.35 - 6.36 - 6.37 6.39 - 6.40 - 6.45 - 6.47 - 6.49	OFF (0) or On (1)			OFF (0)		
6.15	OFF (0) or On (1)			On (1)		
6.29	OFF (0) or On (1)			-		
6.41	0 or 65535			0		
6.42	0 or 32767			0		
6.46	Size 1 : 48V, sizes 2 and 3 : 48V to 72V			48V		
6.48	0 to threshold U _{dc} MAX (V)			TL : 205V, T : 410V, TM : 540V, TH : 540V		
6.50	Drv (0), Slot (1), Slot 2 (2), Slot 3 (3)			-		

UNIDRIVE SP Commissioning


Menu 6 (continued) • Time meters

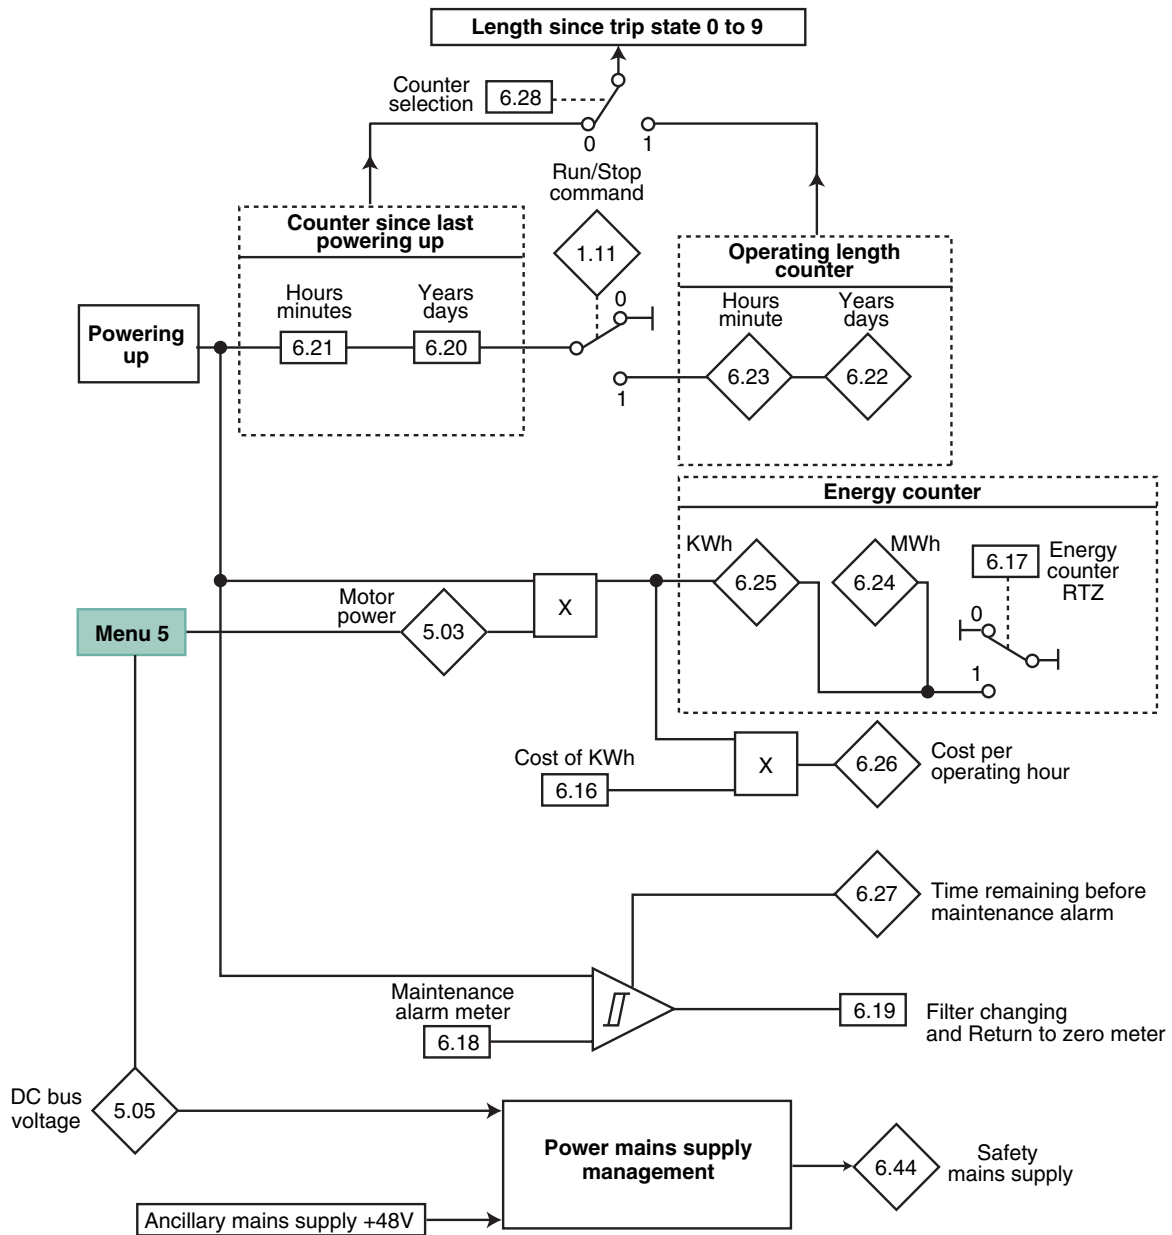

Parameters	Variation range			Factory settings		
6.16	0 to 600.0 device/kWh			0		
6.19 - 6.28	OFF (0) or On (1)			OFF (0)		
6.18	0 to 30000 h			0		
6.20 - 6.22	0 to 9365 years, days			-		
6.21 - 6.23	0 to 23.59 h, min			-		
6.24	0 to 999.9 MWh			-		
6.25	0 to 99.99 kWh			-		
6.26	± 32000 device/hours			-		
6.27	0 to 30000 h			-		
6.44	OFF (0) or On (1)			-		

UNIDRIVE SP Commissioning

H6.11 - Menu 7 : Configuration of the analogue inputs - outputs

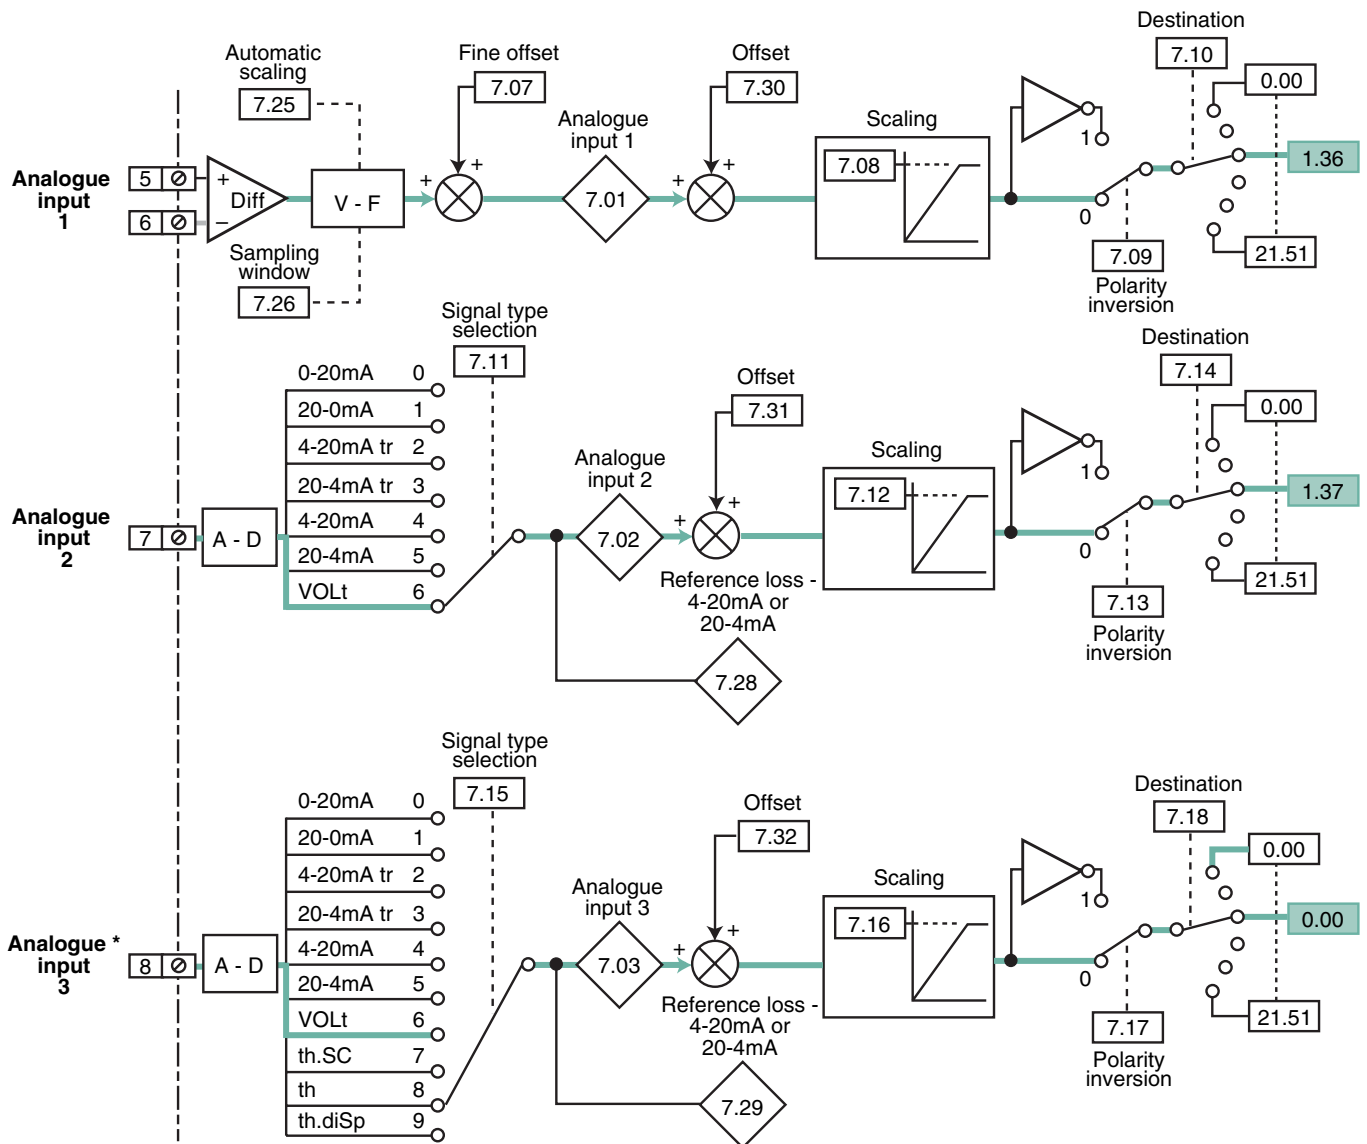


* Terminal 8 is internally connected to pin 15 of the HD-15 connector.
If the motor probes are connected to pin 15, terminal 8 is no longer available.

Parameters	Variation range			Factory settings		
7.01		± 100.00 %				-
7.02 - 7.03		± 100.0 %				-
7.07		± 10.000 %				0
7.08 - 7.12 - 7.16		0 to 4.000				1.000
7.25		OFF (0) or On (1)				OFF (0)
7.26		0 to 8.0 ms				4.0 ms
7.28 - 7.29		OFF (0) or On (1)				-
7.30		± 100.00 %				0
7.31 - 7.32		± 100.0 %				0

UNIDRIVE SP Commissioning


Menu 7 (continued)

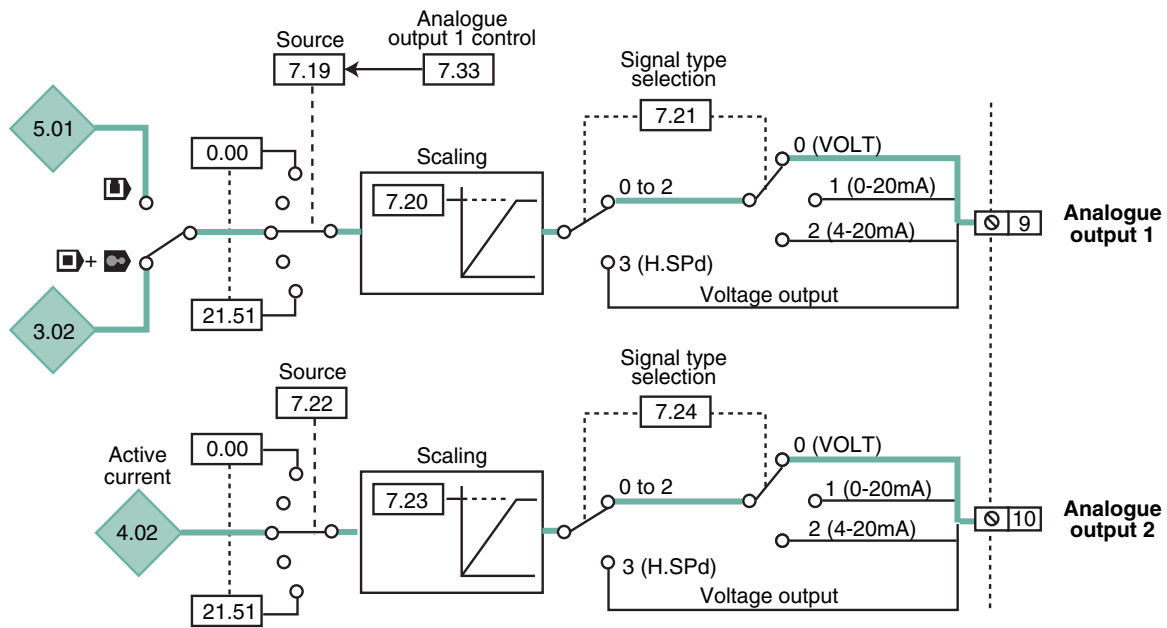









Variable speed drive environment	
7.04	Temperature 1 power stage
7.05	Temperature 2 power stage
7.06	Control card temperature
7.34	IGBT junction temperature
7.35	Drive thermal protection battery

Note : If the user wants to obtain the image of the speed on the analogue output 1, the output full scale value corresponds to the maximum value of the source parameter selected.

In factory settings (7.21 = VOLT (0)) :


- in , the selected source is **5.01** " motor frequency ", the analogue output will be full scale (9.8V) when REF MAX is reached (**1.06**),

- in  or , the selected source is **3.02** " Speed feedback ", the analogue output will be full scale (9.8V) when N MAX is reached (2 x **1.06**).

Parameters	Variation range			Factory settings		
						
7.04 - 7.05 - 7.06	-128 to +127 °C			-		
7.20 - 7.23	0 to 4.000			1.000		
7.33	Fr (0), Ld (1), Adv (2)			Adv (2)		
7.34	± 200 °C			-		
7.35	0 to 100.0 %			-		

UNIDRIVE SP Commissioning

H6.12 - Menu 8 : Configuration of digital inputs - outputs

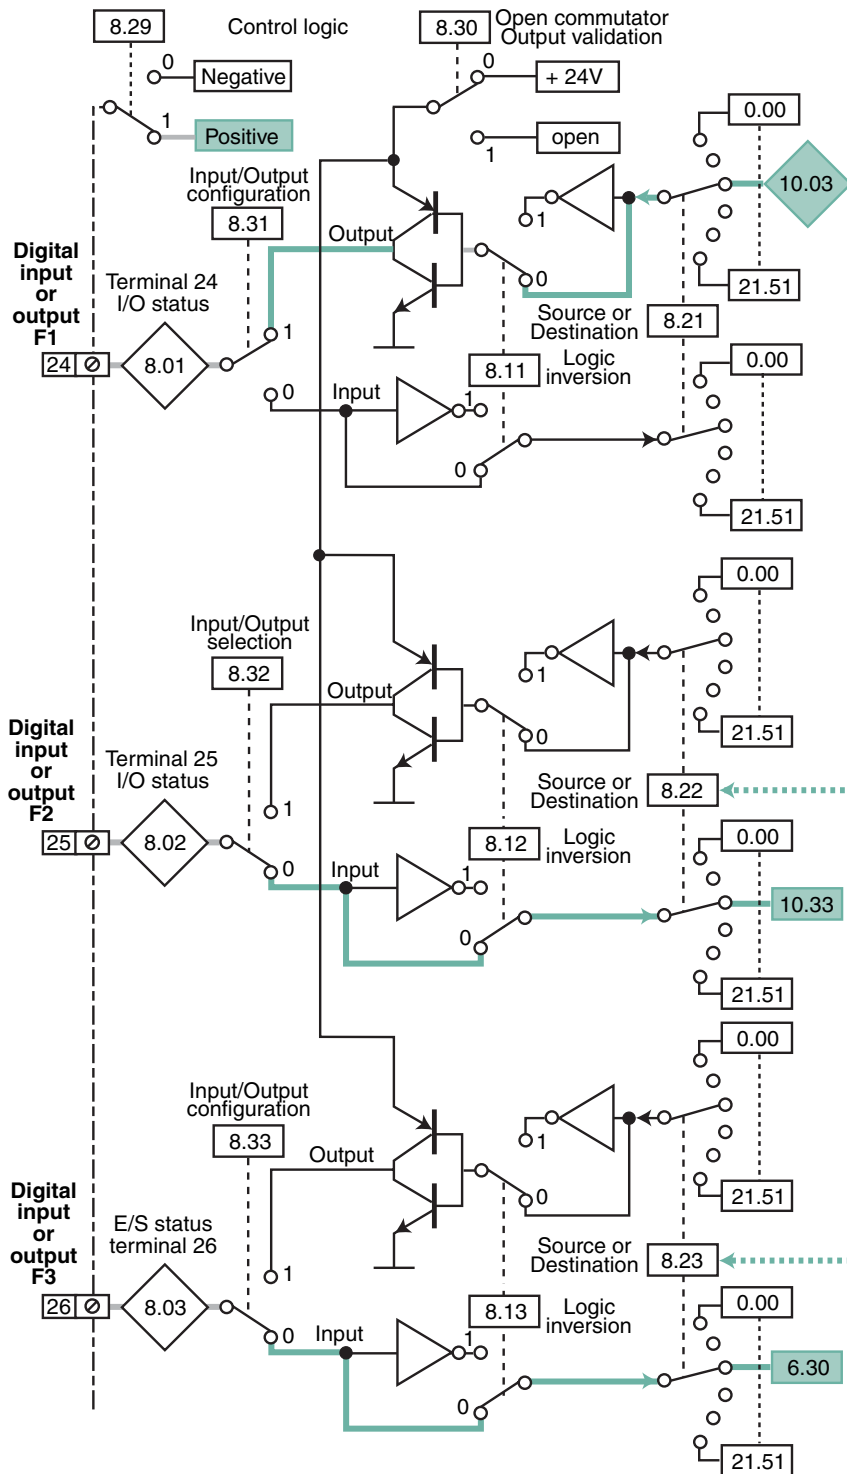

6.04	Logic command management		
	Terminal 25	Terminal 26	6.40
0	6.29 Enabling	6.30 Fwd Run	0 (maintained)
1	6.39 Stop\	6.30 Fwd Run	1 (pulse)
2	6.29 Enabling	6.34 Run	0 (maintained)
3	6.39 Stop\	6.34 Run	1 (pulse)
4	User settings (10.33)	User settings (6.30)	User settings

Validation 6.04 : Press the Reset key (disabled drive)


CAUTION:

If the brake command is validated by **12.41** = 1 or 2, it has effect on terminal 25 (with priority on **6.04**) so that **8.12** = 0 and **8.22** = **10.01** (if **12.41** = 1) or **8.22** = **12.40** (if **12.41** = 2).

Parameters	Variation range		Factory settings	
	OFF	ON	OFF	ON
8.01 - 8.02 - 8.03	OFF (0) or On (1)		-	

UNIDRIVE SP Commissioning

Menu 8 (continued)

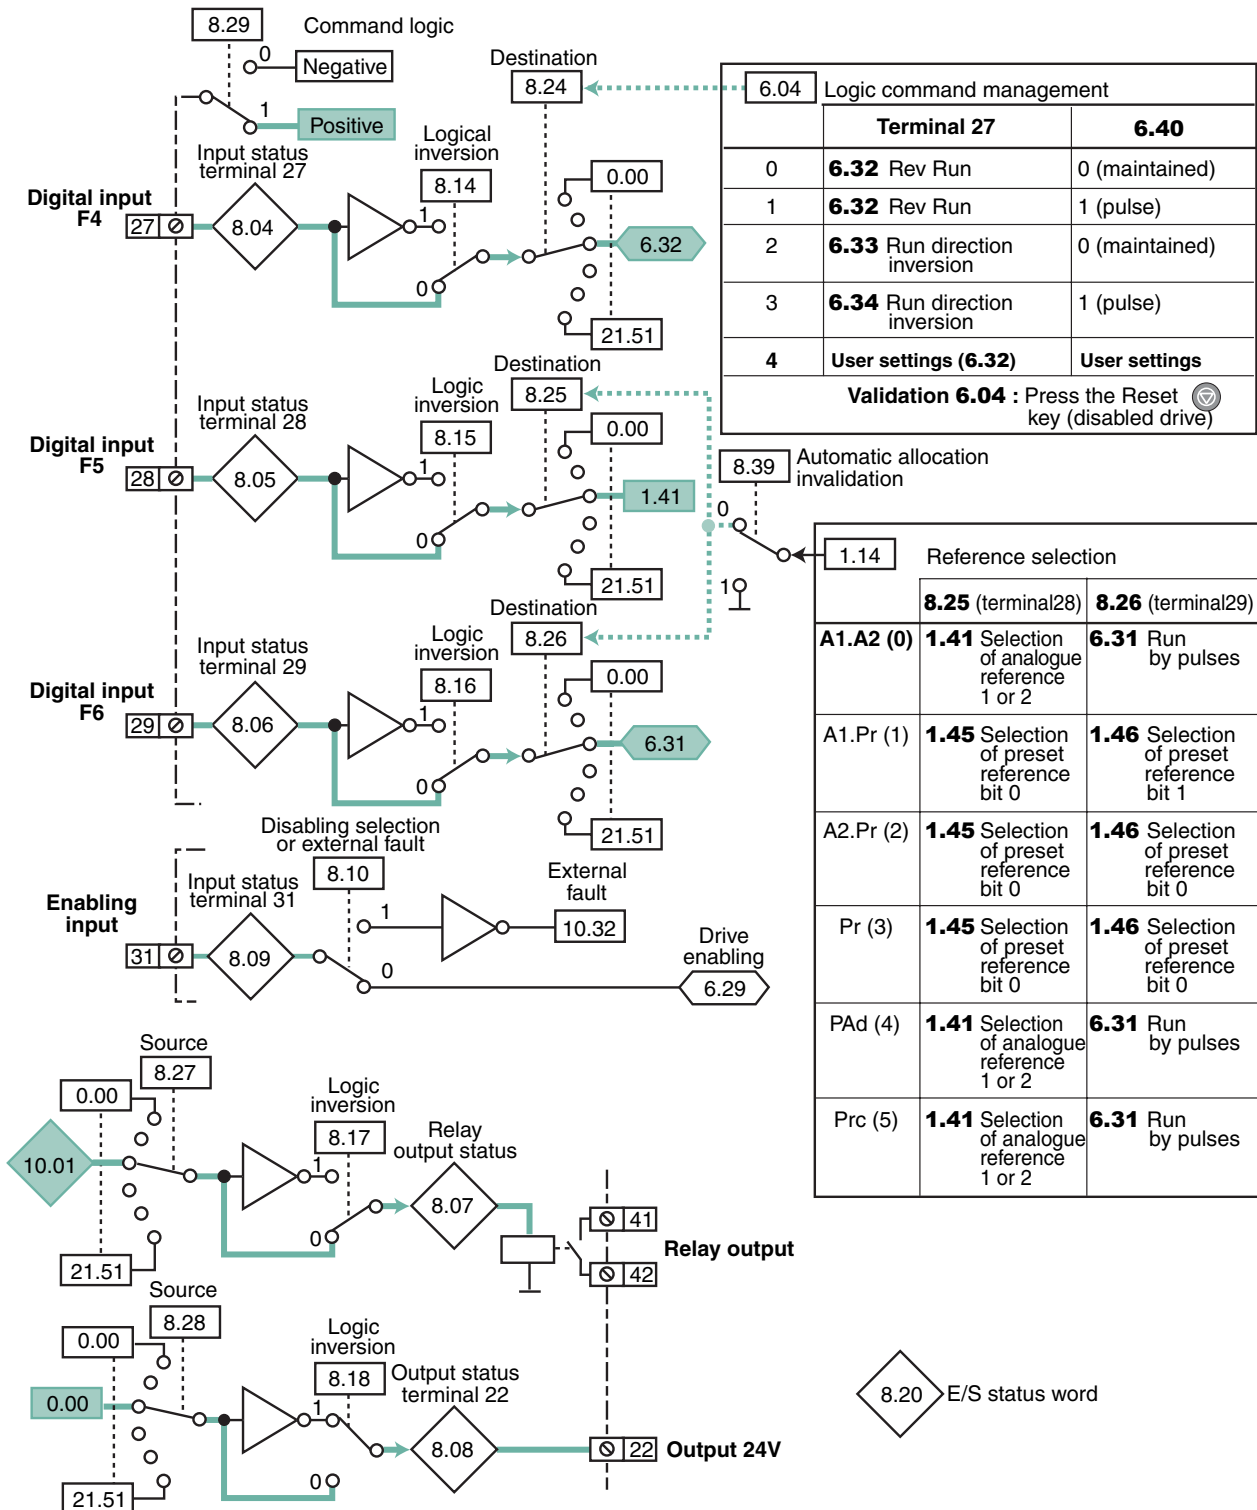





CAUTION:

If the brake command is validated by 12.41 = 1, it has effect on the relays, so that 8.17 = 0 and 8.27 = 12.40.

Parameters	Variation range			Factory settings		
	OFF	ON	Both	OFF	ON	Both
8.04 to 8.09	OFF (0) or On (1)			-		
8.20	0 to 511			-		

UNIDRIVE SP Commissioning

H6.13 - Menu 9 : Digital functions

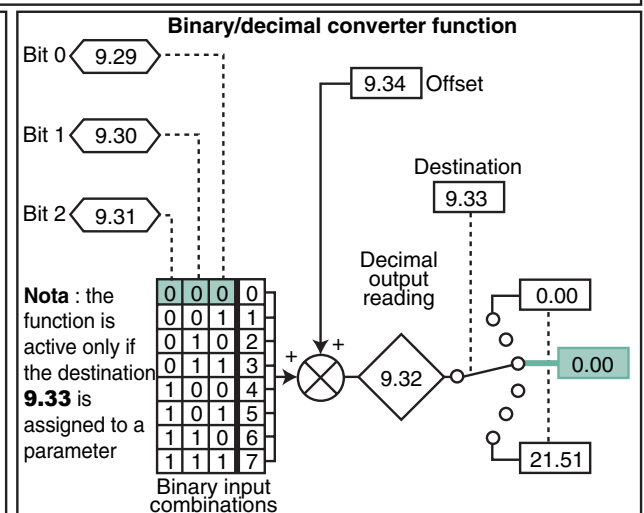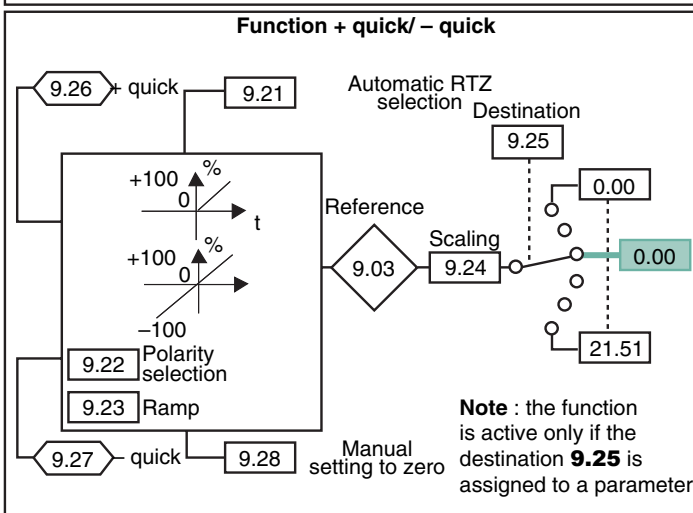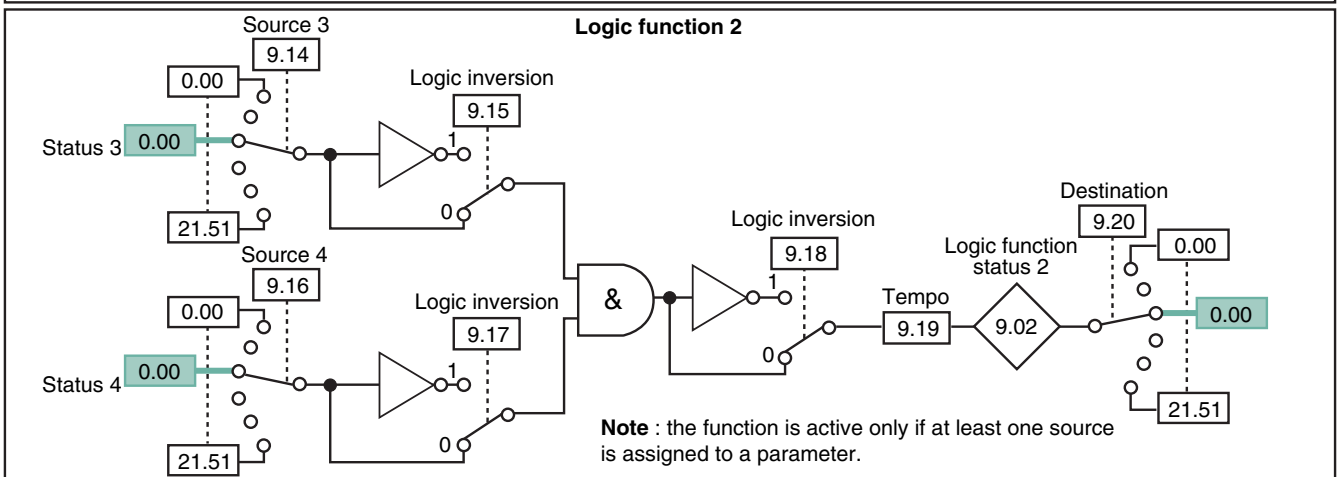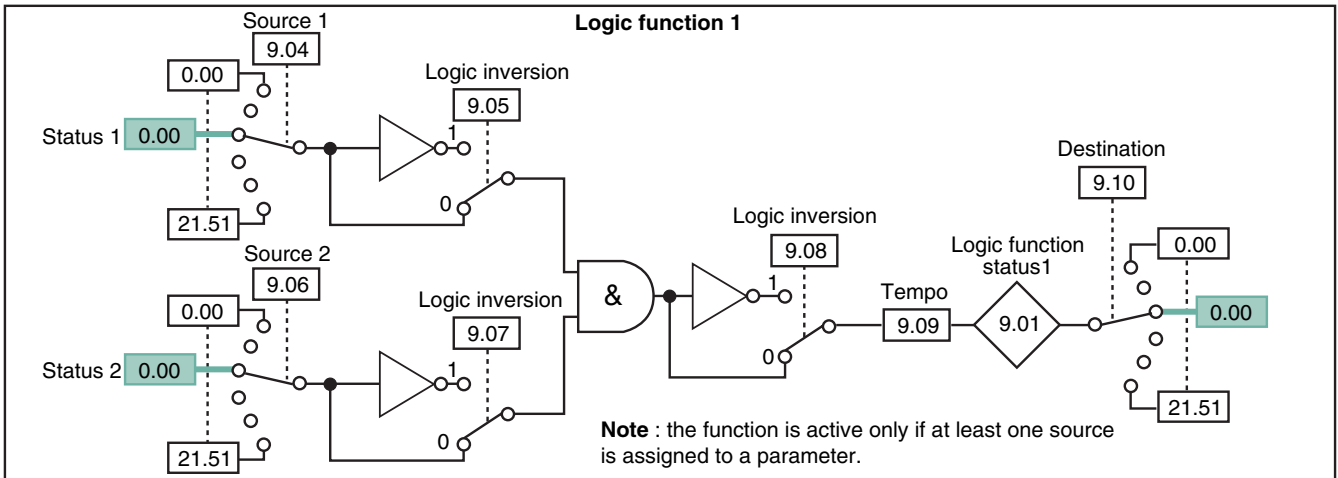

Parameters	Variation range			Factory settings		
9.01 - 9.02						
9.03						-
9.09 - 9.19						0
9.21						2
9.23						20 s
9.24						1.000
9.26 - 9.27 - 9.28 - 9.22						OFF (0)
9.32						-
9.34						0

UNIDRIVE SP Commissioning

H6.14 - Menu 10 : Variable speed drive status and diagnosis

Operating status

Parameters	Description	Variation range			Factory settings		
10.01	Ready variable speed drive	OFF (0) or ON (1)			-		
10.02	Activated variable speed drive output	OFF (0) or ON (1)			-		
10.03	Zero frequency or speed	OFF (0) or ON (1)			-		
10.04	Minimum frequency or speed	OFF (0) or ON (1)			-		
10.05	Frequency or speed lower than the low threshold	OFF (0) or ON (1)			-		
10.06	Reach reference	OFF (0) or ON (1)			-		
10.07	Frequency or speed higher than high threshold	OFF (0) or ON (1)			-		
10.08	Rated load	OFF (0) or ON (1)			-		
10.09	Active current limitation	OFF (0) or ON (1)			-		
10.13	Required reverse rotation	OFF (0) or ON (1)			-		
10.14	Reverse rotation	OFF (0) or ON (1)			-		

Braking

Parameters	Description	Variation range			Factory settings		
10.10	Dynamic braking	OFF (0) or ON (1)			-		
10.11	Braking on resistors	OFF (0) or ON (1)			-		
10.12	Overload alarm, braking resistor	OFF (0) or ON (1)			-		
10.30	Resistor maximum braking length	0 to 400.00 s			TL : 0.09 s, T : 0.02 s, TM : 0.01, TH : 0.01 For drivers sizes 3 and higher: 0		
10.31	Resistor maximum braking cycle	0 to 1500.0 s			2.0 s For drivers sizes 3 and higher: 0		
10.39	Integration of braking resistor overload	0 to 100.0 %			-		

UNIDRIVE SP Commissioning







Menu 10 (continued)

Faults

Parameters	Description	Variation range			Factory settings		
							
10.15	Mains supply absence	OFF (0) or ON (1)			-		
10.16	Powered up detection	OFF (0) or ON (1)			-		
10.17	IT overheating alarm	OFF (0) or ON (1)			-		
10.18	Variable speed drive overheating alarm	OFF (0) or ON (1)			-		
10.19	Variable speed drive alarm	OFF (0) or ON (1)			-		
10.20	Fault - 0	0 to 230 (value by serial link)			-		
10.21	Fault - 1	0 to 230 (value by serial link)			-		
10.22	Fault - 2	0 to 230 (value by serial link)			-		
10.23	Fault - 3	0 to 230 (value by serial link)			-		
10.24	Fault - 4	0 to 230 (value by serial link)			-		
10.25	Fault - 5	0 to 230 (value by serial link)			-		
10.26	Fault - 6	0 to 230 (value by serial link)			-		
10.27	Fault - 7	0 to 230 (value by serial link)			-		
10.28	Fault - 8	0 to 230 (value by serial link)			-		
10.29	Fault - 9	0 to 230 (value by serial link)			-		
10.32	External fault	OFF (0) or ON (1)			-		
10.33	Fault deletion	OFF (0) or ON (1)			OFF (0)		
10.34	Number of automatic fault deletion	0 to 5			0		
10.35	Time delay of automatic fault deletion	0 to 25.0 s			1.0 s		
10.36	Maintenance of the ready drive status on automatically deleted defaults	OFF (0) or ON (1)			OFF (0)		

UNIDRIVE SP Commissioning

Faults (continued)

Parameters	Description	Variation range			Factory settings		
							
10.37	Minor faults						0
10.38	User faults						0
10.40	Status word						-
10.41	Length since fault 0 (Year.days)						-
10.42	Length since fault 0 (Hour.minutes)						-
10.43	Module fault number 1, Length between default 1 and default 0						-
10.44	Module fault number 2, Length between default 2 and default 0						-
10.45	Module fault number 3, Length between default 3 and default 0						-
10.46	Module fault number 4, Length between default 4 and default 0						-
10.47	Module fault number 5, Length between default 5 and default 0						-
10.48	Module fault number 6, Length between default 6 and default 0						-
10.49	Module fault number 7, Length between default 7 and default 0						-
10.50	Module fault number 8, Length between default 8 and default 0						-
10.51	Module fault number 9, Length between default 9 and default 0						-



UNIDRIVE SP Commissioning

H6.15 - Menu 11 : Setting of menu 0 - serial link - variable speed drive characteristics

Configuration of menu 0

Parameters	Description	Variation range			Factory setting		
11.01	Setting of 0.11 of menu 0	1.00 to 21.51			5.01		3.29
11.02	Setting of 0.12 of menu 0	1.00 to 21.51			4.01		
11.03	Setting of 0.13 of menu 0	1.00 to 21.51			4.02		7.07
11.04	Setting of 0.14 of menu 0	1.00 to 21.51			4.11		
11.05	Setting of 0.15 of menu 0	1.00 to 21.51			2.04		
11.06	Setting of 0.16 of menu 0	1.00 to 21.51			8.39	2.02	
11.07	Setting of 0.17 of menu 0	1.00 to 21.51			8.26	4.12	
11.08	Setting of 0.18 of menu 0	1.00 to 21.51			8.29		
11.09	Setting of 0.19 of menu 0	1.00 to 21.51			7.11		
11.10	Setting of 0.20 of menu 0	1.00 to 21.51			7.14		
11.11	Setting of 0.21 of menu 0	1.00 to 21.51			7.15		
11.12	Setting of 0.22 of menu 0	1.00 to 21.51			1.10		
11.13	Setting of 0.23 of menu 0	1.00 to 21.51			1.05		
11.14	Setting of 0.24 of menu 0	1.00 to 21.51			1.21		
11.15	Setting of 0.25 of menu 0	1.00 to 21.51			1.22		
11.16	Setting of 0.26 of menu 0	1.00 to 21.51			1.23	3.08	
11.17	Setting of 0.27 of menu 0	1.00 to 21.51			1.24	3.34	
11.18	Setting of 0.28 of menu 0	1.00 to 21.51			6.13		
11.19	Setting of 0.29 of menu 0	1.00 to 21.51			11.36		
11.20	Setting of 0.30 of menu 0	1.00 to 21.51			11.42		

Serial link

Parameters	Description	Variation range			Factory settings		
11.23	Serial link address	0 to 247			1		
11.24	Communication Type	AnSi (0), rtU (1), Lcd (2)			rtU (1)		
11.25	Serial link transmission speed	300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8)*, 115200 (9)*			19200 (6)		
11.26	Serial link communication time limit	0 to 250 ms			2 ms		

* Only Modbus RTU.

UNIDRIVE SP Commissioning

Menu 11 (continued)

Variable speed drive configuration

Parameters	Description	Variation range			Factory setting		
11.21	Scaling of parameter 0.30	0 to 9.999			1.000		
11.22	Parameter displayed when powering up	0.00 to 0.50			0.10		
11.28	Specific variable speed drive	0 to 16			-		
11.29	Software version (aa.bb)	1.00 to 99.99			-		
11.30	User safety code	0 to 999			0		
11.31	Selection of the operating mode	OPEn LP (1), CL VECt (2), SErVO (3), rEGEn (4)			OPEn LP (1)	CL VECt (2)	SErVO (3)
11.32	Variable speed drive rated current	0 to 9999.99 A			-		
11.33	Variable speed drive rated voltage	200 (0), 400 (1), 575 (2), 690 (3)			-		
11.34	Software version (DC)	0 to 99			-		
11.35	Number of power modules	1 to 8			-		
11.41	Length of return to initial display	0 to 250 s			240 s		
11.43	Return to factory settings	nonE (0), Eur (1), USA (2)			nonE (0)		
11.44	Access to level 2 and storing of the safety code	L1 (0), L2 (1), Loc (2)			L1 (0)		
11.45	Selection of motor 2	OFF (0) or On (1)			OFF (0)		
11.46	Previously loaded factory settings	0 to 2000			-		
11.47	Internal program validation	0 to 2			2		
11.48	Internal program status	- 128 to + 127			-		
11.49	Internal program events	0 to 65535 s			-		
11.50	Internal program max. execution time	0 to 65535 ms			-		
11.51	Internal program first execution	OFF (0) or ON (1)			-		

Note: • For the setting of **0.31** to **0.59**, see menu 22.

• The parameters **11.47** to **11.51** are used during the execution of the "Syptlite" program, conceived up by means of the Syptlite software available on the CD Rom delivered together with the variable speed drive.

UNIDRIVE SP Commissioning

Menu 11 (continued)





Parameter transfer by SMARTCARD

Parameters	Description	Variation range			Factory settings		
11.36	Last set of parametes transferred by SMARTCARD	0 to 999			-		
11.37	Database selection	0 to 1002			0		
11.38	Type of data and operating mode	0 : FrEE, 1 : 1, 2 : 3OpEn.LP, 3 : 3CL.VEct, 4 : 3SErVO, 5 : 3rEGEn, 6 : 3Un, 7 : 3Un, 8 : 3Un, 9 : 9, 10 : 4OpEn.LP, 11 : 4CL.VEct, 12 : 4SErVO, 13 : 4rEGEn, 14 : 4Un, 15 : 4Un, 16 : 4Un, 17 : LAddEr, 18 : Option			-		
11.39	Number of SMARTCARD version	0 to 9999			0		
11.40	Unit checksum	0 to 65335			-		
11.42	Parameter cloning	nonE (0), rEAd (1), Prog (2), Auto (3), boot (4)			nonE (0)		



UNIDRIVE SP Commissioning

H6.16 - Menu 12 : Comparators, transfers of variables

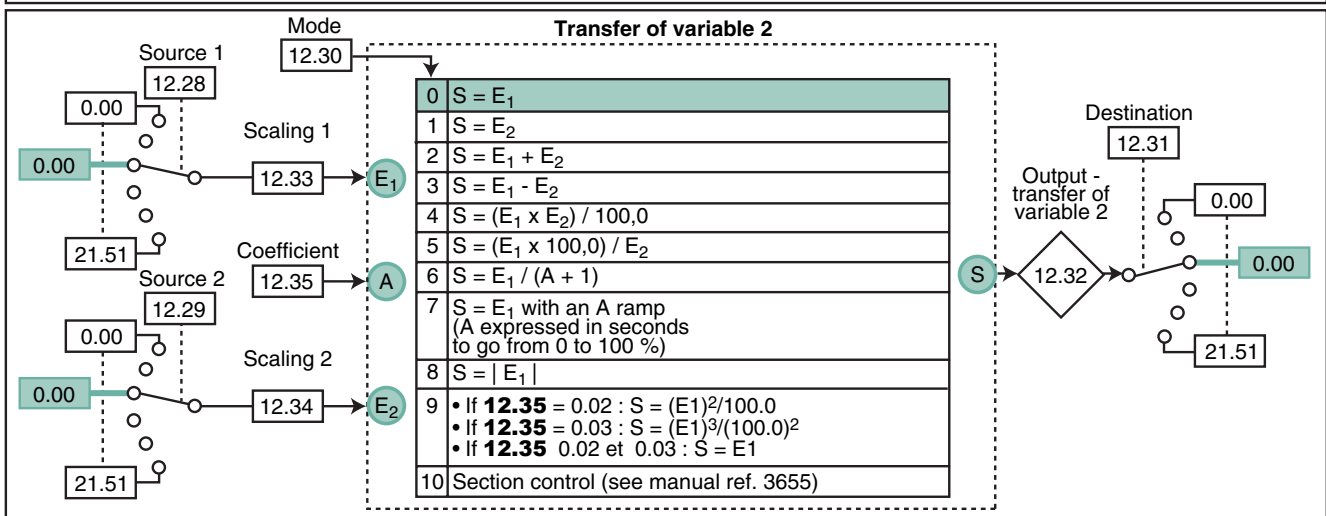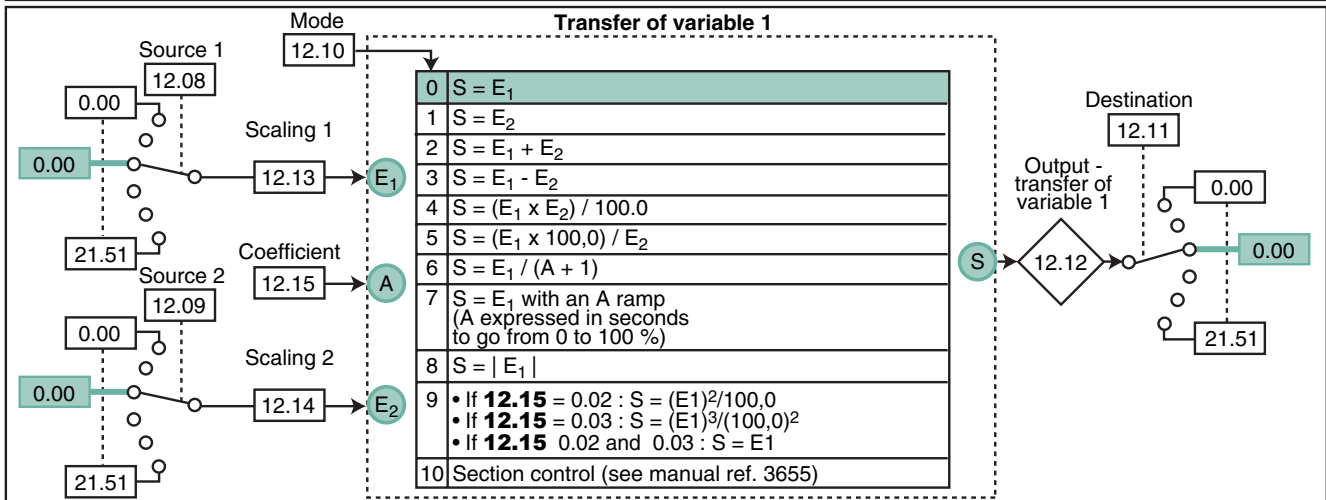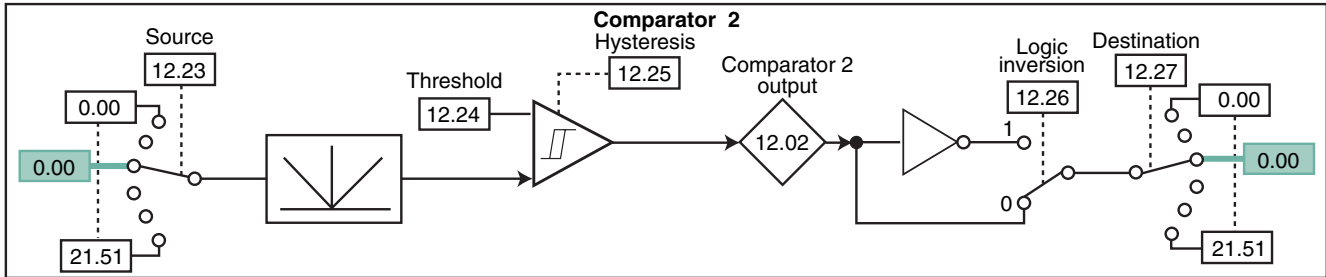
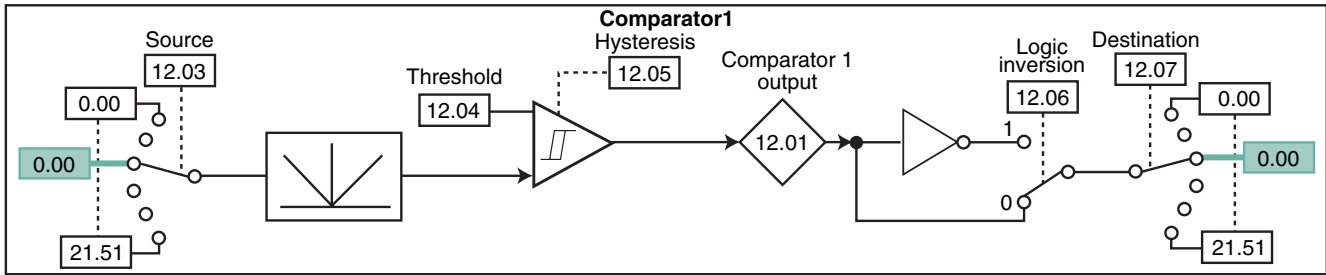




Parameters	Variation range			Factory settings		
	□	□	↔	□	□	↔
12.01 - 12.02	OFF (0) or On (1)			-		
12.04 - 12.24	0 to 100.00 %			0		
12.05 - 12.25	0 to 25.00 %			0		
12.12 - 12.32	± 100.00 %			-		
12.13 - 12.14 - 12.33 - 12.34	± 4.000			1.000		
12.15 - 12.35	0 to 100.00			0		

UNIDRIVE SP Commissioning

Menu 12 (continued)

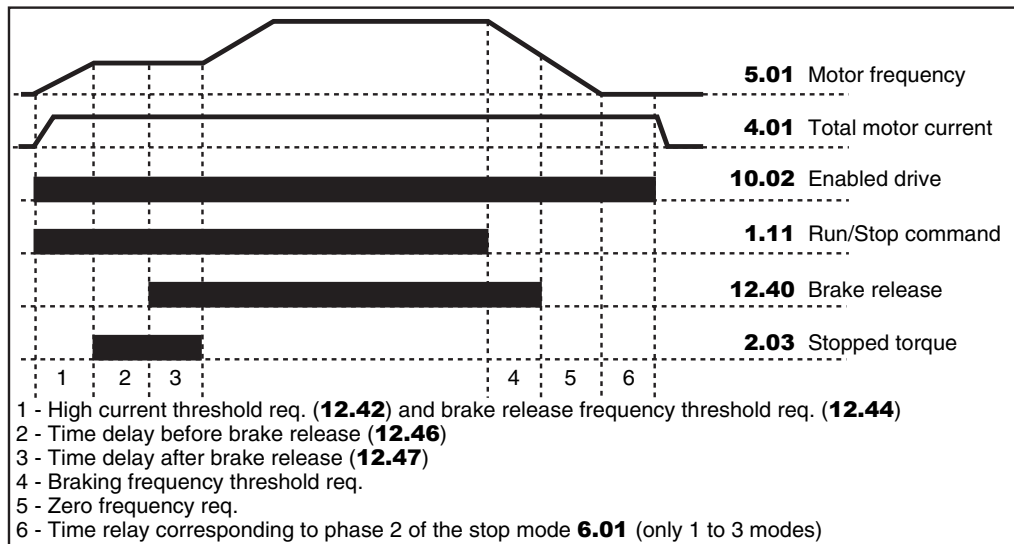
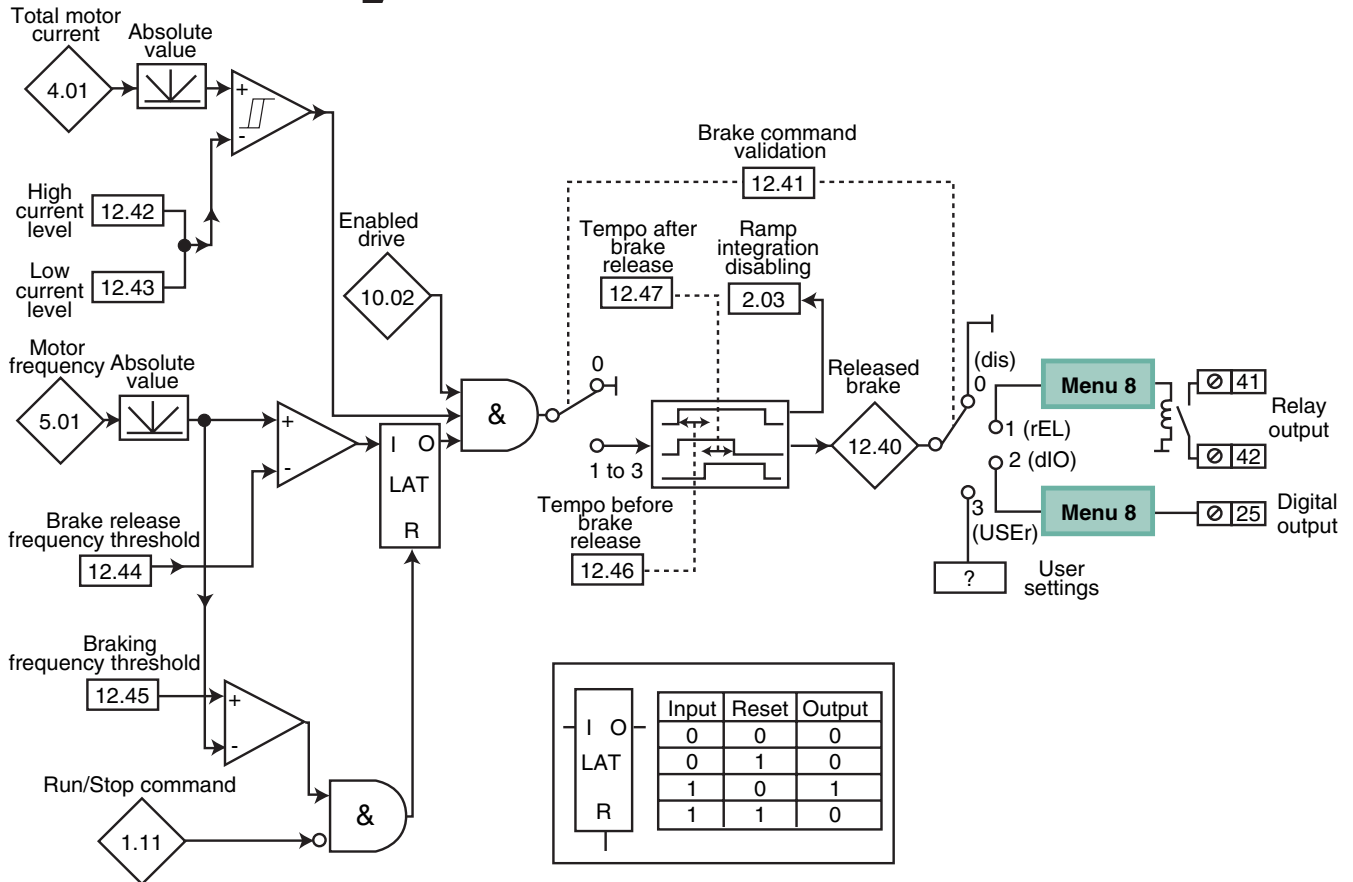
• Brake command in open loop







Parameters	Variation range 	Réglage usine 
12.40	OFF (0) or On (1)	-
12.42	0 to 200 %	50 %
12.43	0 to 200 %	10 %
12.44	0 to 20.0 Hz	1.0 Hz
12.45	0 to 20.0 Hz	2.0 Hz
12.46 - 12.47	0 to 25.0 s	1.0 s

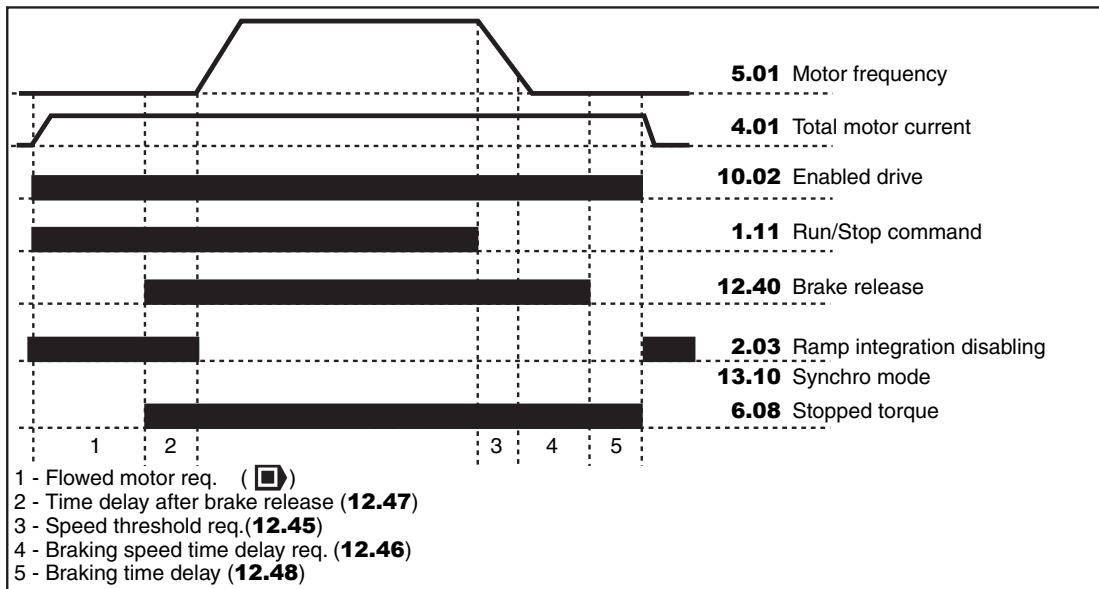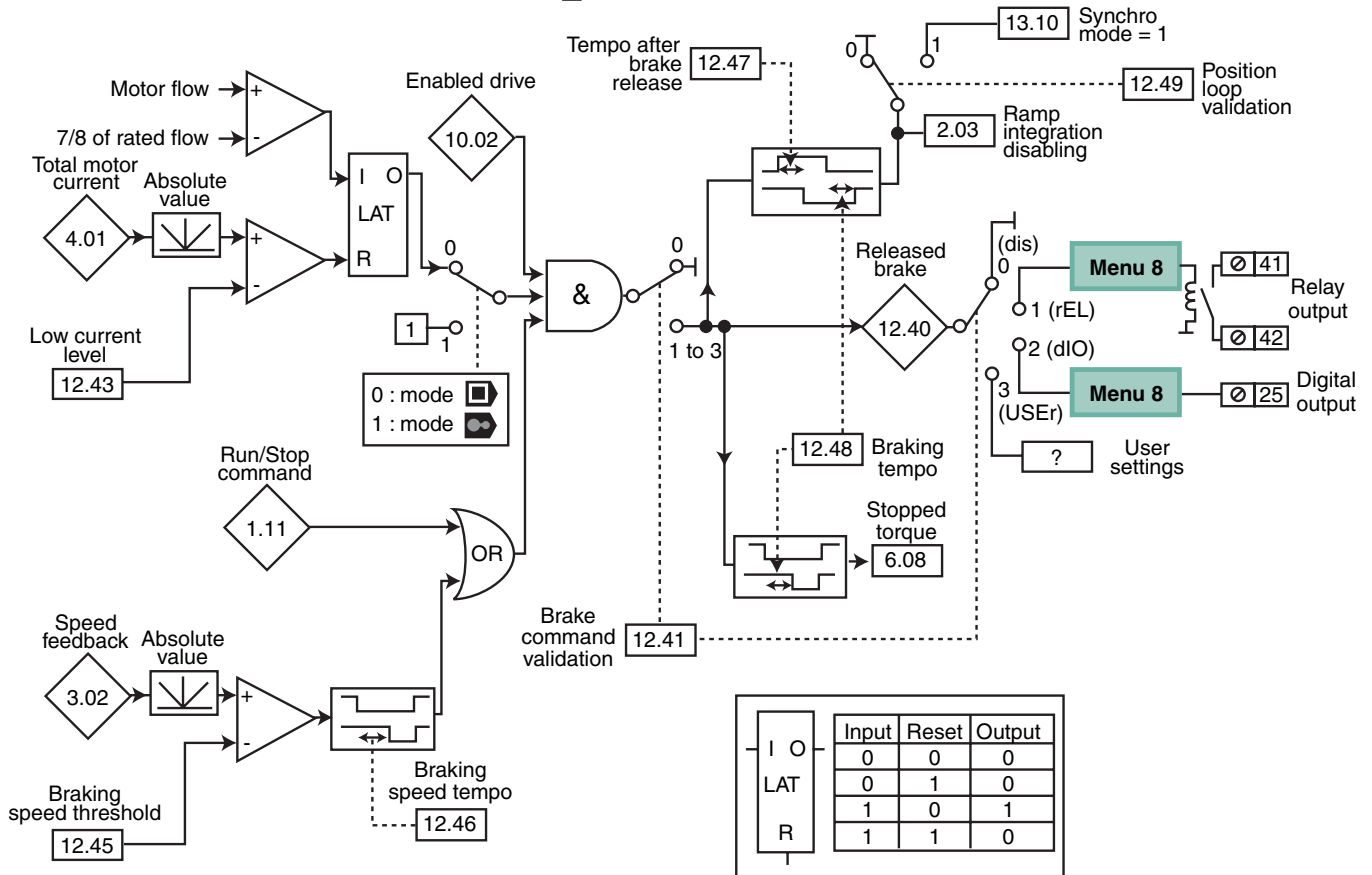UNIDRIVE SP Commissioning


• Brake command in closed loop and servo ,





Parameters	Variation range		Factory setting	
				
12.40	OFF (0) or On (1)		-	
12.43	0 to 200 %		10 %	
12.45	0 to 200 min ⁻¹		5 min ⁻¹	
12.46 - 12.47 - 12.48	0 to 25.0 s		1.0 s	

UNIDRIVE SP Commissioning

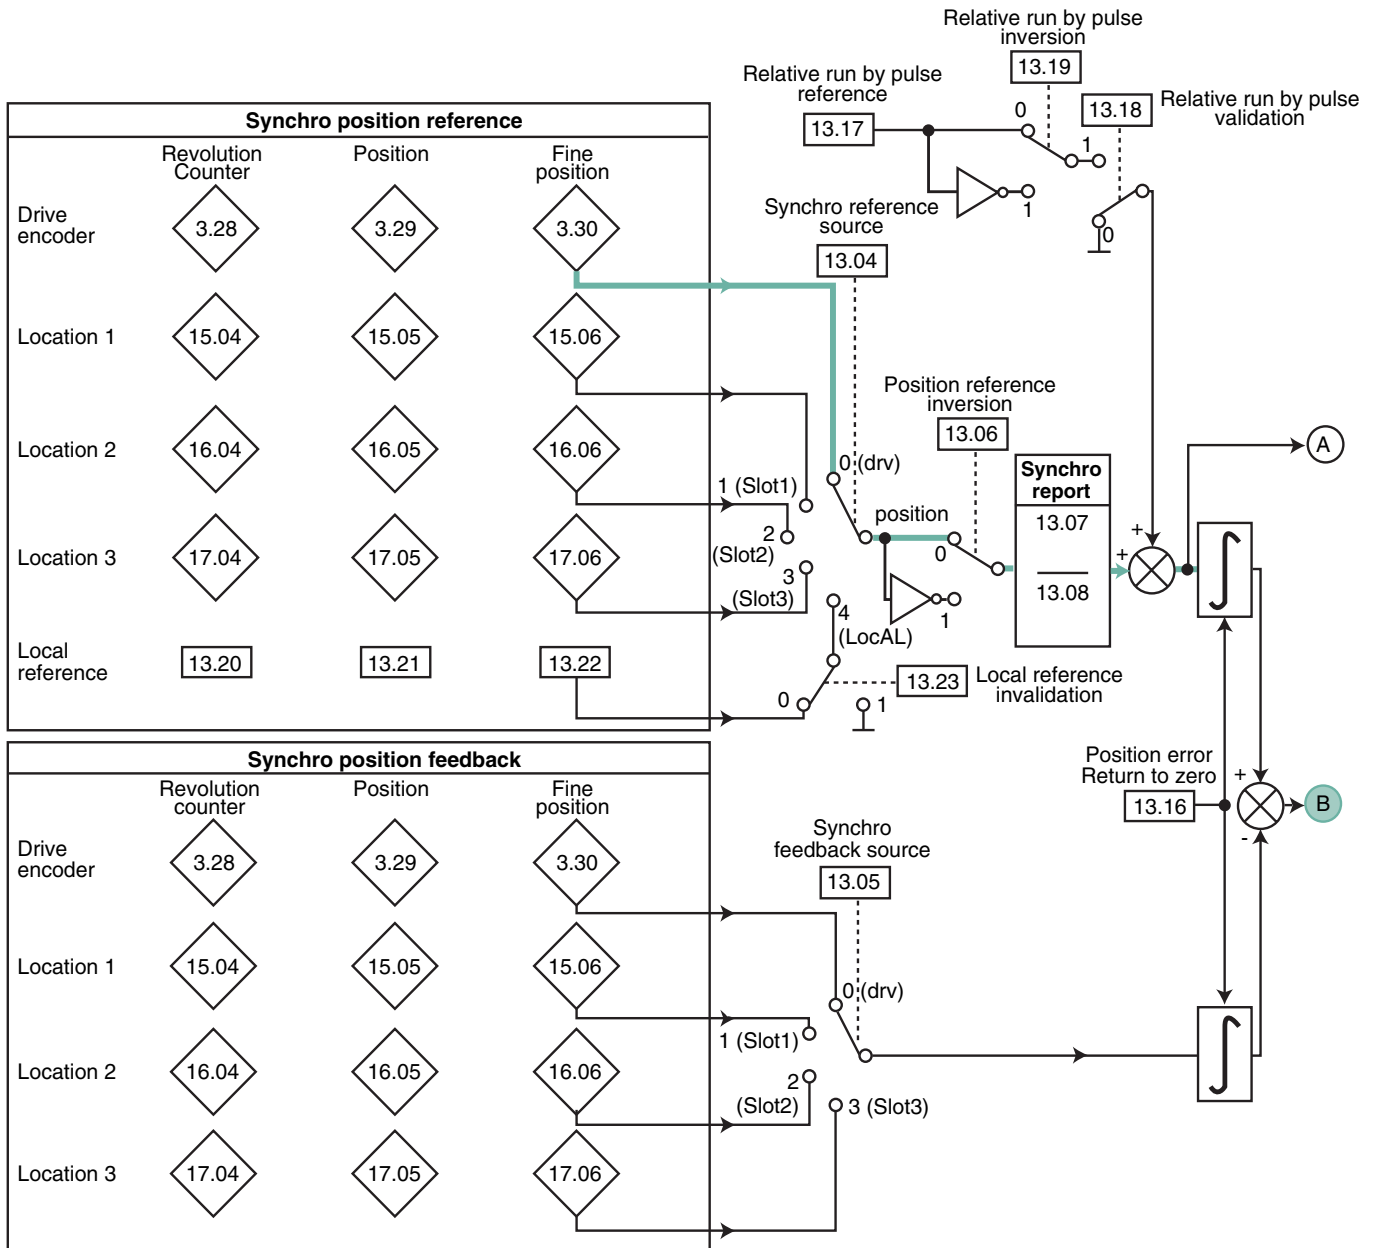
H6.17 - Menu 13 : Synchronisation in open loop





Parameters	Variation range ()	Factory settings ()
13.07	0 to 4.000	1.000
13.08	0 to 1.000	1.000
13.16	OFF (0) or On (1)	OFF (0)
13.17	0 to 4000.0 min ⁻¹	0

UNIDRIVE SP Commissioning

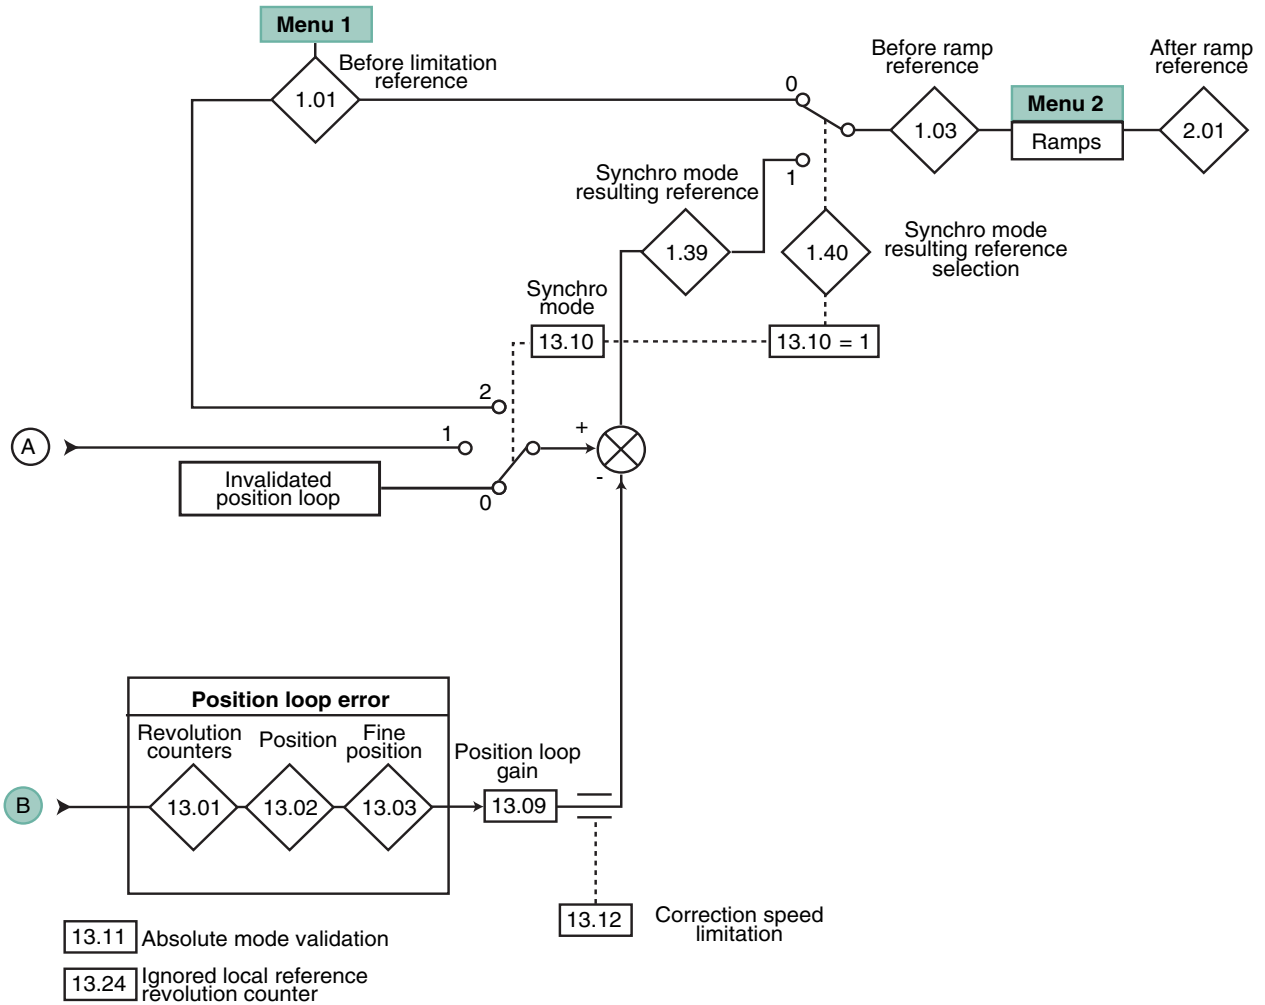
Menu 13 in open loop (continued)







Parameters	Variation speed ()	Factory setting ()
13.01 - 13.02 - 13.03	- 32768 to + 32767	-
13.09	0 to 100.00 rads ⁻¹ /rad	25.00 rads ⁻¹ /rad
13.10	0 à 2	0
13.11 - 13.23 - 13.18 - 13.19	OFF (0) or On (1)	OFF (0)
13.12	0 to 250	150
13.15	OFF (0) or On (1)	-
13.20 - 13.21 - 13.22	0 to 65535	0
13.24	OFF (0) or On (1)	OFF (0)

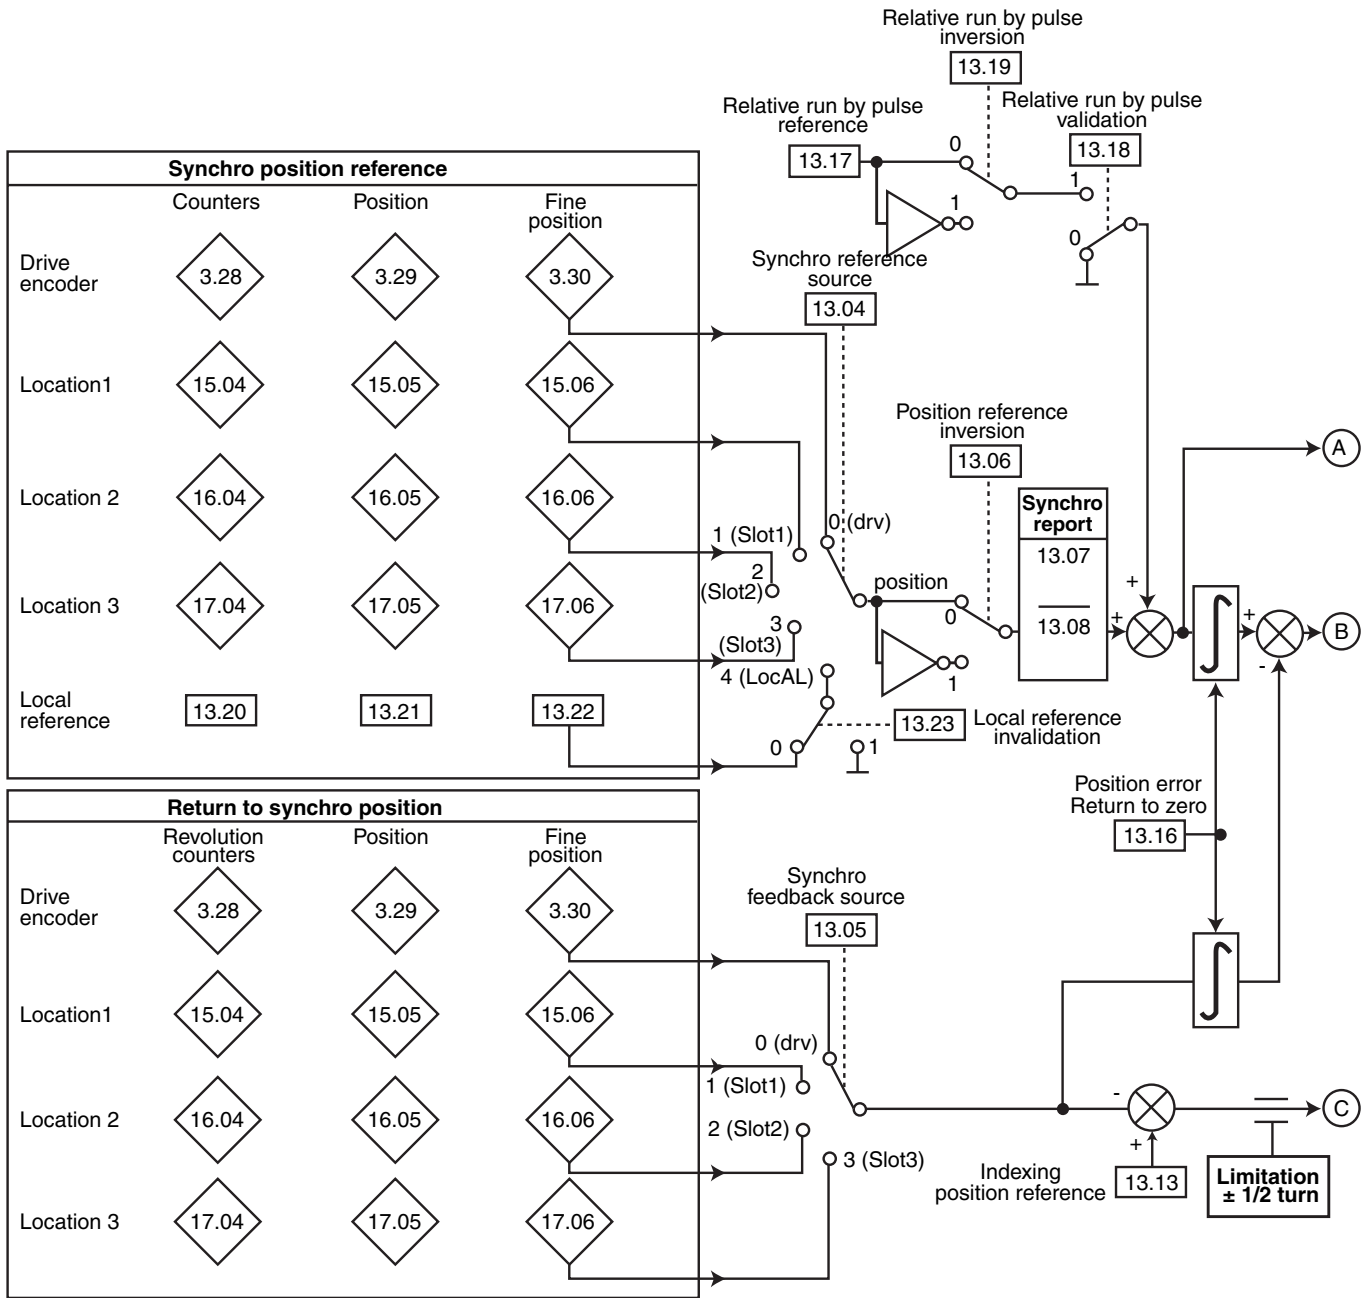UNIDRIVE SP Commissioning


H6.18 - Menu 13 : Synchronisation and indexing in closed loop and servo



Parameters	Variation range		Factory settings	
				
13.07	0 to 4.000		1.000	
13.08	0 to 1.000		1.000	
13.16	OFF (0) or On (1)		OFF (0)	
13.13	0 to 65535		0	
13.17	0 to 4000.0 min ⁻¹		0	
13.20 - 13.21 - 13.22	0 to 65535		0	

UNIDRIVE SP Commissioning


Menu 13 in closed loop and servo (continued)

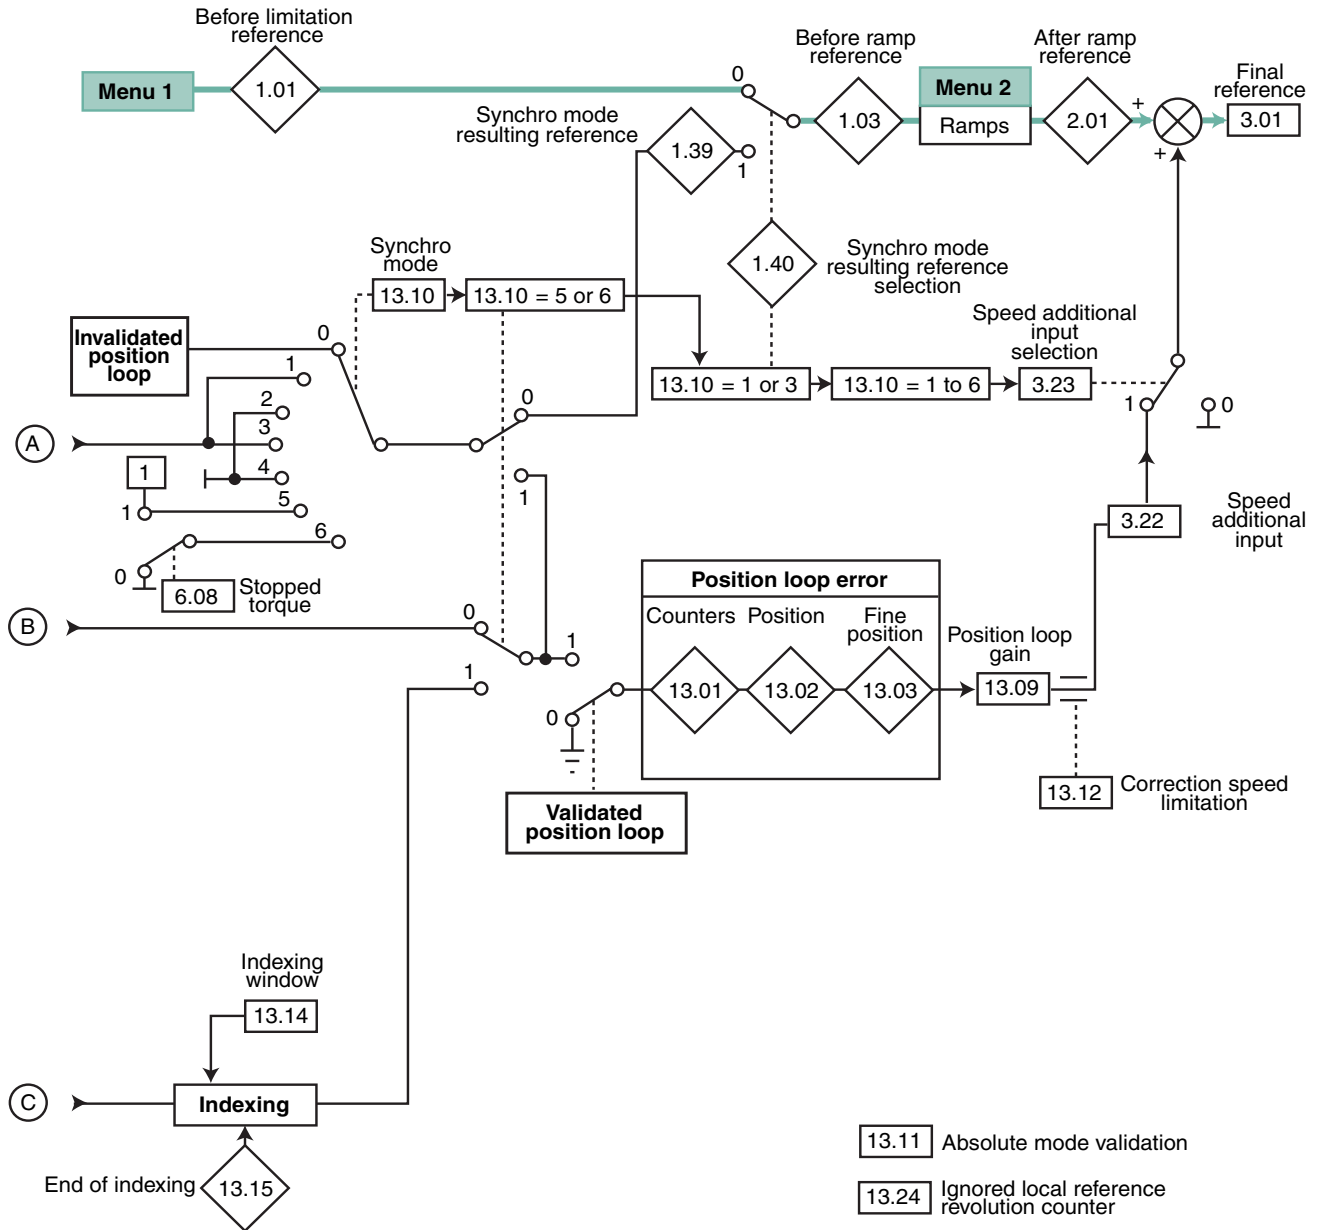

Parameters	Variation range		Factory settings	
13.01 - 13.02 - 13.03	- 32768 to + 32767		-	
13.09	0 to 100.00 rads ⁻¹ /rad		25.00 rads ⁻¹ /rad	
13.10	0 to 6		0	
13.11 - 13.18 - 13.19 - 13.23 - 13.24	OFF (0) or On (1)		OFF (0)	
13.12	0 to 250		150	
13.14	0 to 4096		256	
13.15	OFF (0) or On (1)		-	
13.24	OFF (0) or On (1)		OFF (0)	

UNIDRIVE SP Commissioning

H6.19 - Menu 14 : PID

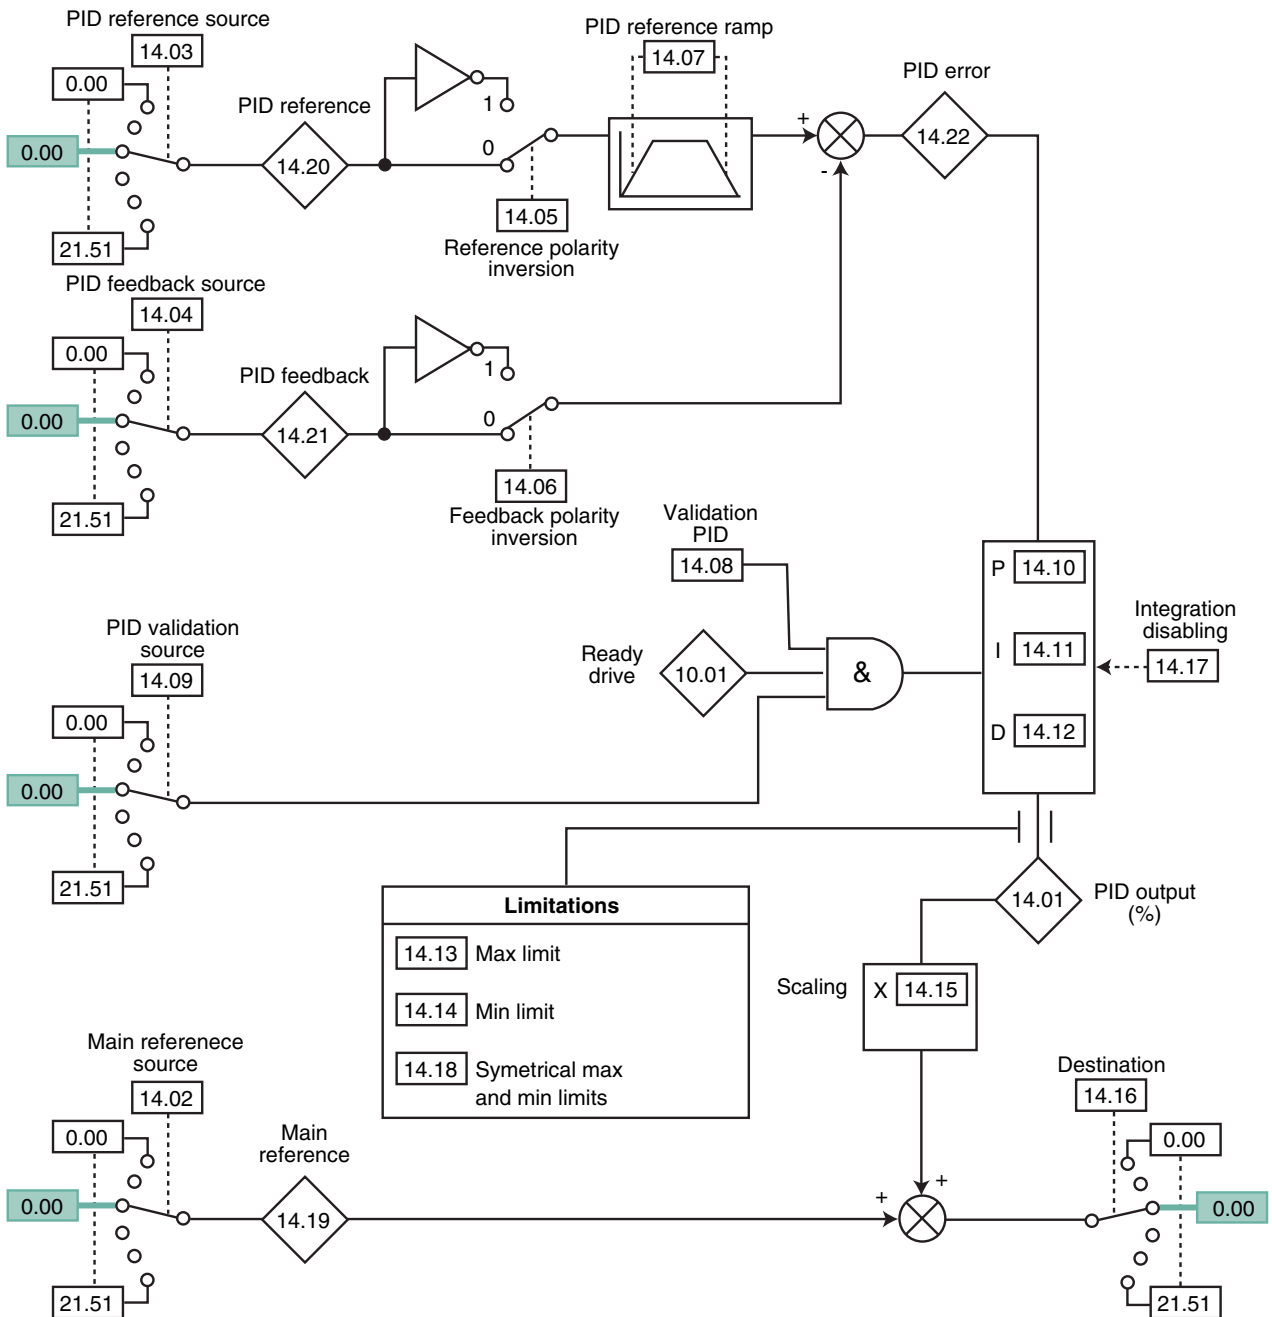

Note : The PID function is not activated if the destination **14.16** remains assigned to **0.00**.

Parameters	Variation range			Factory settings		
14.01 - 14.19 - 14.20 - 14.21 14.22	± 100.00 %			-		
14.07	0 to 3200.0 s			0		
14.08 - 14.17 - 14.18	OFF (0) or On (1)			OFF (0)		
14.10 - 14.15	0 to 4.000			1.000		
14.11	0 to 4.000			0.500		
14.12	0 to 4.000			0		
14.13	0 to 100.00 %			100.00 %		
14.14	± 100.00 %			100.00 %		

UNIDRIVE SP Commissioning

H6.20 - Menus 15, 16, 17 : MODULES SM

H6.20.1 - Introduction


In certain applications, an additional SM module can be necessary (by instance, the SM-Universal-Encoder which is used to manage an isolated encoder).

However, the number of modules must be limited to 3.

Each location corresponds to a menu :

- **location 1 : menu 15,**
- **location 2 : menu 16,**
- **location 3 : menu 17.**

The menus will be represented by 1x on the diagrams.

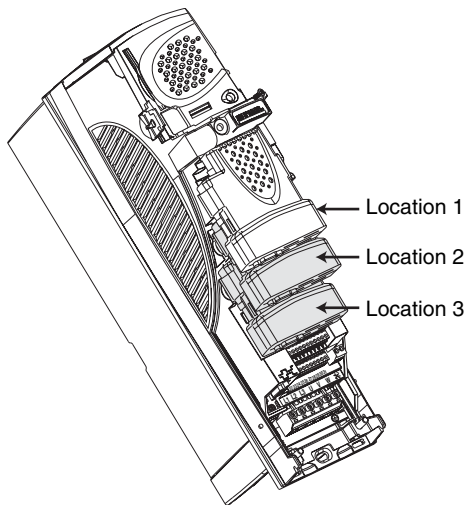

UNIDRIVE SP Commissioning


H6.20.2 - SM-I/O PLUS Module

1x.01 : Type of module

1x.20 : Digital input and output status word

1x.50 : Fault reading

• Digital inputs / outputs

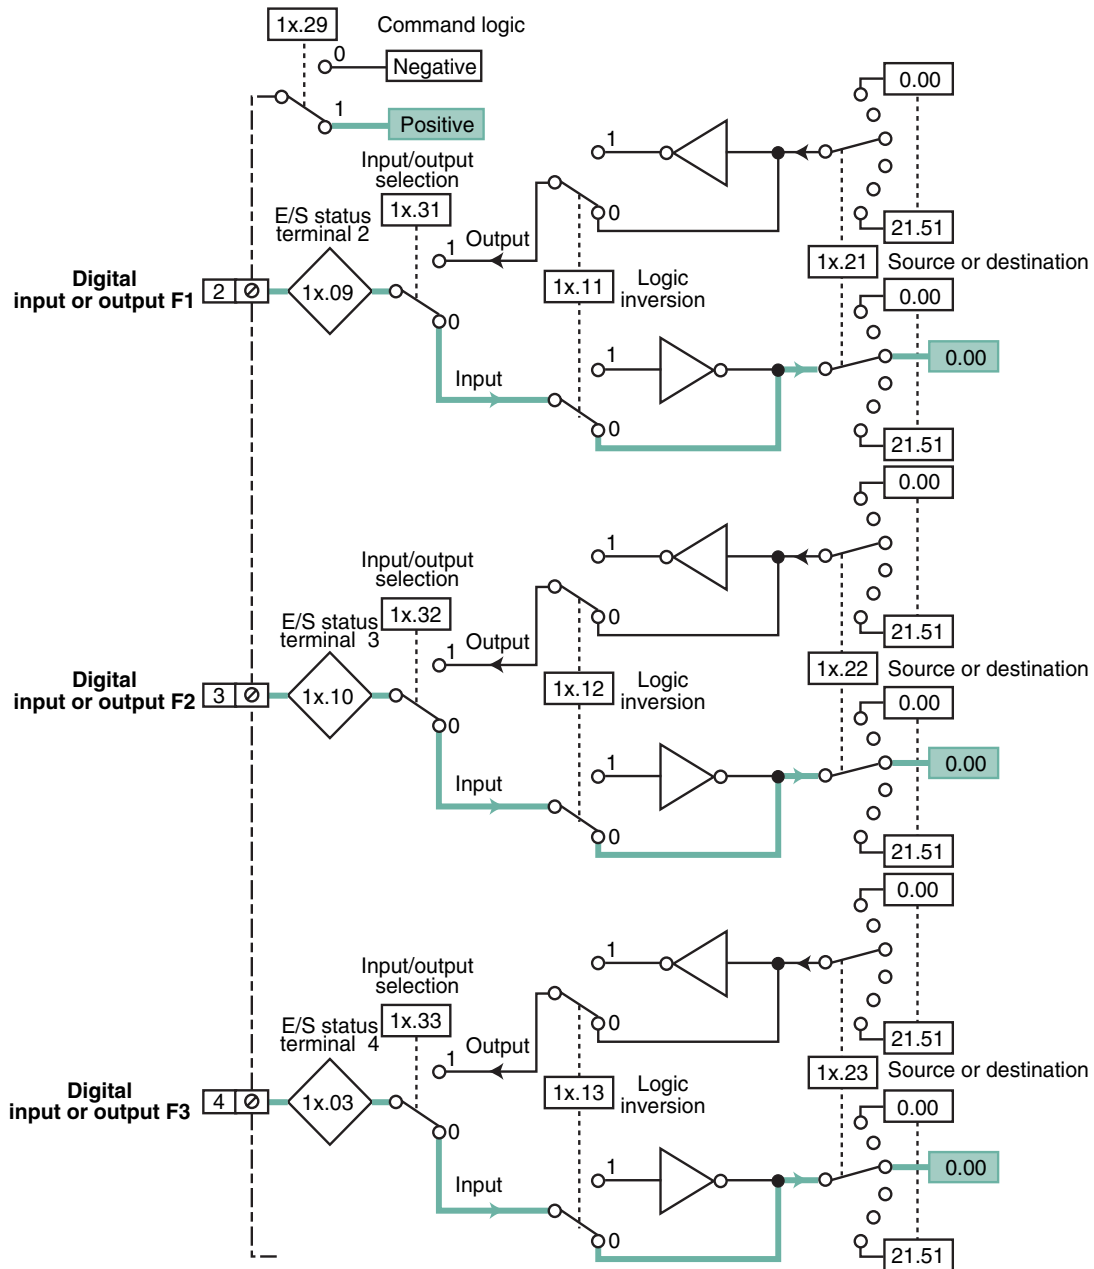


Parameters	Variation range			Factory settings		
1x.01		0 to 499			-	
1x.02		0 to 99.99			-	
1x.03 - 1x.09 - 1x.10		OFF (0) or On (1)			-	
1x.20		0 to 511			-	
1x.50		0 to 255			-	
1x.51		0 to 99			-	


UNIDRIVE SP Commissioning

Module SM-I/O PLUS (continued)

• Digital inputs

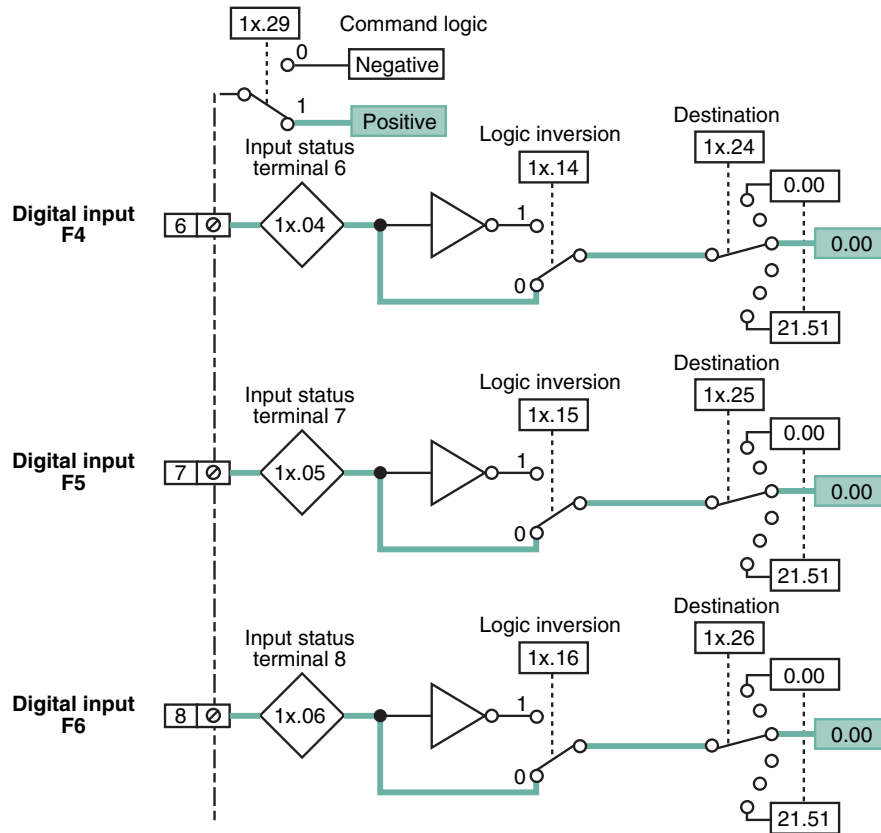

• Relay outputs

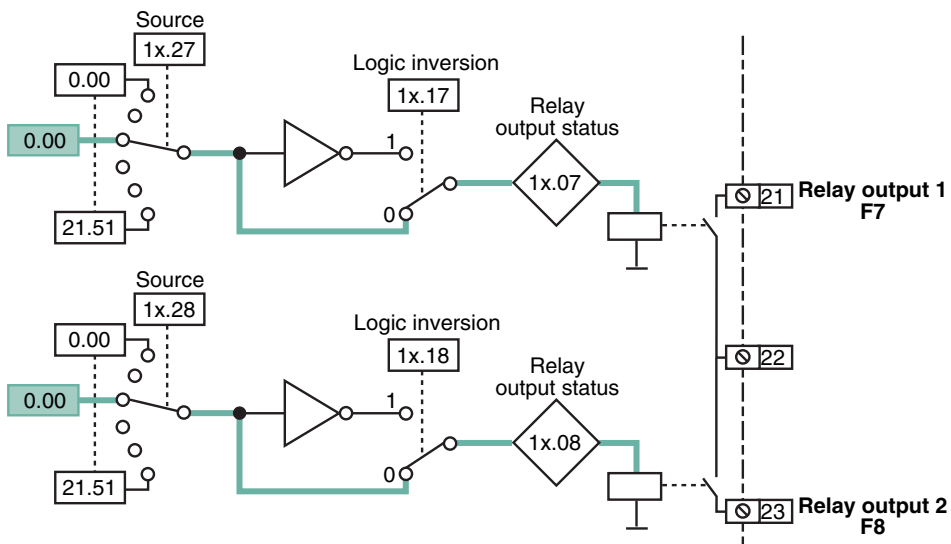


Parameters	Variation range			Factory settings		
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1x.04 - 1x.05 - 1x.06 - 1x.07 1x.08	OFF (0) or On (1)			-		


UNIDRIVE SP Commissioning

SM-I/O PLUS Module (continued)

• Digital inputs

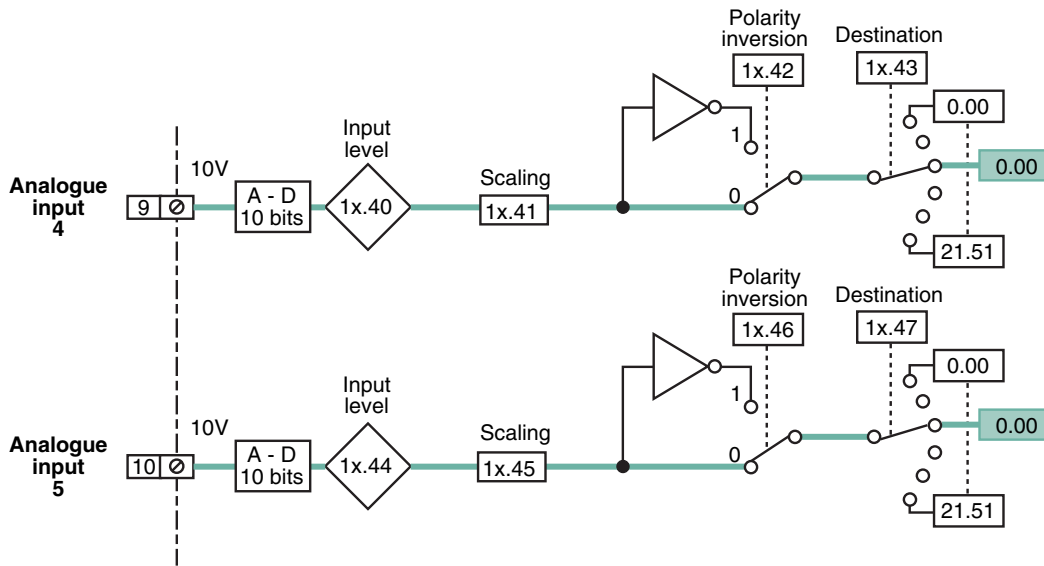

• Analogue outputs

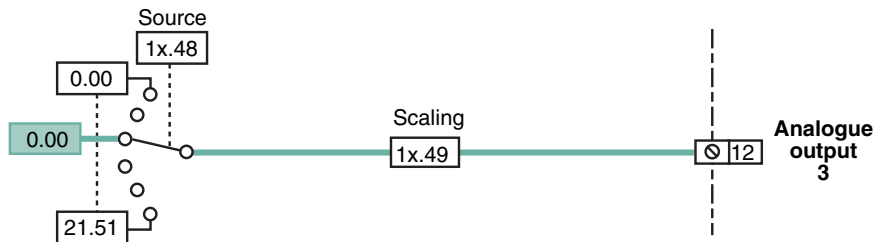

Parameters	Variation range			Factory settings		
1x.40 - 1x.44	± 100.0 %			-		
1x.41 - 1x.45 - 1x.49	0 to 4.000			1.000		


UNIDRIVE SP Commissioning

Notes



UNIDRIVE SP Commissioning


H6.20.3 - SM-UNIVERSAL ENCODER PLUS Module

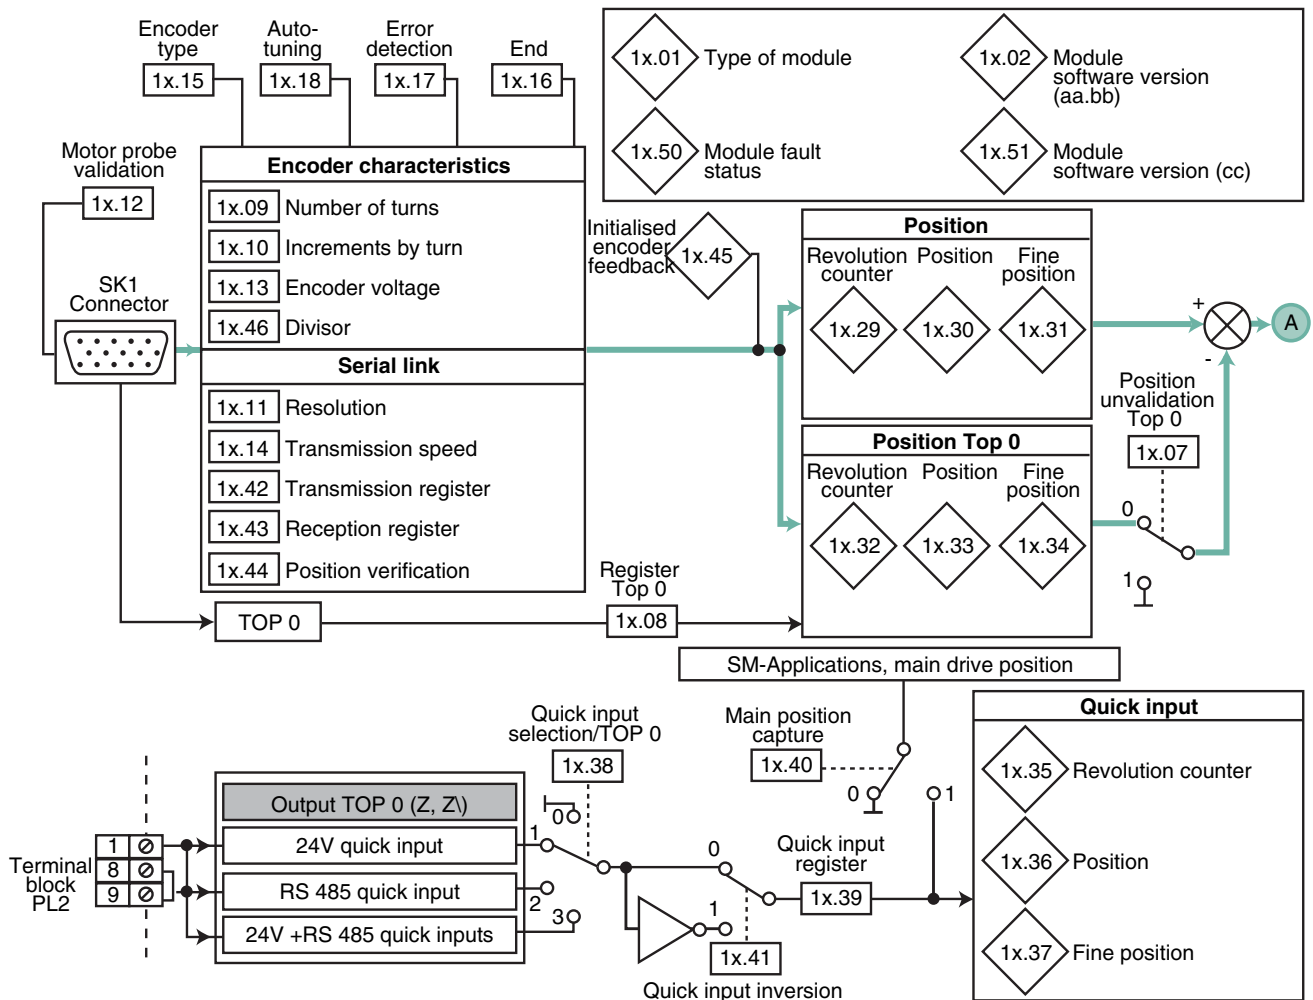

Parameters	Variation range			Factory settings		
1X.01	0 to 499			-		
1x.02	0 to 99.99			-		
1x.08 - 1x.12 - 1x.18 - 1x.39 -	OFF (0) or On (1)			OFF (0)		
1x.09	0 to 255 bits			16 bits		
1x.10	0 to 50000			4096		
1x.11	0 to 32 bits			0		
1x.13	5V (0), 8V (1), 15V (2)			5V (0)		
1X.14	100 (0), 200 (1), 300 (2), 400(3), 500 (4), 1000 (5), 1500 (6), 2000 (7)			300 (2)		
1x.15	Ab (0), Fd (1), Fr (2), Ab.SERVO (3), Fd.SERVO (4), Fr.SERVO (5), SC (6), SC.HiPER (7), EndAt (8), SC.EndAt (9), SSI (10), SC.SSI (11), SC.UVW (12)			Ab (0)		
1x.16	0 to 2			1		
1x.17	0 to 7			1		
1x.29 - 1x.32 - 1x.35	0 to 65535 turns			-		
1x.30 - 1x.33 - 1x.36	0 to 65535 (1/2 ¹⁶ th of turn)			-		
1x.31 - 1x.34 - 1x.37	0 à 65535 (1/2 ³² th of turn)			-		
1x.42 - 1x.43	0 to 65535 turns			0		
1x.45	OFF (0) or On (1)			-		
1x.46	0 to 1024			1		
1x.50	0 to 255			-		
1x.51	0 to 99			-		

UNIDRIVE SP Commissioning


SM-UNIVERSAL ENCODER PLUS Module (continued)

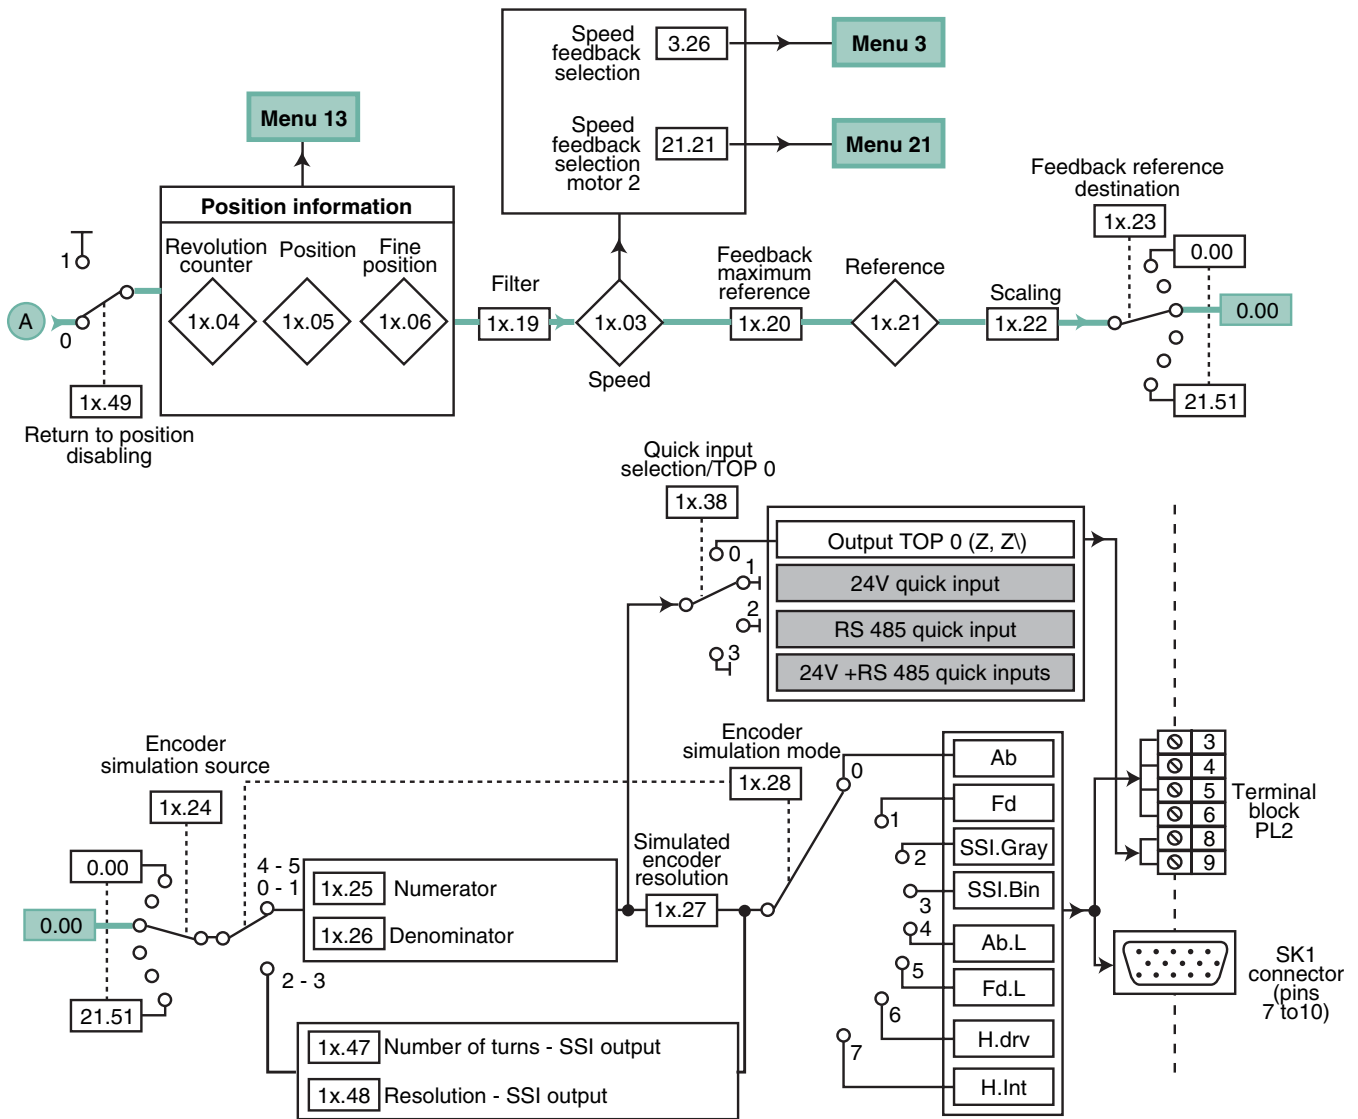

Parameters	Variation range			Factory settings		
1x.03	± 40000.0 min ⁻¹			-		
1x.04	0 to 65535 turns			-		
1x.05	0 to 65535 (1/2 ¹⁶ th of turn)			-		
1x.06	0 to 65535 (1/2 ³² th of turn)			-		
1x.19	0 (0), 1 (1), 2 (2), 4 (3), 8 (4), 16 (5) ms			0		
1x.20	0 to 40000.0 min ⁻¹			1500.0 min ⁻¹		
1x.21	± 100.0 %			-		
1x.22	0 to 4.000			1.000		
1x.25	0 to 3.0000			0.25		
1x.26	0 to 3.0000			1.0000		
1x.27	OFF (0) or On (1)			OFF (0)		
1x.47	0 to 16 bits			16 bits		
1x.48	0 to 32 bits			0		

UNIDRIVE SP Commissioning


H6.20.4 - SM-ENCODER PLUS Module

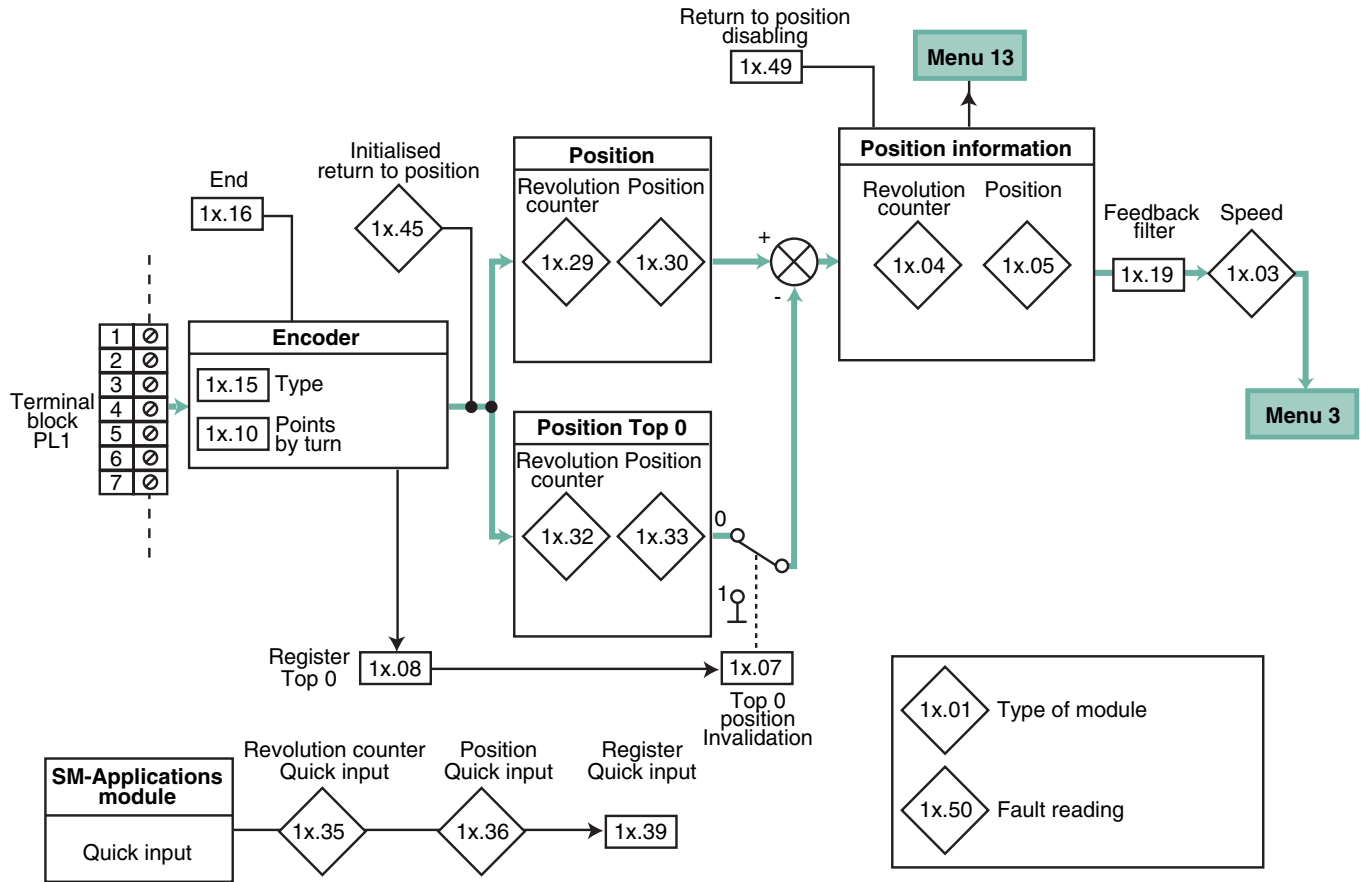

Parameters	Variation			Factory settings		
1x.01	0 to 499			-		
1x.03	$\pm 40000.0 \text{ min}^{-1}$			-		
1x.04 - 1x.29 - 1x.32 - 1x.35	0 to 65535 turns			-		
1x.05 - 1x.30 - 1x.33 - 1x.36	0 to 65535 (1/2 ¹⁶ th of turn)			-		
1x.08 - 1x.39 - 1x.49	OFF (0) or On (1)			OFF (0)		
1x.10	0 to 50000			4096		
1x.15	Ab (0), Fd (1), Fr (2)			Ab (0)		
1x.16	0 to 2			1		
1x.19	-	0 to 5 (0 to 16ms)		-	0	
1x.45	OFF (0) or On (1)			-		
1x.50	0 to 255			-		

UNIDRIVE SP Commissioning

H6.20.5 - SM-RESOLVER Module

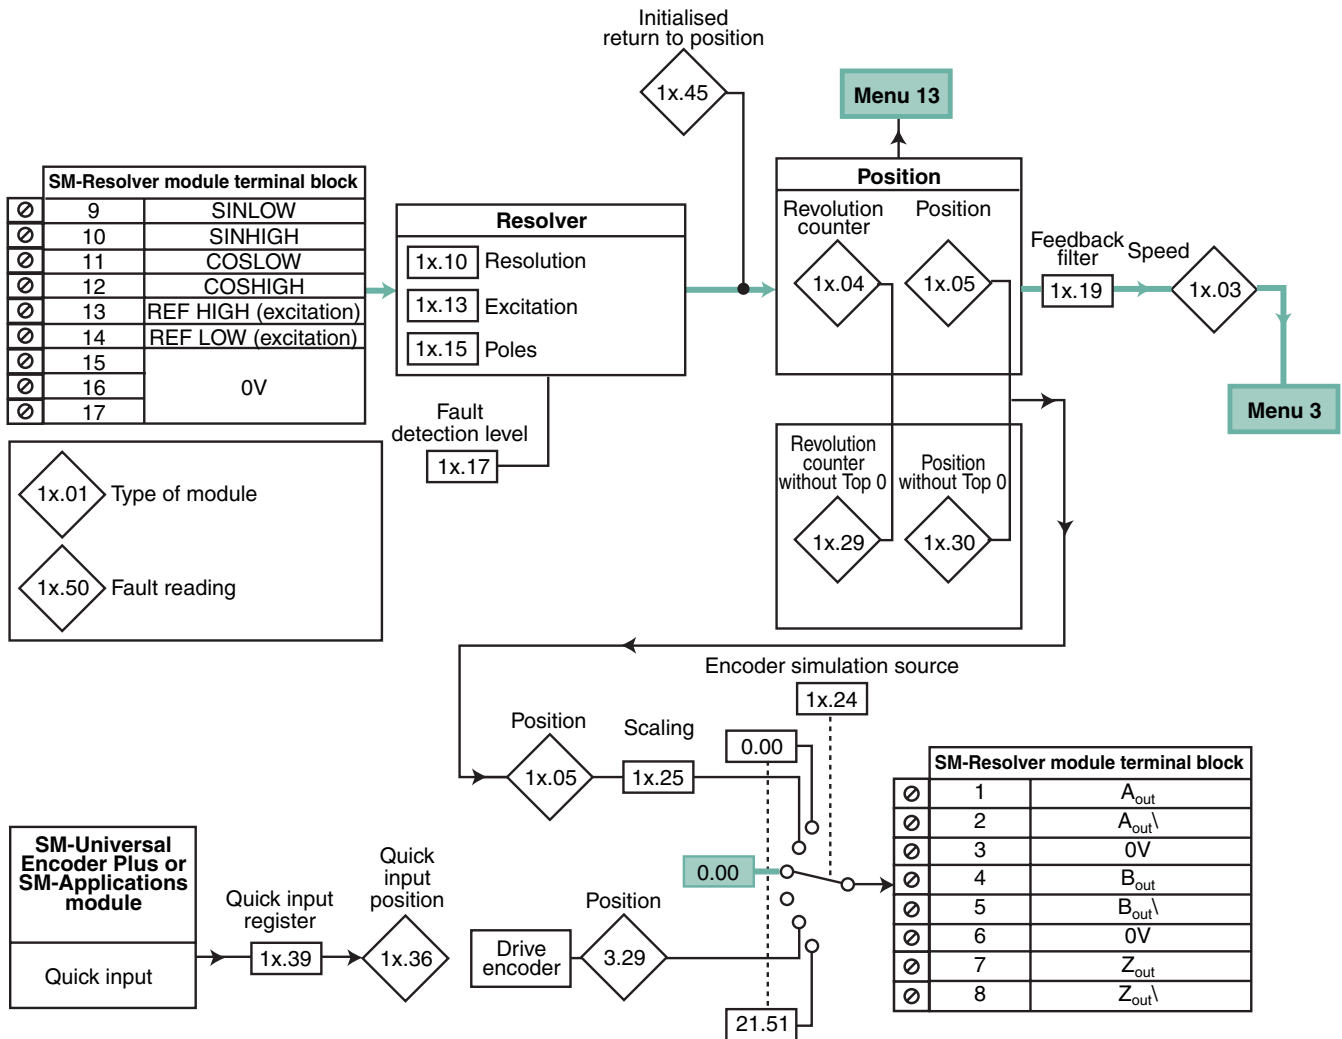

Parameters	Variation range			Factory settings		
1x.01	0 to 499			-		
1x.03	$\pm 40000.0 \text{ min}^{-1}$			-		
1x.04 - 1x.29	0 to 65535 tours			-		
1x.05 - 1x.30 - 1x.36	0 to 65535 ($1/2^{16}$ turn)			-		
1x.10	0 to 50000			4096		
1x.13	3:1 (0), 2:1 (1 or 2)			3:1 (0)		
1x.15	2 POLE (0), 4 POLE (1), 6 POLE (2), 8 POLE (3 to 11)			2 POLE (0)		
1x.17	0 to 7			1		
1x.19	-	0 to 5 (0 to 16ms)		-	0	
1x.25	0 to 3.0000			0.2500		
1x.39	OFF (0) or On (1)			OFF (0)		
1x.45	OFF (0) or On (1)			-		
1x.50	0 to 255			-		

UNIDRIVE SP Commissioning

H6.20.6 - SM-field bus module

Parameters	Description	Variation range			Factory settings		
1x.01	Module type	0 to 499			-		
1x.02	Module software version	0 to 99.99			-		
1x.03	Station address	65535			65535		
1x.04	Transmission speed	-128 to +127			+127		
1x.05	Mode	65535			4		
1x.06	Diagnosis	±9999			-		
1x.07	Stop time delay	0 to 3000			200		
1x.08	"Little endianism" selection	OFF (0) or On (1)			OFF (0)		
1x.09	Register control	OFF (0) or On (1)			OFF (0)		
1x.10 to 1x.19	Input words IN 0 to 9	-32768 to +32767			-		
1x.20 to 1x.29	Output words OUT 0 to 9	-32768 to +32767			-		
1x.30	Return to factory settings of SM module	OFF (0) or On (1)			OFF (0)		
1x.31	Storing of module parameters	OFF (0) or On (1)			OFF (0)		
1x.32	Reset of SM module	OFF (0) or On (1)			OFF (0)		
1x.33	Transfer of module memory	OFF (0) or On (1)			OFF (0)		
1x.34	Compression	OFF (0) or On (1)			OFF (0)		
1x.35	Serial number	-2147 483648 to 2147 483647			-		
1x.36 and 1x.37	Specific to the bus	OFF (0) or On (1)			OFF (0)		
1x.38	Selection of mode specific to the bus	0 to 255			0		
1x.39	Number of IN cyclic words	0 to 255			0		
1x.40	Number of OUT cyclic words	0 to 255			0		
1x.41 and 1x.48	Specific to the bus	0 to 255			0		
1x.49	Data assignment error	0 to 255			0		

UNIDRIVE SP Commissioning

H6.20.7 - SM Applications - Module

Parameters	Description	Variation range			Factory settings		
1x.01	Module type	0 to 499			-		
1x.02	Module software version (xx.yy)	0 to 99.99			-		
1x.03	Sypt program status	None(0), Stop(1),Run(2), Trip(3)			-		
1x.04	System resource available	0 to 100			-		
1x.05	RS485 address	0 to 255			11		
1x.06	RS485 Mode	0 to 255			1		
1x.07	RS485 transmission speed	300(0), 600(1), 1200(2),2400(3), 4800(4), 9600(5), 19200(6), 38400(7), 57600(8), 115200(9) bauds			300(0) bauds		
1x.08	RS485 cycle time	0 to 255 ms			2 ms		
1x.09	RS485 Tx validation time	0 to 1 ms			0		
1x.10	Transmission path for DPL PrintSYPT:	OFF(0) or RS485: On(1)			SYPT: OFF(0)		
1x.11	Time of scrutinising the clock-related charge	0 to 200 ms			0		
1x.12	Time of scrutinising the Pos charge	DISAbLEd(0); 0.25 ms(1); 0.5 ms(2); 1 ms (3); 2 ms(4); 4 ms(5); 8 ms(6)			DISAbLEd(0)		
1x.13	Operation validation	OFF(0) or On(1)			On(1)		
1x.14	Module fault validation	OFF(0) or On(1)			OFF(0)		
1x.15	No Reset module on the drive fault deletion	OFF(0) or On(1)			OFF(0)		
1x.16	Update of the encoder data	0 to 3			0		
1x.17	Limit exceeding fault validation	OFF(0) or On(1)			OFF(0)		
1x.18	Wizard validation	OFF(0) or On(1)			OFF(0)		
1x.19	Immediate saving of parameters	OFF(0) or On(1)			OFF(0)		
1x.20	Save upon powering down	OFF(0) or On(1)			OFF(0)		
1x.21	Saving validation and restitution of menu 20	OFF(0) or On(1)			OFF(0)		
1x.22	Address of CTNet token ring	0 to 255			0		
1x.23	CTNet address	0 to 255			0		
1x.24	CTNet mains supply speed	5.000(0); 2.500(1); 1.250(2); 0.625(3)			2.500(1)		
1x.25	Configuration of CTNet Sync exchanges	0 to 9999			0		
1x.26	Destination of the 1 st cyclic word CTNet easy mode	0 to 25503			0		
1x.27	Source of the 1 st cyclic word CTNet easy mode	0 to 9999			0		
1x.28	Destination of the 2 nd cyclic word CTNet easy mode	0 to 25503			0		
1x.29	Source of the 2 nd cyclic word CTNet easy mode	0 to 9999			0		
1x.30	Destination of the 3 rd cyclic word CTNet easy mode	0 to 25503			0		

UNIDRIVE SP Commissioning

SM Module - Applications (continued)

Parameters	Description	Variation range			Factory settings		
1x.31	Source of the 3 rd cyclic word CTNet easy mode	0 to 9999			0		
1x.32	Destination transfer slot 1	0 to 9999			0		
1x.33	Destination transfer slot 2	0 to 9999			0		
1x.34	Destination transfer slot 3	0 to 9999			0		
1x.35	Synchronisation of Event charges	Disable(0), Event(1), Event1(2), Event2(3), Event3(4)			Disable(0)		
1x.36	Status of CTNet bus	-3 to 0			-		
1x.37	Reject of loading authorisation	OFF(0) or On(1)			OFF(0)		
1x.38	No trip state on APC error	OFF(0) or On(1)			OFF(0)		
1x.39	Status of Sync master	0 to 3			0		
1x.40	Data transfer mode	0 to 10			1		
1x.41	Reserved						
1x.42	Saved main position	OFF(0) or On(1)			OFF(0)		
1x.43	Inversion sauvegarde de position	OFF(0) or On(1)			OFF(0)		
1x.44	Charge priority level	0 to 255			0		
1x.45	Reserved						
1x.46	Reserved						
1x.47	Reserved						
1x.48	Fault program line	0 to 2 147 483 647			-		
1x.49	User parameter	± 32767			-		
1x.50	Fault reading						
1x.51	Software version (zz)						

UNIDRIVE SP Commissioning

H6.21 - Menu 18 : application parameters

Parameters	Description	Variation range			Factory settings		
18.01	Application parameter (stored when powered down)	-32768 to + 32767			0		
18.02 to 18.10	Application parameter	-32768 to + 32767			0		
19.11 to 18.30	Application parameter	-32768 to + 32767			0		
18.31 to 18.50	Application parameter	OFF (0) or On (1)			OFF (0)		

H6.22 - Menu 19 : application parameters

Parameters	Description	Variation range			Factory settings		
19.01	Application parameter (stored when powered down)	-32768 to + 32767			0		
19.02 to 19.10	Application parameter	-32768 to + 32767			0		
19.11 to 19.30	Application parameter	-32768 to + 32767			0		
19.31 to 19.50	Application parameter	OFF (0) or On (1)			OFF (0)		

H6.23 - Menu 20 : application parameters

Parameters	Description	Variation range			Factory settings		
20.01 to 20.20	Application parameter	-32768 to + 32767			0		
20.21 to 20.40	Application parameter	-2^{31} to $(2^{31}-1)$			0		

Note: These application parameters are mainly used with SM-Applications or SM-Applications Lite modules, or for the conception of a "Syptlite" program (execution of a program internal to the variable speed drive by means of a Syptlite software, available on CD Rom delivered together with the variable speed drive).

UNIDRIVE SP Commissioning

H6.24 - Menu 21: Operating Parameters of a Second Motor

Parameters	Description	Variation range			Factory settings		
21.01	Maximum limit	0 to 3000.0 Hz	0 to LIM N MAX		EUR : 50.0 Hz USA : 60.0 Hz	EUR : 1500min ⁻¹ USA : 1800.0min ⁻¹	3000.0 min ⁻¹
21.02	FWD/REV minimum limit	± 3000.0 Hz	± LIM N MAX		0		
21.03	Reference selection	A1.A2 (0), A1.Pr (1), A2.Pr (2), Pr (3), Pad (4),Prc (5)			A1.A2 (0)		
21.04	Reference selection	0 to 3200.0s/ 100Hz	0 to 3200.000s/1000min ⁻¹		5.0s/100Hz	2.000s/1000min ⁻¹	0.200s/1000min ⁻¹
21.05	Acceleration ramp	0 to 3200.0s/ 100Hz	0 to 3200.000s/1000min ⁻¹		10.0s/100Hz	2.000s/1000min ⁻¹	0.200s/1000min ⁻¹
21.06	Rated frequency	0 to 3000.0 Hz	0 to 1250.0 Hz	-	EUR : 50.0 Hz / USA : 60.0 Hz		-
21.07	Rated current	0 to I _R MAX (A)			I _{NAME} VAR (11.32)		
21.08	Rated speed	0 to 180000min ⁻¹	0 to 40000.00min ⁻¹		EUR : 1500min ⁻¹ USA : 1800min ⁻¹	EUR : 1450.00min ⁻¹ USA : 1770.00min ⁻¹	3000.00 min ⁻¹
21.09	Rated voltage	0 to U _{AC} MOT MAX (V)			TL : 230V / T : EUR = 400V, USA = 460V / TM : 575V / TH : 690V		
21.10	Cos φ	0 to 1.000	-		0 to 0.850		-
21.11	Number of motor poles	Auto with 120 poles (0 to 60)			Auto (0)		6 POLE (3)
21.12	Stator resistor	0 to 30.000 Ω			0		
21.13	Offset voltage	0 to 25.0V	-		0	-	
21.14	Transient inductance	0 to 500.000 mH			0		
21.15	Active motor 2 parameters	OFF (0) or On (1)			-		
21.16	Thermal time constant	0 to 400.0 s			89.0 s		20.0 s
21.17	Speed loop Kp gain	-	0 to 6.5535 (1/rads ⁻¹)		-	0.0100 (1/rads ⁻¹)	
21.18	Speed loop Ki gain	-	0 to 655.35 (1/rad)		-	1.00 (1/rad)	
21.19	Speed loop Kd gain	-	0 to 0.65535 (s)		-	0	
21.20	Encoder phasing out	-	0 to 359.9 °		-	0	
21.21	Speed feedback selection	-	drv (0), SSlot 1 (1), SSlot 2 (2), SSlot 3 (3)		-	drv (0)	
21.22	Current loop Ki gain	0 to 30000			20	TL : 75, T : 150, TM : 180, TH : 215	
21.23	Current loop Ki gain	0 to 30000			40	TL : 1000, T : 2000, TM : 2400, TH : 3000	
21.24	Stator inductance	-	0 to 5000.00 mH	-	-	0	-
21.25	Inflexion point 1	-	0 to 100 % of the rated flux	-	-	50 %	-
21.26	Inflexion point 2	-	0 to 100 % of the rated flux	-	-	75 %	-
21.27	Motor active current limit	0 to LIM. IM1 MAX (%)			165.0 %	175.0 %	
21.28	Generator active current limit	0 to LIM. IM1 MAX (%)			165.0 %	175.0 %	
21.29	Symmetrical active current limit	0 to LIM. IM1 MAX (%)			165.0 %	175.0 %	
21.30	Motor voltage for 1000min ⁻¹ Ke	-	-	0 to 10000 V	-	-	98 V
21.31	No line motor	0 to 655.35 mm			0		

UNIDRIVE SP Commissioning

H6.25 - Menu 22 : Menu 0 Setting (continued)

Menu 0 Configuration

Parameters	Description	Variation range			Factory settings		
22.01	Setting of 0.31 of menu 0	1.00 to 21.51			11.33		
22.02	Setting of 0.32 of menu 0	1.00 to 21.51			11.32		
22.03	Setting of 0.33 of menu 0	1.00 to 21.51			6.09	5.16	0.00
22.04	Setting of 0.34 of menu 0	1.00 to 21.51			11.30		
22.05	Setting of 0.35 of menu 0	1.00 to 21.51			11.24		
22.06	Setting of 0.36 of menu 0	1.00 to 21.51			11.25		
22.07	Setting of 0.37 of menu 0	1.00 to 21.51			11.23		
22.08 and 22.09	Not used	-			-		
22.10	Setting of 0.40 of menu 0	1.00 to 21.51			5.12		
22.11	Setting of 0.41 of menu 0	1.00 to 21.51			5.18		
22.12 to 22.17	Not used	-			-		
22.18	Setting of 0.48 of menu 0	1.00 to 21.51			11.31		
22.19	Not used	-			-		
22.20	Setting of 0.50 of menu 0	1.00 to 21.51			11.29		
22.21	Setting of 0.51 of menu 0	1.00 to 21.51			0.00		
22.22	Setting of 0.52 of menu 0	1.00 to 21.51			0.00		
22.23	Setting of 0.53 of menu 0	1.00 to 21.51			0.00		
22.24	Setting of 0.54 of menu 0	1.00 to 21.51			0.00		
22.25	Setting of 0.55 of menu 0	1.00 to 21.51			0.00		
22.26	Setting of 0.56 of menu 0	1.00 to 21.51			0.00		
22.27	Setting of 0.57 of menu 0	1.00 to 21.51			0.00		
22.28	Setting of 0.58 of menu 0	1.00 to 21.51			0.00		
22.29	Setting of 0.59 of menu 0	1.00 to 21.51			0.00		

Nota : For setting **0.11** to **0.30**, refer to menu 11.

UNIDRIVE SP Commissioning

Notes



UNIDRIVE SP Communication

Contents

I1 - Serial link	3
I1.1 - Localisation and connection	3
I1.2 - Isolation	3
I1.3 - Protocoles.....	3
I1.4 - Setting.....	3
I1.5 - Connection to mains supply.....	3
I2 - Setting by PC	3
I3 - Control word and status word	4
I4 - MODBUS RTU, 0.35 = rtU (1)	4
I4.1 - General information	4
I4.2 - Exchange description	4
I4.3 - Global addressing.....	5
I4.4 - Parameter assignment.....	5
I4.5 - Data encoding.....	5
I4.6 - "Function" codes.....	5
I4.6.1 - Function code 3 : reading.....	5
I4.6.2 - Function code 16 : writing	6
I4.6.3 - Function code 23 : reading/writing	6
I4.6.4 - Example	6
I4.7 - Waiting period.....	7
I4.8 - Types of large data	7
I4.8.1 - 32-bit registers	7
I4.8.2 - Reading of a parameter type which is different from the selected one	7
I4.8.3 - Writing of a parameter type which is different from the selected one	8
I4.9 - Exceptions	8
I4.10 - CRC	8

UNIDRIVE SP Communication

Notes




UNIDRIVE SP Communication

I1 - Serial link

In standard version UNIDRIVE SP integrates a serial link port RS485 / 2 wires accessible by a RJ45 connector.

I1.1 - Localisation and connection

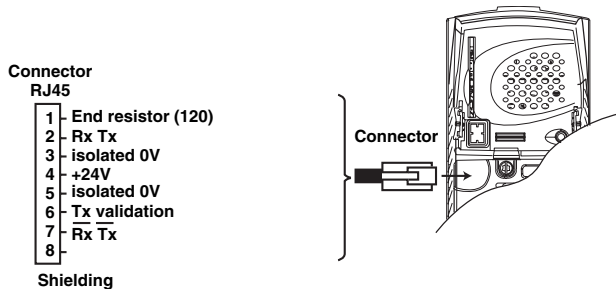

To validate the end resistor, connect pin 8 to pin 1.

I1.2 - Isolation

The drive serial link port has a double isolation. It complies with the SELV safety requirements of the EN50178 standard. The drive serial link is isolated from the power stage and from the control terminals.

! In order to comply with the SELV safety requirements of the CEI60950 standard regarding the IT conditions, the element connected to the serial link must be connected to earth. In case of a portable PC or of another similar equipment for which the earthing is not possible, an additional isolation must be inserted into the cable.

The CT Comms cable option is used to directly connect a PC to UNIDRIVE SP. This cable, with a SUB-D 9 connector at one end and RJ45 at the other end, integrates an isolated RS232/RS485 converter.

I1.3 - Protocols

The drive manages the protocols (selected by parameter-setting) :

- Modbus RTU (factory settings),
- CT ANSI.

I1.4 - Parameter-setting

Depending on the application, the following parameters must be changed.

0.35 : Type of communication

0.36 : Serial link transmission speed

0.37 : Serial link address

For details regarding these parameters, see section H2.1.

I1.5 - Connection to mains supply

The UNIDRIVE SP serial port allows the drive to communicate to the RS 485 2 wire mains supply.

- The mains supply must be then a " chain " connection (and not a star connection).
- The terminals 2, 3, 7 and the shielding must be connected at minimum.
- The terminals 4 of all mains supply drives may be connected altogether, but the maximum power available will be the same as for a single drive (the terminals 4 may be thus separately supplied with power).
- For a drive located at the chain end in a mains supply, validate the end resistor by connecting the terminals 1 and 8.
- CT Comms cable may be used on the mains supply, but only occasionally, for diagnosis or setting, and with UNIDRIVE SP drives only.

In this case, the terminals 6 of each drive must be connected, and terminal 4 must be connected to a single drive (1 single CT Comms cable may be used on the mains supply).

I2 - Setting by PC

The LS SOFT parameter-setting allows a user-friendly commissioning of UNIDRIVE SP from a PC.

- Interactive setting: the setting of the drive is made automatically starting with answers to a questionnaire concerning the installation.
- Supervision during the commissioning: LS SOFT is used to supervise on a single and same screen different information regarding the operation.
- File storing: LS SOFT is used to save the parameter files allowing thus to duplicate very quickly an already existing setting.

To connect the PC to UNIDRIVE SP, use the CT Comms cable option described above or use a RS232/RS485 2 wire converter (example : Amplicon 485 FI).

For the PC fitted with USB ports, contact your usual LEROY-SOMER correspondent.

During the use of a converter with Unidrive SP, it is recommended not to connect the end resistor to the mains supply. It may be necessary to disconnect the end resistor depending on the type used.

UNIDRIVE SP Communication

I3 - Control word and status word

The UNIDRIVE SP control commands may be managed by a single parameter **6.42**, named " control word ".

In fact, the value of **6.42** corresponds to a word within which each bit is associated with a command. The command is validated when the bit is set to 1, and it is invalidated when the bit is set to 0.

To validate the commands by control word, set **6.43** = 1 (the control commands by terminal block are no longer active).

The parameter **10.40** named status word is used to regroup the information on the variable speed drive. The value of **10.40** corresponds to a 15-bit word, and each bit is associated with a drive status parameter.

6.42 : Control word

Bits of control word 6.42	Corresponding parameters	Functions
0	6.15	Drive enabling
1	6.30	Fwd run
2	6.31	Run by pulses
3	6.32	REV run
4	6.33	Fwd/rev
5	6.34	Run
6	6.39	Stop\
7	-	Automatic/Manual
8	1.42	Analogue reference - preset reference
9	6.37	Rev run by pulses
10	-	reserved
11	-	reserved
12	-	Drive trip state
13	10.33	Drive trip state reset / Reset
14	-	Keyboard wizard

10.40 : Status word

Bits of status word 10.40	Corresponding parameters	Drive status
0	10.01	Drive ready
1	10.02	Activated drive output
2	10.03	Zero speed or frequency
3	10.04	Minimum speed or frequency
4	10.05	Frequency or speed lower than the low threshold
5	10.06	Reached reference
6	10.07	Frequency or speed higher than the high threshold
7	10.08	Rated load
8	10.09	Active current limitation
9	10.10	Dynamic braking
10	10.11	Braking on resistor
11	10.12	Overload alarm, braking resistor
12	10.13	Required reverse rotation
13	10.14	Reverse rotation
14	10.15	Mains supply absence

I4 - MODBUS RTU, **0.35** = rtU (1)

I4.1 - General information

The MODBUS RTU protocol is a master - slave type protocol. (a single master by mains supply).

Description	Characteristics
Normal physical layer for multi-points operation	RS485 2 wires
Chain of bits	Standard UART asynchronous symbols with No Return to Zero (NRZ)
Symbol	Each symbol is made of: 1 bit start 8 bits of data (last significant bit sent first) 2 bits stop
Transmission speed	300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bauds

I4.2 - Description of exchanges

The exchanges are made on the initiative of the master, which imposes its demands: if the related slave comprised it, it sends its answer. Each frame (question or response) contains four types of information :

- the address of the related slave receiving the question frame (master demands) or the address of the slave sending the response frame (encoded on a byte),
- the function code that selects a command (reading or writing of words, of bits...) for the question and response frames (encoded on a byte),
- the information field containing the command-related parameters (encoded on "n" bytes),
- the CRC of the frame, calculated on sixteen bits which is used to detect the transmission errors.


The frame is terminated by a minimum silence period, equivalent to the transmission time for 3.5 characters (by instance, at 19200 bauds, the silence period must be at least of 1/19200 x 11 bits x 3.5, that is 2 ms). This silence period indicates the message end, and the slave may begin to process the information sent.

All the information is encoded in hexadecimal.

Slave address	Function code	Message data	CRC 16 bits	Silence interval
---------------	---------------	--------------	-------------	------------------

UNIDRIVE SP Communication

All the master demands, excepting the general diffusion demands, will generate the response of a single slave. The slave will respond within the maximum time assigned for it (the minimum response time will be never shorter than the silence period). After a general demand, the master may send a new demand after a period equivalent to the maximum response time of the slave.

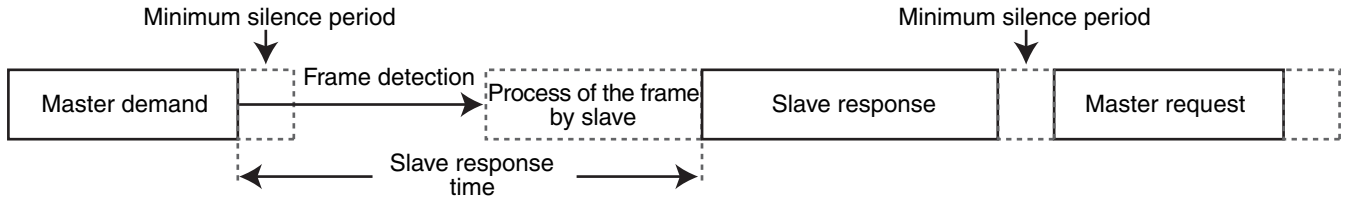

14.3 - Global addressing

When the master sends a message with the zero address, this message is sent to all the slaves of the mains supply. The slave knots do not send response messages for general demands.

14.4 - Parameter assignment

The UNIDRIVE SP drives are parameter-set by using a **menu.parameter** notation. The indices "menu" and "parameter" may have the values 0 - 99. Le menu.parameter is assigned to a MODBUS RTU register **menu x 100 + parameter**.

To correctly assign the parameters, the slave increments by (+1) the address of the register received.

Example : X = menu ; Y = parameter

Drive parameter	Register address (protocol level)
X.Y	$(X \times 100) + (Y - 1)$
Examples :	
1.02	101
1.00	99
0.01	0
70.00	6999

14.5 - Data encoding

MODBUS RTU uses a "big-endian" representation for data information and addresses (save for CRC which is "little-endian"). That is, when a digital quality, "larger" than a byte is sent, the most significant byte is sent first. By instance:

16 – bits 0x1234 must be: 1st 2nd ...
 32 – bits 0x12345678L must be: 0x12 0x34 0x56 0x78

14.6 - "Function" codes

The function code determines the data context and format of the message. Bit 7 of the function code is used in the slave response to indicate an exception.


Code function	Description
3	Multiple reading of 16-bit registers
16	Multiple writing of 16-bit registers
23	Multiple reading and writing of 16-bit registers
64	CMP "capsulated" protocol Non standard function code

14.6.1 - Function code 3 : reading

Reading of a register adjacent area. The slave imposes a high limit on the number of registers that may be read. If the limit is exceeded, the slave will produce a code 2 exception.


Frame sent by the master:

Bytes	Description
0	Slave address (1 to 247)
1	Function code 0x03
2	High weight of the first word address
3	Low weight of the first word address
4	High weight of the number of word to read
5	Low weight of the number of word to read
6	Low weight of CRC
7	High weight of CRC

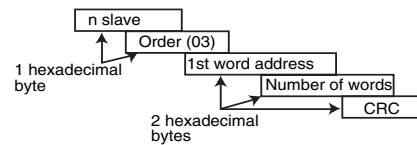

Frame sent by the slave:

Bytes	Description
0	Slave address
1	Function code 0x03
2	Number of bytes to read
3	High weight of word 0
4	Low weight of word 0
5	High weight of word 1
6	Low weight of word 1
...	...
n	Low weight of CRC
n + 1	High weight of CRC

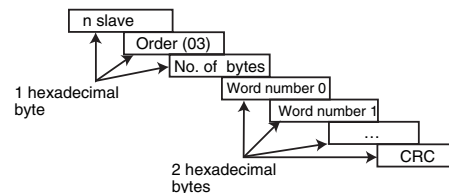


UNIDRIVE SP Communication

I4.6.2 - Function code 16 : writing

Writing a register adjacent area. The slave imposes a high limit on the number of registers that may be written. If the limit is exceeded, the slave will abandon the demand and the master will not respond ("timeout").


Frame sent by the master:

Bytes	Description
0	Slave address (1 to 247)
1	Function code 0x10
2	High weight of the first word address
3	Low weight of the first word address
4	High weight of the number of word to write
5	Low weight of the number of word to write
6	Number of bytes to write
7	High weight of word 0 to write
8	Low weight of word 0 to write
9	High weight of word 1 to write
10	Low weight of word 1 to write
...	...
n	Low weight of CRC
n + 1	High weight of CRC

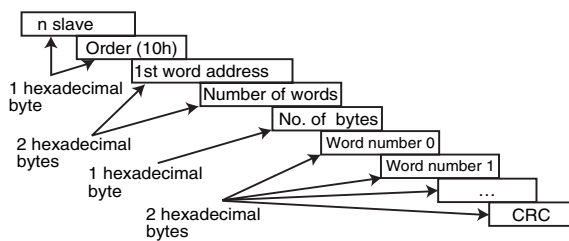

Frame sent by the slave:

Bytes	Description
0	Slave address (1 to 247)
1	Function code 0x03
2	High weight of the first word address
3	Low weight of the first word address
4	High weight of the number of written bytes
5	Low weight of the number of written bytes
6	Low weight of CRC
7	High weight of CRC

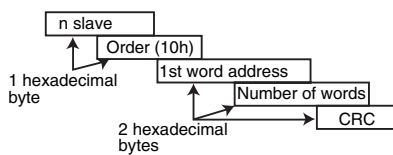

I4.6.3 - Function code 23 : reading/writing

Writing and reading of two adjacent register areas. The slave imposes a high limit on the number of registers that may be written. If the limit is exceeded, the slave will abandon the demand and the master will not respond ("timeout").

Frame sent by the master:

Bytes	Description
0	Slave address (1 to 247)
1	Function code 0x17
2	High weight of the first word address to read
3	Low weight of the first word address to read
4	High weight of the number of word to read
5	Low weight of the number of word to read
6	High weight of the first word address to write
7	Low weight of the first word address to write
8	Low weight of the first word address to write
9	Low weight of the number of words to write
10	Number of bytes to write
11	High weight of word 0
12	Low weight of word 0
13	High weight of word 1
14	Low weight of word 1
...	...
n	Low weight of CRC
n + 1	High weight of CRC

Frame sent by the slave:

Bytes	Description
0	Slave address (1 to 247)
1	Function code 0x17
2	Number of bytes to read
3	High weight of word 0
4	Low weight of word 0
5	High weight of word 1
6	Low weight of word 1
...	...
n	Low weight of CRC
n + 1	High weight of CRC

I4.6.4 - Example

Drive address = 11.

Reading of 3 parameters starting with **1.08**.

0108 becomes 0107 which is equal to 006B in hexadecimal (modbus address = parameter address - 1).

• Request

	Example (hexa)	RTU (binary)
Slave address	B	0000 1011
Function	03	0000 0011
1st word address (strong)	00	0000 0000
1st word address (weak)	6B	0110 1011
Number of words (strong)	00	0000 0000
Number of words (weak)	03	0000 0011
Check-up		CRC (16 bits)
Total of bytes:		8

• Response

	Example (hexa)	RTU (binary)
Slave address	B	0000 1011
Function	03	0000 0011
Number of bytes	06	0000 0110
Word 0 (strong)	02	0000 0010
Word 0 (weak)	2B	0010 1011
Word 1 (strong)	00	0000 0000
Word 1 (weak)	00	0000 0000
Word 2 (strong)	00	0000 0000
Word 2 (weak)	63	0110 0011
Check-up		CRC (16 bits)
Total of bytes :		11

UNIDRIVE SP Communication

14.7 - Waiting delay

In MODBUS RTU, when the master sends a message to a slave, it needs a waiting delay between the end of its demand and the beginning of the slave response, this allowing to detect a possible outstanding response.

 
14.8 - Types of large data

14.8.1 - 32 bit registers

The standard MODBUS RTU registers have 16 bits, and a single parameter **X.Y** is assigned to a single register MODBUS RTU. To manage 32 bits data (entire or floating), we may use multiple MODBUS RTU readings and writings to transfer a 32-bit register adjacent area.

Generally, the slaves contain 16-bit registers and 32-bit registers. In order to allow the master to select 16 or 32 bits, the 2 bits of the highest weight of the register address are used to indicate the type of data selected.

Note : The selection applies to all the units.



Bits 14 and 15 select the data type according to the table below:

Bits 15-14	Type of data selected	Comment
00	INT16	Standard type - 16 bits
01	INT32	Specific type - 32 bits
10	Float32	IEEE794 standard not managed by all equipment
11	Reserved	

If a 32-bit data type is selected, then the slave uses 2 MODBUS RTU registers of 16 consecutive bits (in "big endian"). The master must also correctly adjust the "number of 16-bit registers".

Example:

Slave address: 08

Reading from **20.01** to **20.04** 32-bit parameters, by using the function code 03.

• Master Request

Bytes	Value	Description
0	0x08	Slave address
1	0x03	Multiple reading, function code 03
2	0x40	Address of initial register 20.01
3	0xC8	(0x4000 + 201 - 1) = 16584 = 0x40C8
4	0x00	Number of 16-bit registers to read: 20.01 to 20.04 correspond to 4 32-bit registers = 8 16-bit registers
5	0x08	
6	Low weight of CRC	-
7	High weight of CRC	-

Note : the value 0x4000 corresponds to the INT32 type (bit15 = 0, bit 14 = 1).

• Slave response:

Bytes	Value	Description
0	0x08	Slave address
1	0x03	Multiple reading, function code 03
2	0x10	Data length (bytes) = 4 32-bit registers = 16 bytes
3-6		20.01
7-10		20.02
11-14		20.03
15-18		20.04
19	Low weight of CRC	-
20	High weight of CRC	-

14.8.2 - Reading of a type of parameter different from the selected one

The slave will send the last significant word of a 32-bit parameter if this parameter is read as a 16-bit parameter.

The slave will sign the last significant word of a 16-bit parameter if this parameter is read as a 32-bit parameter. The number of 16-bit registers must be even during a 32-bit reading.

Example :

If :

- **20.01** is a 32-bit parameter with a value of 0x12345678,
- **20.02** is a 16-bit parameter with a value of 0xABCD (negative value),
- **20.03** is a 16-bit parameter with a value of 0x0123 (positive value).

Reading	Register beginning address	Number of 16-bit registers	Response	Comments
20.01	200	1	0x5678	Standard 16-bit reading of a 32-bit register will return a 16-bit word ("truncated" data)
20.01	16584	2	0x12345678	Correct 32-bit reading
20.01	16584	1	Exception 2	The number of registers must be even for a 32-bit reading
20.02	201	1	0xABCD	Standard 16-bit reading of a 16-bit register will return a 16-bit word
20.02	16585	2	0xFFFFABCD	32-bit reading of a 16-bit register will return a 32-bit signed word
20.03	16586	2	0x00000123	
20.01	200	2	0x5678, 0xABCD	Standard 16-bit reading of a 32-bit register will return a 16-bit word ("truncated" data)
20.01 20.02	16584	4	0x12345678, 0xFFFFABCD	Complete 32-bit reading

UNIDRIVE SP Communication

14.8.3 - Writing of a type of parameter different from the selected one

The slave will allow the writing of a 32-bit value in a 16-bit parameter, if the 32-bit value does not exceed the normal range of a 16-bit parameter.

The slave will allow the writing of a 16-bit value in a 32-bit parameter. The slave will sign the written value, so the range of this type of writing will be ± 32767 .

Example :

If for :

- **20.01** the variation range is of + 100000,

- **20.02** the variation range is of + 10000.

Writing	Register beginning address	Number of 16-bit registers	Response	Comments
20.01	200	1	0x1234	Standard 16-bit writing in a 32-bit register. Written value: 0x00001234 (4660)
20.01	200	1	0xABCD	Standard 16-bit writing in a 32-bit register. Written value: 0xFFFFABCD (-11213)
20.01	16584	2	0x00001234	Written value: 0x00001234 (4660)
20.02	201	1	0x0123	Written value: 0x0123 (291)
20.02	16585	2	0x00000123	Written value: 0x00000123 (291)

14.9 - Exceptions

If an error is detected in the master demand, the slave will respond with an exception response. If the message is inadequate and the frame is not received, or if CRC stops, then the slave will produce no exception, and in this case the master will not receive the slave response ("timeout"). If a writing demand (function code 16 or 23) exceeds the maximum size accepted by the slave, the slave will reject the message. No exception will be sent and the master will not respond.

Format of an exception message:

Bytes	Description
0	Slave address
1	Initial function code with bit 7 to 1
2	Exception code
3	Low weight of CRC
4	High weight of CRC

Exception codes:

Code	Description
1	Not managed function code
2	Register address beyond the range or too important reading demand (too many registers)

Parameters beyond the range during a writing function (function code 16)

The slave processes the writing unit in the order in which the data are received. If a writing fails due to a value beyond the range, the writing unit is ended.

The slave will not produce exception response, but it will signal to the master the number of actually performed writing.

Parameters beyond the range during the reading/writing (function code 23)

There is no indication when the value is beyond the range, during a CF23 access.

14.10 - CRC

This control word is used for the detection of the transmission errors. It is calculated on 16 bits starting with all the question and response frame bytes.

Algorithm:

START

CRC = 0xFFFF;

Number of processed bytes = 0 ;

Following byte = first byte;

REPEAT{

Byte to be processed = following byte ;

CRC = CRC or exclusive byte to be processed;

REPEAT eight times

IF (CRC odd)

THEN CRC = CRC or exclusive 0xA001 ;

Number of processed bytes = Number of processed bytes + 1 ;

}WHILE (number of processed bytes < Number of bytes to be processed)

END.

UNIDRIVE SP SMARTCARD

Contents

J1 - Functionality and installation	3
J2 - Saving a set of parameters	3
J2.1 - Manual saving.....	3
J2.2 - Automatic saving.....	3
J2.3 - Saving for automatic transfer to another drive	3
J2.4 - Write protection.....	3
J2.5 - Reset.....	3
J3 - Loading a set of parameters	4
J3.1 - Manual loading.....	4
J3.2 - Automatic loading	4

J

UNIDRIVE SP SMARTCARD

Notes

J

UNIDRIVE SP SMARTCARD

J1 - Functionalities and installation


SMARTCARD is supplied in the standard version with UNIDRIVE SP.

It is used to simply configure the drive:

- saving the drive parameters in order to duplicate them in other drives,
- loading parameters by means of SMARTCARD.

A single SMARTCARD may be inserted in the drive, but the user may have several different programming cards.

• SMARTCARD Slot

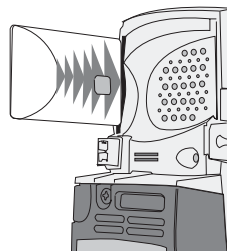




Note : UNIDRIVE SP is supplied with the SMARTCARD already placed in its location.

J2 - Saving a set of parameters

To transfer the drive parameters and to store them in SMARTCARD, various solutions may be considered :

- manual and selective saving of parameters on SMARTCARD,
- automatic saving of parameters and of their modifications on SMARTCARD,
- saving the drive parameters on a SMARTCARD in order to automatically transfer them to another drive, only by inserting the card.




J2.1 - Manual saving

Parameter	Setting	Description	Validation
0.00	1000	Storing of all drive parameters	Press the Reset  key.
0.30	Prog (2)	Storing of all drive parameters in SMARTCARD	Press the Reset  key. After the transfer, 0.30 returns to 0 (none).
0.29	3333	Storing of all drive LEROY-SOMER application program parameters on a SMARTCARD (menus 20, 70 and 71)	Press  .

CAUTION:

If SMARTCARD contains already parameters, they will be " deleted and reset " by this procedure.

J2.2 - Automatic saving



Parameter	Setting	Description	Validation
0.00	1000	Storing of all drive parameters	Press the Reset  key.
0.30	Auto (3)	All drive parameters are stored on the SMARTCARD. Then, only the modifications of menu 0 will be automatically stored on the card.	Press the Reset  key. Let the SMARTCARD in its place in the drive.
0.00	1000	Storing of the modification of other menus on the SMARTCARD	Press the Reset  key.

Subsequently, on each powering up, all drive parameters are stored on the SMARTCARD. During the transfer, the display indicates " cArd ".

CAUTION:

If the SMARTCARD contains already parameters, they will be " deleted and reset " by this procedure.

J2.3 - Saving for automatic transfer to another drive


Parameter	Setting	Description	Validation
0.00	1000	Storing of all drive parameters	Press the Reset  key.
0.30	boot (4)	All drive parameters are stored on the SMARTCARD.	Press the Reset  key. Remove the card

Consequently, insert the SMARTCARD into another drive powered down. When powering up, all the SMARTCARD parameters are automatically transferred to the drive. During the transfer, the display indicates " boot ". Remove the card.


CAUTION:

If SMARTCARD contains already parameters, they will be " deleted and reset " by this procedure.


J2.4 - Writing Protection

Parameter	Setting	Description	Validation
0.00	9888	Memory block in SMARTCARD. No parameter saving may be transferred to the SMARTCARD. Only the SMARTCARD loading into a drive is authorised.	Press the Reset  key.

To unblock the memory in the card:

Parameter	Setting	Description	Validation
0.00	9777	The SMARTCARD memory is unblocked	Press the Reset  key.

J2.5 - Reset

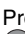Parameter	Setting	Description	Validation
0.00	9999	Reset of all parameters previously stored on the SMARTCARD.	Press the Reset  key.

UNIDRIVE SP SMARTCARD

J3 - Loading a set of parameters



To load a set of parameters from the SMARTCARD into the drive, proceed as follows :

- manual loading of the parameters stored on the SMARTCARD to the drive,
- the parameters contained on the SMARTCARD have been stored so that they are automatically loaded once the SMARTCARD is inserted into the drive.


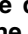
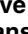
CAUTION:

- If the drive rating is different from the one stored on SMARTCARD, the drive sets to " C.rtg " and the parameters related to the drive rating are no longer transferred.
- The **0.43** encoder phase angle is also saved on the SMARTCARD. During the transfer from the card to the drive, the then stored phase angle may be different from the one of the encoder installed. In order to avoid any problem, proceed to a self-rating after transfer, or apply manually **0.43**.

J3.1 - Manual loading

Parameter	Setting	Description	Validation
0.30	REAd (1)	Loading of the SMARTCARD parameters into the drive.	Press the Reset  key. After the transfer, 0.30 returns to 0 (none).
0.29	6666	Loading of all drive LEROY-SOMER application program parameters on the SMARTCARD (menus 20, 70 and 71))	Press  .

CAUTION:




The operating mode - Open loop () , the vector mode - Closed loop () or Servo () of the drive and that contained on the SMARTCARD during the transfer, must be identical. Otherwise, the drive mode will be modified by SMARTCARD.

J3.2 - Automatic loading

Previously, the saving of parameters on the SMARTCARD must be performed by the procedure described at section J2.3 (**0.30** = boot (4)).

- Insert the card.
- All SMARTCARD parameters are automatically transferred to the drive. During the transfer, the display indicates " boot ".
- Remove the SMARTCARD

CAUTION :

When powering up, The operating mode - Open loop () , the vector mode - Closed loop () or Servo () of the drive and that contained on the SMARTCARD during the transfer, must be identical. Otherwise, the drive sets to " C.typ " and the drive mode is not modified.

UNIDRIVE SP Diagnoses

Contents

K1 - Introduction	3
K2 - Operational indicators.....	3
K3 - Operating alarms	3
K4 - Fault tripping	3
K4.1 - Faults table.....	4
K4.2 - Faults related to an option module	11
K4.2.1 - Faults table.....	11
K4.2.2 - Error codes related to the " SLX.Er " fault.....	12
K4.3 - Fault codes by serial link	13

K

UNIDRIVE SP Diagnoses

Notes

K

UNIDRIVE SP Diagnoses

K1 - Introduction

UNIDRIVE SP supplies diagnostic information.

This information is split into 3 categories :


- indications concerning the operation,
- operating alarms,
- fault trips.



In addition, the faults type may be recovered by serial link as code.

⚠ • The user must neither try to repair the drive by himself, nor give a diagnostics other than the ones listed in this chapter. In case of drive failure, it must be returned to LEROY-SOMER through the agency of your normal contact.

K2 - Operational Indicators

The lower display of the Unidrive SP allows to display the status of the stopped or operating variable speed drive.


	Comment	Output status
Act	The drive is in regenerative mode, and it is synchronised with the mains supply	
ACUU	Loss of the mains supply: the drive tries to keep the voltage on the DC bus, by decelerating the motor	Active
Auto/tuneE	Auto-tuning phase in process	
boot	Automatic transfer of parameters from SMARTCARD to the drive (After power it up)	-
cArd	Automatic transfer of the drive parameters to SMARTCARD (After power up)	-
dc	Braking phase by injection of continuous current	Active
dEC	Deceleration after a stop command	Active

	Comment	Output status
inh	- The drive is disabled, and it will not start the motor - Freewheel stop	Inactive
IoAging	The drive transfers information to an option module	-
POS	The drive positions the motor shaft	Active
rdY	- The drive is enabled, and waits for a command -The motor is ready to turn	Inactive
run	The motor is controlled by the drive	Active
SCAN	In the Open loop mode () , motor quick resumption on microcut	Active
StoP	The drive keeps the motor torque at zero speed	Active
triP	The drive is stopped, and it does not control the motor. The fault code is displayed on the lower display	Inactive

K3 - Operating alarms

Alarms may appear during the drive operation.

These alarms are for preventative action only, to alert the user : the drive continues to operate but there is a risk of stopping if no corrective action is realised.

	Comment
br.rs	Overheat from the braking resistor (the braking thermal battery reached 75% of the value at which the drive stops)
OVLd	Motor overheat I ² t (the motor thermal reserve has reached 75% of the value at which the drive stops)
hot	Heater or control card overheating


K4 - Fault tripping

If the drive stops, the drive output bridge is inactive, and the drive does not control the motor.



If a LED display is used, the upper display indicates "triP" and the lower display indicates the fault type.

All the faults indicated by the display are listed in the table below in alphabetical order.

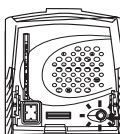


If the drive has no display, a LED indicates the drive status.

If it is stable, the operation is normal, and if it flashes, the drive is stopped. The fault type may then be known by consulting the value of the parameter **10.20** by serial link. The value of

10.20 indicates then a fault code (1 to 230), and the correspondence of each code is to be found in the table of section K4.3.

After consulting the fault table, follow the procedure below:

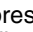



- make the necessary checks in order to remove the cause of the fault,
- make sure that the drive is disabled (open terminal 31),
- press the key  : if the drive is not stopped, the display indicates " inh ".

⚠ • The opening then the closing of the enabling terminal may cancel the fault. If when the fault is cancelled, the terminal Run forward or Run reverse is closed, the motor will immediately start.


Note : In the table, the faults related to the UNIDRIVE SP options contain the letter X, representing the module location having detected the fault.

UNIDRIVE SP Diagnoses


K4.1 - Faults table

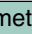Mnemonic Display	Fault reason	Solution																						
ACUU.P (101)	Mains supply loss detection by a power module	<ul style="list-style-type: none"> Check the mains supply 																						
C.Acc (185)	Communication problem with SMARTCARD	<ul style="list-style-type: none"> Insert SMARTCARD Check SMARTCARD to be correctly inserted The fault can be cleared only after 1 second 																						
C.Chg (179)	The unit selected in the SMARTCARD already contains parameters	<ul style="list-style-type: none"> Erase the unit parameters before attempting a new transfer to SMARTCARD Select another unit not used in SMARTCARD The fault can be cleared only after 1 second 																						
C.Cpr (188)	The drive parameters are not identical to the parameters of the unit selected in SMARTCARD	<ul style="list-style-type: none"> In order to cancel the fault, press the Reset key  The fault can be cleared only after 1 second 																						
C.dat (183)	The unit selected in SMARTCARD has no parameter	<ul style="list-style-type: none"> Check the unit number The fault can be cleared only after 1 second 																						
C.Err (182)	SMARTCARD : incorrect data	<ul style="list-style-type: none"> Insert SMARTCARD Check SMARTCARD to be correctly inserted Erase the parameters and proceed again to the transfer The fault can be cleared only after 1 second 																						
C.Full (184)	SMARTCARD is full	<ul style="list-style-type: none"> Erase an unit before realising again a transfer Insert a new SMARTCARD The fault can be cleared only after 1 second 																						
CL2 (28)	Current reference loss on the analogue input 2, terminal 7 (0.19 = 4-20 or 20-4)	<ul style="list-style-type: none"> Check the current reference to be $> 3\text{mA}$ If 10.37 = 1 or 3, the motor stops before the drive stops 																						
CL3 (29)	Current reference loss on the analogue input 3, terminal 8 (0.21 = 4-20 or 20-4)																							
CL.bit (35)	Stop starting from a control word 6.42	<ul style="list-style-type: none"> Invalidate the control word (6.43 = 0) Check the set of 6.42 																						
C.Optn (180)	The drive module(s) is (are) different from that (those) of the SMARTCARD	<ul style="list-style-type: none"> Check the location and the type of module(s) mounted on the drive. There must be no difference from the configuration stored in the SMARTCARD Check the options to be correctly inserted in the drive Press the Reset key  The fault can be cleared only after 1 second 																						
C.rdo (181)	The storage in SMARTCARD is disabled	<ul style="list-style-type: none"> Set XX.00 = 9777 + Reset  to store a parameters set in SMARTCARD Check the selected unit is not protected (units n°500 à 999) The fault can be cleared only after 1 second 																						
C.rtg (186)	The drive rating does not correspond to the one stored in the SMARTCARD	<ul style="list-style-type: none"> Press Reset  SMARTCARD has transferred all parameters excepting those related to the drive rating that resumes their factory settings: <table border="1"> <thead> <tr> <th>Parameters</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>2.08</td> <td>DC bus voltage threshold</td> </tr> <tr> <td>4.05 to 4.07 21.27 to 21.29</td> <td>Current limitation</td> </tr> <tr> <td>5.07 and 21.07</td> <td>Motor rated current</td> </tr> <tr> <td>5.09 and 21.09</td> <td>Motor rated voltage</td> </tr> <tr> <td>5.17 and 21.12</td> <td>Stator resistor</td> </tr> <tr> <td>5.18</td> <td>Carrier frequency</td> </tr> <tr> <td>5.23 and 21.13</td> <td>Voltage offset</td> </tr> <tr> <td>5.24 and 21.14</td> <td>Transient inductance</td> </tr> <tr> <td>5.25 and 21.24</td> <td>Stator inductance</td> </tr> <tr> <td>6.06</td> <td>Level of the brake by DC injection</td> </tr> </tbody> </table> <ul style="list-style-type: none"> The fault can be cleared only after 1 second 	Parameters	Function	2.08	DC bus voltage threshold	4.05 to 4.07 21.27 to 21.29	Current limitation	5.07 and 21.07	Motor rated current	5.09 and 21.09	Motor rated voltage	5.17 and 21.12	Stator resistor	5.18	Carrier frequency	5.23 and 21.13	Voltage offset	5.24 and 21.14	Transient inductance	5.25 and 21.24	Stator inductance	6.06	Level of the brake by DC injection
Parameters	Function																							
2.08	DC bus voltage threshold																							
4.05 to 4.07 21.27 to 21.29	Current limitation																							
5.07 and 21.07	Motor rated current																							
5.09 and 21.09	Motor rated voltage																							
5.17 and 21.12	Stator resistor																							
5.18	Carrier frequency																							
5.23 and 21.13	Voltage offset																							
5.24 and 21.14	Transient inductance																							
5.25 and 21.24	Stator inductance																							
6.06	Level of the brake by DC injection																							

UNIDRIVE SP Diagnoses






Mnemonic Display	Fault reason	Solution
C.Typ (187)	The unit selected in SMARTCARD is not compatible with the drive	<ul style="list-style-type: none"> • Press the Reset key  • Check the type of drive to be identical to the one contained in the SMARTCARD unit • The fault can be cleared only after 1 second
dEst (199)	Conflict : 2 parameters or more have the same destination parameter	<ul style="list-style-type: none"> • Set XX.00 = 12001 : the drive displays all the destination parameters, enabling error detection • The fault can be cleared only after 1 second
EEF (31)	EEPROM fault	<ul style="list-style-type: none"> • The operating mode becomes the open loop mode, and if a display is connected to the serial link, this one will be automatically invalidated • Proceed to a factory settings return, and store the parameters (XX.00 = 1000 + Reset ) , then cut the power supply and power it up • Fault will not clear without returning to factory setting
Enc1 (189)	Encoder power supply overload	<ul style="list-style-type: none"> • Check the encoder power supply current to be lower to the maximum admissible current (200mA at 15V or 300mA at 8V and 5V) • The fault can be cleared only after 1 second
Enc2 (190)	Encoder connection breaking	<ul style="list-style-type: none"> • Check the connections and the encoder voltage • Replace the encoder • The fault can be cleared only after 1 second • If the detection of the encoder cable breaking is not necessary on the drive encoder, set 3.40 = 0 in order to invalidate the Enc2 fault (ex : return of the encoder connected to a SM-Resolver module)
Enc3 (191)	Encoder : Offset of the incorrect UVW stage during the operation	<ul style="list-style-type: none"> • Check the encoder signals are being received • Perform again the offset measurement procedure • Check the encoder mechanical mounting • The fault can be cleared only after 1 second
Enc4 (192)	Difficulty to connect with the encoder	<ul style="list-style-type: none"> • Check the transmission speed and the power supply • Check the encoder signals are being received • Replace the encoder • The fault can be cleared only after 1 second
Enc5 (193)	Encoder : CRC error or control sum	<ul style="list-style-type: none"> • Check the encoder signals not to be disrupted • With the EnDat encoders, check the link resolution and/or proceed to the automatic configuration 3.41 • The fault can be cleared only after 1 second
Enc6 (194)	Encoder error	<ul style="list-style-type: none"> • For a SSI encoder, check the power supply setting as well as the cabling • Replace the encoder • The fault can be cleared only after 1 second
Enc7 (195)	Encoder initialisation problem	<ul style="list-style-type: none"> • Press Reset  • Check the type of encoder, its cabling and its power supply to be correctly set in 3.38 and 3.36 • Proceed to the automatic configuration by 3.41 • Replace the encoder • The fault can be cleared only after 1 second
Enc8 (196)	The automatic configuration at the power up could not be realised	<ul style="list-style-type: none"> • Check the resolution of the serial link • Set 3.41 to 0, and enter manually the number of encoder turns 3.33 and the number of increments by turn 3.34 • The fault can be cleared only after 1 second
Enc9 (197)	The information concerning the module return position is not accessible starting from the selected location	<ul style="list-style-type: none"> • Check the settings of 3.26 (or of 21.21 if a second motor is used) • The fault can be cleared only after 1 second
Enc10 (198)	The encoder stage angle (3.25 or 21.20) is incorrect	<ul style="list-style-type: none"> • Check the encoder connection • Proceed to an auto-tuning or enter the value of the encoder phasing out manually in 3.25 or 21.20 • In the case of untimely Enc10 faults related to certain applications, the fault may be reset by setting a value higher than 0 in 3.08 (caution, a too high value may invalidate the detection of an encoder fault).

UNIDRIVE SP Diagnoses

Mnemonic Display	Fault reason	Solution
Enc11 (161)	Fault generated in case of difference between the sinus/ cosinus signals and the position measured permanently by the serial link. This fault is generally due to a spike in the sinus-cosinus path	<ul style="list-style-type: none"> • Check the shielding of the encoder cable • Check the sinus and cosinus signals are not disconnected
Enc12 (162)	Hiperface encoder problem : the encoder may not be identified by the auto-configuration procedure	<ul style="list-style-type: none"> • Check the type of encoder to be recognised by the autoconfiguration procedure • Check the encoder cabling • Enter the encoder characteristics manually
Enc13 (163)	EndAt encoder problem: the number of encoders turn read during the auto-configuration range does not correspond to a power of 2	<ul style="list-style-type: none"> • Select another type of encoder
Enc14 (164)	EndAt encoder problem : during the auto-configuration stage, the number of bits that define the encoder position in a turn is important	<ul style="list-style-type: none"> • Select another type of encoder • The encoder is damaged
Enc15 (165)	Encoder problem : the number of periods calculated by turn during the auto-configuration stage is lower than 2 or higher than 50 000	<ul style="list-style-type: none"> • The number of points by turn or the non polarity of a linear motor is incorrect, for ex. 5.36 = 0 or 21.31 = 0 • The encoder is damaged
Enc16 (166)	EndAt encoder problem: the number of serial link bits by period for a linear motor is higher than 255	<ul style="list-style-type: none"> • Select another type of encoder • The encoder is damaged
Enc17 (167)	Revolving sincos encoder problem : the periods obtained by turn during the auto-configuration stage is not a power of 2	<ul style="list-style-type: none"> • Select another type of encoder • The encoder is damaged
EnP.Er (176)	Data error in the encoder electronic range	<ul style="list-style-type: none"> • Replace the encoder • The fault can be cleared only after 1 second
Et (6)	External fault on terminal input 31	<ul style="list-style-type: none"> • Check terminal 31 to be connected to 24V (in positive logic) • Check 10.32. Enter 12001 in 0.00, and check the parameter that controls the value of 10.32 • Make sure that 10.32 or 10.38(=6) are not controlled by the serial link • The fault can be cleared only after 1 second
HF01toHF19 and HF20toHF30	Internal error	<ul style="list-style-type: none"> • Power down and power up again • Contact your ordinary interlocutor LEROY-SOMER if the fault persists • The Reset key may not cancel these faults
It.AC (20)	Motor overload I ² t	<ul style="list-style-type: none"> • Read the battery value in 4.19 • Check the motor is not overloaded • Adjust the rated speed () • Check that the motor rated current is correctly set (0.46) • Speed return: check the connecting up, and check the signal not to be disrupted • Check the parameter number of motor poles 0.42 • The fault can be cleared only after 1 second

UNIDRIVE SP






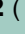
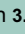




Diagnoses

Mnemonic Display	Fault reason	Solution
lt.br (19)	Overload of the braking resistor	<ul style="list-style-type: none"> • Read the value of the battery in 10.39 • Increase the resistance value • Check 10.30 and 10.31 to be correctly set (too many braking cycles). For setting see the manual available on the CDROM (ref. 3655) • Check the cabling and the resistor • Check the integrated transistor • The fault can be cleared only after 1 second
O.CtL (23)	Overheating of the control card	<ul style="list-style-type: none"> • Check that the fans turn, the cooling vents are not blocked, the ambient temperature does not exceed 50°C, and the space around the drive is sufficient • Diminish the carrier frequency 0.41 • The fault can be cleared only after 1 second
O.ht1 (21)	Thermal simulation of the power components in function of I ² t	<ul style="list-style-type: none"> • Diminish the motor load, the cycle, the carrier frequency, and the acceleration and deceleration ramps • Check the I_N motor • The fault can be cleared only after 1 second
O.ht2 (22)	Heater overheating	<ul style="list-style-type: none"> • Check that the fans turn, the cooling vents are not blocked, the ambient temperature does not exceed 50°C, and the space around the drive is sufficient • Diminish the motor load, the cycle, the cutting out frequency, and the acceleration and deceleration ramps • Increase the ventilation flow • The fault can be cleared only after 1 second
O.ht2.P (105)	Heater overheating of a power module	<ul style="list-style-type: none"> • Check that the fans turn, the cooling vents are not blocked, the ambient temperature does not exceed 50°C, and the space around the drive is sufficient • Diminish the motor load, the cycle, the cutting out frequency, and the acceleration and deceleration ramps • Increase the ventilation flow • The fault can be cleared only after 1 second
O.ht3 (27)	Drive thermal simulation	<ul style="list-style-type: none"> • Check that the fans turn, the cooling vents are not blocked • Increase the ventilation flow • Diminish the motor load, the cycle, and the acceleration and deceleration ramps • The fault can be cleared only after 1 second
O.ht4.P (102)	Overheating of a power module rectifier	<ul style="list-style-type: none"> • Check that the fans turn, the cooling vents are not blocked, the ambient temperature does not exceed 50°C, and the space around the drive is sufficient • Diminish the motor load, the cycle, the carrier frequency, and the acceleration and deceleration ramps • Increase the ventilation flow • The fault can be cleared only after 1 second • Check that there is no stage imbalance
OI.AC (3)	<ul style="list-style-type: none"> • Overcurrent at the drive output (output current point > 225 %) • Boost too high during the auto-tuning stage 	<ul style="list-style-type: none"> • Check the insulation and the motor coupling • Increase the acceleration and deceleration ramps • Check the cabling, the coupling out and the speed return signals (perturbation) • Check that the motor cables length is not too important • Diminish the gains of the speed loop (0.07, 0.08 and 0.09)  and  • If it has not already been made, proceed to an auto-tuning 0.40 = 2  • Diminish the gains of the current loop (0.38 and 0.39)  and  • The fault can be cleared only after 10 seconds







UNIDRIVE SP

Diagnoses

Mnemonic Display	Fault reason	Solution
OI.AC.P (104)	Overcurrent detected by a power module	<ul style="list-style-type: none"> • Increase the acceleration and deceleration ramps • If it occurs during an auto-tuning, reduce the Boost value in 5.15 • Check that there is no short-circuit at the drive output • Check the motor insulation • Check the cabling, the connecting and the speed return signal (perturbation) • Check that the motor cable lengths are not too long • Diminish the gains of the speed loop 0.07, 0.08 and 0.09 ( and ) • If it has not already been made, proceed to an auto-tuning 0.40 =2 .  • Diminish the current loop gains 0.38 and 0.39 ( and ) • The fault can be cleared only after 10 seconds
OI.br (4)	Overcurrent of the braking resistor	<ul style="list-style-type: none"> • Check the resistor insulation • Remove the resistor output short-circuit • Set a higher resistance value • The fault can be cleared only after 10 seconds
Oibr.P (103)	Overcurrent of the braking resistor detected by a power module	<ul style="list-style-type: none"> • Check the cabling and the braking resistor insulation • Check that the braking resistor value is higher than the drive minimum resistance value
OIdc.P (109)	Overcurrent detected by a power module	<ul style="list-style-type: none"> • IGBT Vce protection detected • Check the motor and cables insulation
O.Ld1 (26)	Overload of the power supply +24V or of the digital outputs	<ul style="list-style-type: none"> • Check the total current used by +24V (terminal 22) and the digital outputs of terminals 24 to 26 or of SM modules terminals (it must be < 200mA) • If 10.37 = 1 or 3, the motor stops before the drive stops
O.SPd (7)	Overspeed	<ul style="list-style-type: none"> • The speed is 1,2 times higher than the value of 0.02 () • Check the load is being driven • Make sure of the adequate set of the overspeed threshold in 3.08 ( and ) • Speed loop gains adjustment ( and ) • Set a higher deceleration time in 0.04 • The fault can be cleared only after 1 second
OV (2)	Overvoltage of continuous bus : <ul style="list-style-type: none"> • TL : > 405Vcc perm., 415V peak • T : > 810Vcc perm., 830V peak • TM: > 960Vcc perm., 990V peak • TH : > 1160Vcc perm., 1190V peak 	<ul style="list-style-type: none"> • Provide a braking resistor (option). When a resistor is already connected, diminish its value (in the authorised limit). • Check that the mains supply is not disrupted (overvoltage) • Check the motor insulation • Set a higher deceleration time in 0.04 • Check the deceleration mode in 0.15 • The fault can be cleared only after 1 second
OV.P (106)	Overvoltage of a power module	<ul style="list-style-type: none"> • Provide a braking resistor (option). When a resistor is already connected, diminish its value (in the authorised limit). • Check that the mains supply is not disrupted (overvoltage) • Check the motor insulation • Set a higher deceleration time in 0.04 • Check the deceleration mode in 0.15 • The fault can be cleared only after 1 second
PAd (34)	The drive waits a reference from the keyboard and this one has been removed	<ul style="list-style-type: none"> • Replace the keyboard and press Reset  • Select another speed reference • The fault can be cleared only after 1 second
Ph (32)	<ul style="list-style-type: none"> • Loss of a power supply stage • Important stage inbalance 	<ul style="list-style-type: none"> • Check the mains supply (3 existing and well-balanced stages) • Check the level of the power supply voltage (with full load) Note : • A stage loss may be detected only if the active current is located between 50 % and 100 % of the rated value. • The drive trys to stop the motor before the fault tripping " Ph ". • The fault can be cleared only after 1 second
Ph.P (107)	• Loss of a power module stage	<ul style="list-style-type: none"> • Check the mains supply (3 existing and well-balanced stages) • Check the power supply voltage level (with full load)

UNIDRIVE SP

Diagnoses

Mnemonic Display	Fault reason	Solution
PS (5)	Internal power supply fault	<ul style="list-style-type: none"> • If there are applications modules, remove them and press Reset  • Check the band status connecting the power card to the control card (sizes 4, 5, 6) • "Hard" fault: consult LEROY-SOMER • The fault can be cleared only after 1 second
PS.10V (8)	Overcurrent on the internal analogue source +10V (>10mA)	<ul style="list-style-type: none"> • Check the cabling and the terminal 4 load • The fault can be cleared only after 1 second
PS.24V (9)	Power supply overload +24V	<ul style="list-style-type: none"> • If there are applications modules, remove them and press Reset  • Validate the internal adaptation impedances in 3.24 and/or 16.09 • Reduce the output load (check the digital outputs and encoders consumption) • Supply an external power supply 24V (> 50W) • The fault can be cleared only after 1 second
PS.P (108)	Power supply fault of a power module	<ul style="list-style-type: none"> • If there are applications modules, remove them and press Reset  • Check the band status connecting the power card to the control card (sizes 4, 5, 6) • "Hard" fault: consult LEROY-SOMER • The fault can be cleared only after 1 second
rS (33)	Fault during the stator resistance measurement during an auto-tuning or when 5.14 = 0 or 3	<ul style="list-style-type: none"> • Adapt the drive power to that of the motor • Check the connection of motor cables • The fault can be cleared only after 1 second
SCL (30)	Communication loss by serial link	<ul style="list-style-type: none"> • Replace the keyboard or the cable • Check the connectors between the keyboard and the drive • Check the cable not to be damaged • If 10.37 = 1 or 3, the motor stops before the drive stops
SL.rtd	The drive operating mode has changed and the module data do not correspond anymore	<ul style="list-style-type: none"> • Press the Reset key  • If the faults persists, consult LEROY-SOMER • The fault can be cleared only after 1 second
t010	Reserved	
t036 to t038	Reserved	
t040 to t080	Reserved	
t081	Radius calculation fault or product damage	<ul style="list-style-type: none"> • The product is damaged or the product is not correctly kept by the tractor (sliding) • Check the product status or the setting concerning the band splitters 20.27
t081 to t089	Reserved	
t099	Reserved	
t109andt110	Reserved	
t111 to t160	Reserved	
t168 to t175	Reserved	
t216andt217	Reserved	
th (24)	Motor thermal probe start	<ul style="list-style-type: none"> • Check the motor load • Diminish the overload level • Check the motor ventilation and the ambient temperature • Check the probe cabling (pin 15 of the connective HD-15 or terminal 8 of the control terminal block) • The fault can be cleared only after 1 second
thS (25)	Motor thermal probe in short-circuit	<ul style="list-style-type: none"> • Check the resistance value of the motor probe • The fault can be cleared only after 1 second
tunE (18)	Auto-tuning stop before the end of the procedure	<ul style="list-style-type: none"> • Drive stop during the auto-tuning stage • The Stop key has been activated • Terminal 31 has been opened during the auto-tuning stage • The fault can be cleared only after 1 second
tunE1 (11)	<ul style="list-style-type: none"> • The information concerning the position has not changed during the auto-tuning • Problem during the inertia measurement procedure (see 5.12) 	<ul style="list-style-type: none"> • Check the encoder cabling • Make sure that the motor rotation takes place normally • The fault can be cleared only after 1 second



UNIDRIVE SP Diagnoses




Mnemonic Display	Fault reason	Solution
tunE2 (12)	Incorrect direction of rotation during the auto-tuning	<ul style="list-style-type: none"> • For the closed loop, reverse 2 motor stages or 2 encoder paths • The fault can be cleared only after 1 second
tunE3 (13)	Incorrect connection of the encoder commutation paths detected during the auto-tuning (see 5.12)	<ul style="list-style-type: none"> • Check the motor cabling and the encoder commutation paths • The fault can be cleared only after 1 second
tunE4 (14)	Encoder : Failure of the U commutation signal during the auto-tuning (see 5.12)	<ul style="list-style-type: none"> • Check the encoder connection (U path of the encoder) • Replace the encoder • The fault can be cleared only after 1 second
tunE5 (15)	Encoder : Failure of the V commutation signal during the auto-tuning (see 5.12)	<ul style="list-style-type: none"> • Check the encoder connection (encoder V path) • Replace the encoder • The fault can be cleared only after 1 second
tunE6 (16)	Encoder : Failure of the W commutation signal during the auto-tuning (see 5.12)	<ul style="list-style-type: none"> • Check the encoder connection (encoder W path) • Replace the encoder • The fault can be cleared only after 1 second
tunE7 (17)	Setting of the incorrect motor poles number	<ul style="list-style-type: none"> • Check the number of increments by encoder turn • Check the setting of 5.11 number of poles • The fault can be cleared only after 1 second
Unid.P (110)	Unknown fault of a power module	<ul style="list-style-type: none"> • Check all cablings between the power modules • Check the cables to be sent in areas without perturbations
UP.ACC (98)	Impossible to access "Syptlite" program	<ul style="list-style-type: none"> • The driver must be enabled • A task is already in the process of being realised, try again when the task is over • The fault can be cleared only after 1 second
UP.diVO (90)	The program tries to divide by 0 (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.Ofl (95)	The program variables and the functions units used appeal to a RAM memory higher than the allowed one.	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.ovr (94)	The program tries to write a value outside the parameter range (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.PAr (91)	The program searches a parameter that does not exist (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.ro (92)	The program tries to write in a LS parameter (only reading) (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.so (93)	The program tries to read a writing parameter (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.udf (97)	Fault not defined in the program (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UP.uSEr (96)	The program waits a fault (Syptlite program)	<ul style="list-style-type: none"> • Check the program • The fault can be cleared only after 1 second
UU (1)	Continuous bus powered up : TL: <175Vcc T : <350Vcc TM: <435Vcc	<ul style="list-style-type: none"> • Check the mains supply (mains supply powering up) • Fault removal when the mains supply voltage increases again in relation to the threshold

UNIDRIVE SP Diagnoses

K4.2 - Faults related to an option module

K4.2.1 - Faults table

In the table, the faults contain the letter X that represents the location of the module responsible of the fault.

Mnemonic Display	Fault reason	Solution
SLX.df (204, 209, 214)	The option inserted in the X location has changed	<ul style="list-style-type: none"> • Store and press Reset  • The fault can be cleared only after 1 second
SLX.Er (202, 207, 212)	The option inserted in the X location has detected a fault	<ul style="list-style-type: none"> • Read the value of the parameters 15.50, 16.50 or 17.50. Then see the of the section K4.2.2 that lists the faults for the speed return modules, Application or Inputs/Outputs • When an application is used (positioning, synchronisation...), check the type of data exchanged in 1x.34 (send 1x.34 to 1) • The fault can be cleared only after 1 second
SLX.HF (200, 205, 210)	Hardware fault of the module inserted in the X location	<ul style="list-style-type: none"> • Check the module to be correctly inserted • Replace the module (contact your ordinary interlocutor LEROY-SOMER) • The Reset key may not cancel these faults
SLX.nF (203, 208, 213)	The module has been removed	<ul style="list-style-type: none"> • Check the module to be correctly inserted • Save the parameters and press the Reset key  • The fault can be cleared only after 1 second
SLX.tO (201, 206, 211)	Out of date wizard module	<ul style="list-style-type: none"> • Press the Reset key  • If the fault persists, consult LEROY-SOMER • The fault can be cleared only after 1 second

K

UNIDRIVE SP Diagnoses

K4.2.2 - Error codes related to the " SLX.Er " fault

• Error codes for a speed return module:

Value	Problem	Solution
0	No fault	-
1	Overload of the encoder power supply	See Enc1 fault
2	Encoder connection break	Ses Enc2 fault For a SM-Universal Encoder Plus module, this fault may be invalidated by 1x.17 = 0 (ex. when the module is used only to give the image of the main encoder)
3	Encoder : incorrect stage U, V, W offset during the operation	See Enc3 fault
4	Problem of connection with the encoder	See Enc4 fault
5	Encoder : control sum or CRC error	See Enc5 fault
6	Encoder error	Replace the encoder
7	Encoder initialisation problem	<ul style="list-style-type: none"> •Check the type of encoder set in 15.15, 16.15 or 17.15 •Check the cabling and the encoder power supply •Replace the encoder
8	Automatic configuration when power up could not be realised	Modify the parameter setting of 15.18, 16.18 or 17.18 and enter manually the number of encoder turns in 15.09, 16.09 or 17.09 and the number of increments by turn in 15.10, 16.10 or 17.10
9	-	Motor probes fault
10	-	Motor probes short-circuit
11	Resolver : the number of poles does not correspond to the motor	Check the parameter setting of the poles number in 15.15, 16.15 or 17.15
74	The module heated too much	

• Error encoder for an application module :

Value	Problem
39	User level exceeded
40	Unknown error
41	Non-existent parameter
42	Reading parameter only
43	Writing parameter
44	Parameter value outside the range
45	Invalid synchronisation modes
46	Not used
47	Synchronisation lost together with the Master
48	RS485 is not in the user mode
49	Invalid RS485 configuration
50	Mathematical error
51	Pointer outside the limits
52	Fault of the user control word
53	DPL program incompatible with the target
54	Microprocessor overload / exceeded task
55	Invalid encoder configuration

Value	Problem
56	Configuration of the invalid time unit
57	Function unit not processed by the system
58	Damaged non-volatile flash memory
59	Impossible to consider the Application module as synchronisation reference
60	CTNet Hardware error
61	Invalid CTNet configuration
62	The CTNet transmission speed does not correspond to the mains supply
63	The CTNet ID node already used
64	Digital output overload
65	Parameters of the invalid function unit
66	The user demand is too important
67	Non-existent file
68	Non-associated file
69	Problem related to the access to the Flash version during the loading
70	Transfer of the user program when the drive is enabled
71	The modification of the drive mode has failed
72	Invalid CTNet register operation
73	Failure of the parameter quick initialisation
74	Modules overload

• Error code for Inputs/Outputs module :

Value	Problem
0	No error
1	Digital output short-circuit
74	Module overheating

• Error code for a field Bus module :

Value	Bus Type	Problem
52	All excepting DPLCAN	User control word fault
61	All	Invalid configuration parameters
65	All excepting DPLCAN	Field bus mains supply loss
66	Devicenet, CANopen and DPLCAN	The "Bus-Off" node detects too many transmission errors
67	CANopen	The node did not receive the "SYNC" telegram in the assigned period of time
68	CANopen	No reception of the mains supply nodes surveillance message in the indicated period of time .
69	DPLCAN	A node sends a frame and no other node detects the reception of this frame
70	All	No valid field Bus menu is available in the module for transfer in the drive ; it is possible that the user has not stored the data, or the storage may not work correctly
71	DeviceNet	External power supply loss when the module communicates with the master.
74	All	Module overheating
80	Profibus	The communication time is exceeded. The fault cause is unknown.
98	All	The module basic task is not finished
99	All	Software fault

UNIDRIVE SP Diagnoses

K4.3 - Faults codes by serial link

A fault may be read by the serial link, with the help of the parameter **10.20** that indicates a code.

The table below gives the correspondence of these codes with the faults detected by the drive or by the options.

N°	Fault
1	UU
2	OU
3	OI.AC
4	OI.br
5	PS
6	Et
7	O.SPd
8	PS.10V
9	PS.24V
10	t010
11	tunE1
12	tunE2
13	tunE3
14	tunE4
15	tunE5
16	tunE6
17	tunE7
18	tunE
19	It.br
20	It.AC
21	O.ht1
22	O.ht2
23	O.CtL
24	th
25	thS
26	O.Ld1
27	O.ht3
28	CL2
29	CL3
30	SCL
31	EEF
32	ph
33	RS
34	Pad
35	CL.bit

N°	Fault
36 to 38	t036 to t038
39	L.SYNC
40 to 89	t040 to t089
90	UP.diVO
91	UP.PAr
92	UP.ro
93	UP.so
94	UP.Ovr
95	UP.OFL
96	UP.USER
97	UP.udf
98	UP.ACC
99	t099
100	-
101	ACUU.P
102	Oht4.P
103	Oibr.P
104	OIAC.P
105	Oht2.P
106	OV.P
107	Ph.P
108	PS.P
109	Oldc.P
110	Unid.P
111 to 160	t111 to t160
161	Enc11
162	Enc12
163	Enc13
164	Enc14
165	Enc15
166	Enc16
167	Enc17
168 to 175	t168 to t175
176	EnP.Er
177 and 178	t177 and t178
179	C.Chg
180	C.Optn
181	C.rdO

N°	Fault
182	C.Err
183	C.dat
184	C.FUII
185	C.Acc
186	C.rtg
187	C.Typ
188	C.cpr
189	Enc1
190	Enc2
191	Enc3
192	Enc4
193	Enc5
194	Enc6
195	Enc7
196	Enc8
197	Enc9
198	Enc10
199	dESt
200	SL1.HF
201	SL1.tO
202	SL1.Er
203	SL1.nF
204	SL1.dF
205	SL2.HF
206	SL2.tO
207	SL2.Er
208	SL2.nF
209	SL2.dF
210	SL3.HF
211	SL3.tO
212	SL3.Er
213	SL3.nF
214	SL3.dF
215	SL.rtd
216 and 217	t216 and t217
220 to 232	HF20 to HF32



Notes

K

UNIDRIVE SP Options

Contents

L1 - Introduction	3
L2 - SM modules	4
L2.1 - General information	4
L2.2 - SM module summary	4
L2.3 - SM-I/O Plus module	5
L2.3.1 - General information	5
L2.3.2 - Connection	5
L2.3.3 - Characteristics	5
L2.4 - SM-PROFIBUS DP Module	6
L2.4.1 - General information	6
L2.4.2 - Connection	6
L2.5 - SM-DeviceNet Module	6
L2.5.1 - General information	6
L2.5.2 - Connection	6
L2.6 - SM-CANopen Module	6
L2.6.1 - General information	6
L2.6.2 - Connection	6
L2.7 - SM-INTERBUS Module	6
L2.7.1 - General information	6
L2.7.2 - Connection	7
L2.8 - SM-Universal Encoder Plus Module	7
L2.8.1 - General information	7
L2.8.2 - Connection	7
L2.8.3 - SK1 connector characteristics	8
L2.8.4 - PL2 terminal block characteristics	8
L2.9 - SM-Encoder Plus Module	9
L2.9.1 - General information	9
L2.9.2 - Connection	9
L2.9.3 - Characteristics	9
L2.10 - SM-Resolver Module	10
L2.10.1 - General information	10
L2.10.2 - Connection	10
L2.11 - SM-Applications Module	11
L2.11.1 - General information	11
L2.11.2 - Connection	11
L3 - External RFI filters	12
L3.1 - General information	12
L3.2 - Characteristics	12
L4 - Ferrites	14
L4.1 - General information	14
L4.2 - Characteristics	14
L5 - MC choke coils	15
L5.1 - General information	15
L5.2 - Connection and characteristics	15
L6 - FP choke coils	15
L6.1 - General information	15
L6.2 - Characteristics	15
L7 - Line choke coils	16
L7.1 - General information	16
L7.2 - Electric characteristics	16
L7.3 - Mechanical characteristics	16

UNIDRIVE SP Options

Contents


L8 - Brake Resistor	17
L8.1 - General information	17
L8.2 - Connection	17
L8.3 - Electric characteristics	17
L8.3.1 - Minimum resistor compatible with the drive	17
L8.3.2 - Brake resistors integrable to the heater	18
L8.3.3 - External brake resistors	18
L8.4 - Mechanical characteristics	19
L8.4.1 - Brake resistors integrable to the heater	19
L8.4.2 - External brake resistors	19
L9 - Cables	20
L9.1 - CT-COMMS cable (ref. 4500-0087)	20
L9.2 - Power cables and encoder	20
L9.2.1 - Introduction	20
L9.2.2 - Power cables (for Unimotor only)	20
L9.2.3 - Encoder cables	21
L10 - Intermod 15	23
L10.1 - General information	23
L10.2 - Connection	23
L10.3 - Characteristics	23



UNIDRIVE SP Options

L1 - Introduction

• UNIDRIVE SP and its options

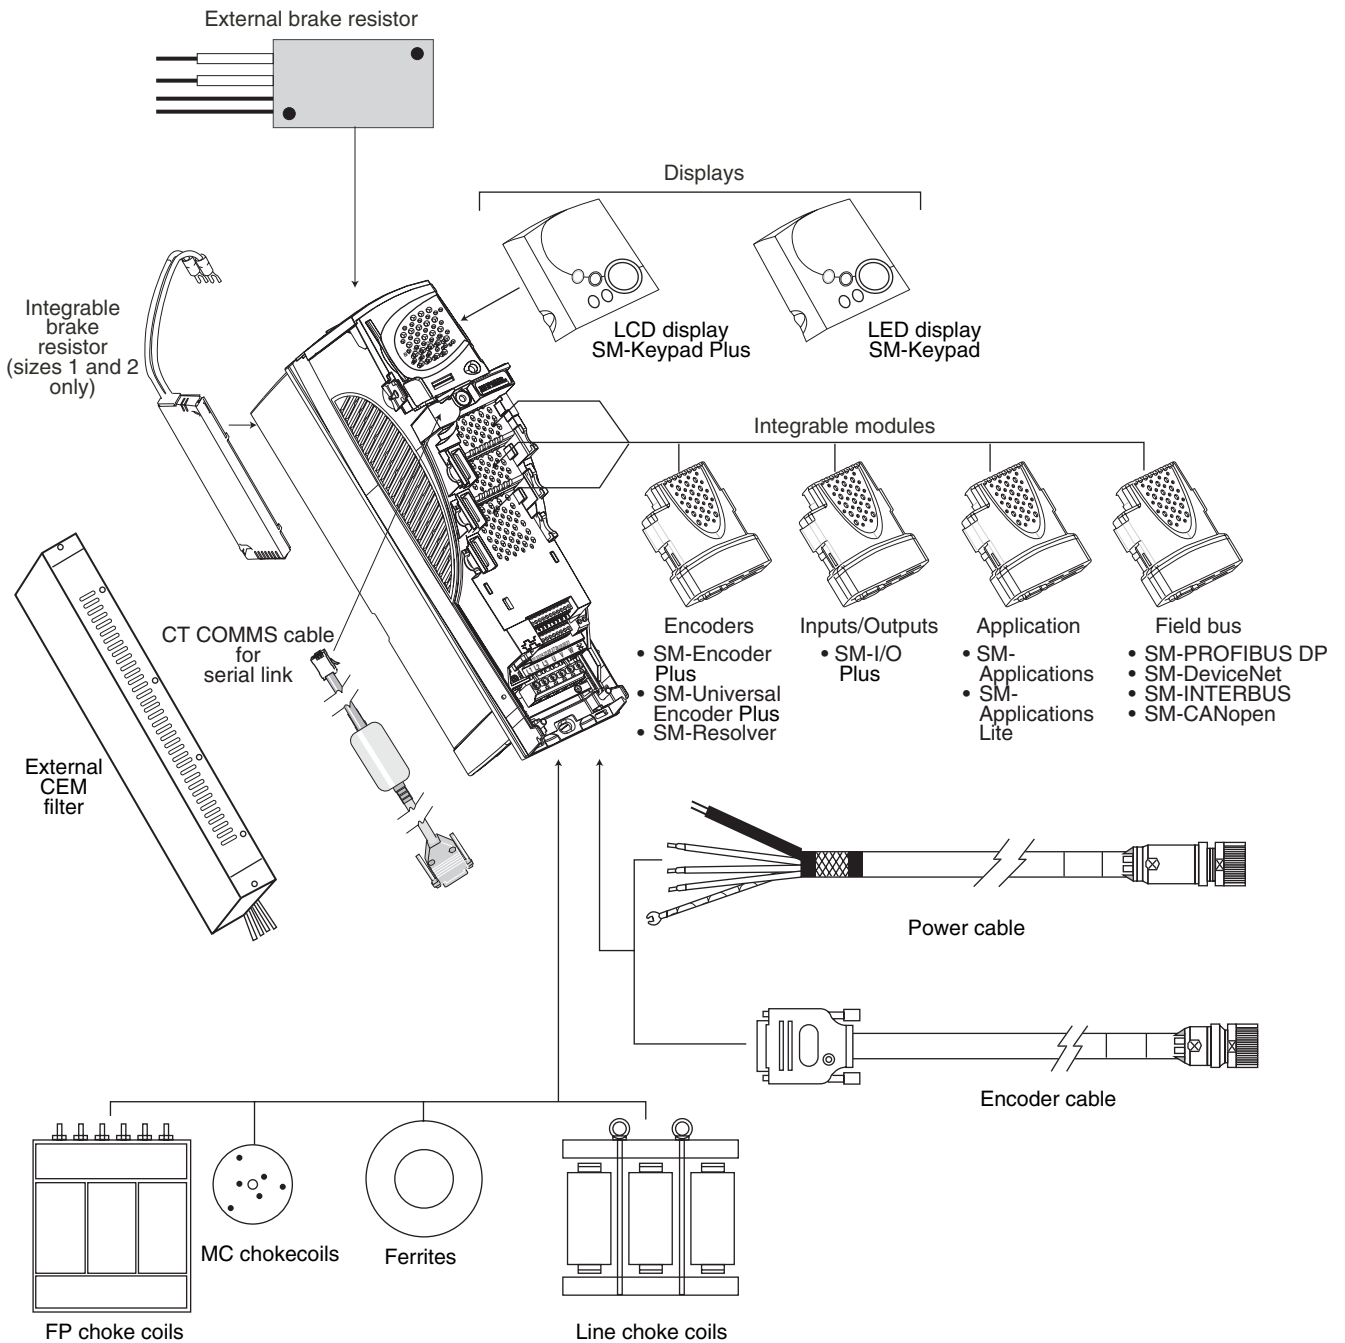

UNIDRIVE SP Options

L2 - SM modules

L2.1 - General information

• Sizes

The SM modules may be integrated into any UNIDRIVE SP range, without any tool and without modifying the general sizes.

3 locations are provided for the module installation: locations 1, 2 and 3.

• Settings

For setting the parameters of the module-related functions:

- location 1 corresponds to menu 15,
- location 2 corresponds to menu 16,
- location 3 corresponds to menu 17.



• Check the adequate status of the SM module : a damaged module must not be installed into the drive.

• Before installing a SM module, power down the drive (including thr power supply +48V and +24V), and wait for 10 minutes. Otherwise, the module may be damaged.

The diagrams of SM options may be consulted at section H6.20.

L2.2 - SM modules summary

Type	Colour	Designation	Details
Additional inputs/outputs	Yellow	SM-I/O Plus	Additional input/output module : • 3 digital inputs • 3 digital inputs or outputs • 2 voltage analogue inputs • 1 voltage analogue output • 2 relays
Field bus	Violet	SM-PROFIBUS DP	Option for communication in Profibus DP.
	Medium grey	SM-DeviceNet	Option for communication in Devicenet.
	Dark grey	SM-INTERBUS	Option for communication in Interbus.
	Light grey	SM-CANopen	Option for communication in CANOpen.
	Beige	SM-Ethernet	Option for communication in Ethernet
Speed feedback	Light green	SM-Universal-Encoder Plus	Speed feedback module which may manage the encoder signals : • Incremental • SinCos • SSI • EnDat It is used to simulate SSI or incremental encoder, and integrates a quick input.
	Brown	SM-Encoder Plus	Speed feedback module to manage the incremental encoder signals.
	Light blue	SM-Resolver	Resolver feedback module. It is used to simulate an incremental encoder (A/B).
Applications	Dark green	SM-Applications	Module with a 2nd micro-processor for the conception and the execution of applicative programs, with communication by CTNet.
	White	SM-Applications Lite	Module with a 2nd micro-processor for the conception and the execution of applicative programs, without communication by CTNet.

UNIDRIVE SP Options

L2.3 - SM-I/O Plus module

L2.3.1 - General information


SM-I/O Plus module is used to increase the number of inputs and outputs of the drive. This option is totally configurable.

Additional functions :

- 3 digital inputs,
- 3 digital inputs or outputs,
- 2 voltage analogue inputs,
- 1 voltage analogue output,
- 2 assigning relays.

PL1 (terminals 21 to 23) and PL2 (terminals 1 to 12) terminal blocks may be released.

L2.3.2 - Connection

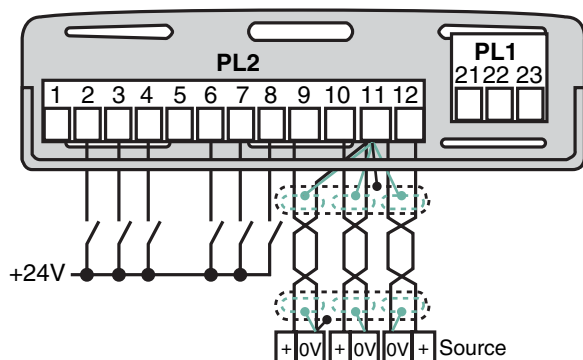

L2.3.3 - Characteristics

• PL2 terminal block

1	Common 0V (logic)
2	Digital input or output (F1)
3	Digital input or output (F2)
4	Digital input or output (F3)
5	Common 0V (logic)
6	Digital input (F4)
7	Digital input (F5)
8	Digital input (F6)
Command logic	
Positive, according to CEI61131 standard (for digital inputs only : negative logic accessible by settings of 1x.29)	
Isolation	
Not isolated from the control electronics	
Input	
Absolute max. voltage	± 30V
Load	> 2mA at +15Vdc
Thresholds	10V ± 0.8V
Output	
Max. current	250 mA

9	Analogue input 4
10	Analogue input 5
11	Common 0V (analogue)
Characteristics	
Bipolar analogue voltage	
Full scale rated voltage	± 9.8 V
Absolute max. voltage	± 36 V in relation to 0V
Input impedance	>20 kΩ
Resolution	10 bits plus sign
Isolation	
Not isolated from the control electronics	

12	Analogue output 3
Characteristics	
Bipolar analogue voltage	
Full scale rated voltage	± 10 V
Max. current	± 20 mA protected against short-circuits
Load resistor	1 kΩ at ∞
Resolution	10 bits plus sign
Isolation	
Not isolated from the control electronics	

Note : If the total consumption exceeds 240mA at 24V, it is then necessary to use an external power supply of +24V, available on terminals 1 and 2 of the drive control terminal block.

• PL1 terminal block

21	Relay 1 (F7)
22	Relay - common
23	Relay 2 (F8)
Contact voltage	
240 Vca	
Maximum contact current	2 Aac 240V/4Adc 30V resistive load
Minimum level of contact recommended	12V, 100 mA
Configuration	
Normally open contact	

• Sampling

Sampling interval for inputs, outputs and relays (parameter update) :

- 8 ms for 1 SM-I/O Plus option,
- 16 ms for 2 SM-I/O Plus options,
- 24 ms for 3 SM-I/O Plus options.

UNIDRIVE SP Options

L2.4 - SM-PROFIBUS DP module


L2.4.1 - General information

SM-PROFIBUS DP is used to communicate with a PROFIBUS DP mains supply.

It integrates a 16-bit micro-processor, and its transmission speed may reach 12 Mbit/s.

Unidrive SP feeds the module internally.

L2.4.2 - Connection

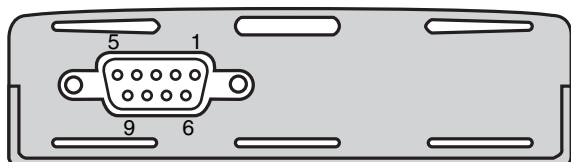

Pins SUB-D	Functions	Description
1	Shielding	Connection for the cable shielding
3	RxD/TxD-P	Positive data line (B)
4	CNTR-P	RTS line
5	0V ISO	Isolated 0V, used only for the end resistors
6	+5V ISO	Isolated 5V power supply, used only for the end resistors
8	RxD/TxD-N	Negative data line (A)

It is strongly recommended to use Profibus certified connectors.

These connectors accept 2 Profibus cables and they have a 4 screw-terminal block, one for each data connection. They have also a shielding connection support, this providing the shielding continuity for an adequate immunity to Profibus mains supply interference.

L2.5 - SM-DeviceNet module


L2.5.1 - General information

The SM-DeviceNet module is used to communicate with the DeviceNet mains supply.

It integrates a 16-bit micro-processor, and its transmission speed may reach 500 Kbit/s.

The module must be fed by the DeviceNet mains supply. Due to the drive safety power supply (terminal 2, see section E2.2), the drive and its module electronics is maintained, allowing the DeviceNet mains supply to continue to communicate with the drive despite the mains supply loss.

L2.5.2 - Connection

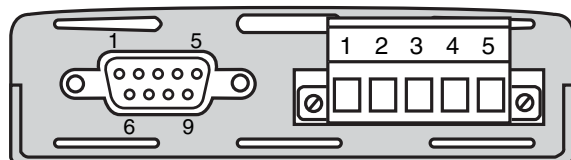

Terminal block 5 terminals	SUB-D 9 pins	Functions	Description
1	6	0V	0V of the external power supply
2	2	CAN-L	Negative data line
3	3.5	Blindage	Cable shielding connection
4	7	CAN-H	Positive data line
5	9	+24V	External power supply

CAUTION :


It is recommended to use the terminal block with screw instead of the SUB-D connector for the connection to the Devicenet mains supply, because the SUB-D connectors are not recognised for the DeviceNet conformity.

L2.6 - SM-CANopen module

L2.6.1 - General information

The SM-CANopen module is used to communicate with a CANopen mains supply. It integrates a 16-bit micro-processor and its transmission speed may reach 1 Mbit/s. Unidrive SP feeds the module internally. Due to the drive safety power supply (terminal 2, see section E2.2), the drive and its module electronics is maintained, this allowing the CANopen mains supply to continue to communicate with the drive despite the mains supply loss.

L2.6.2 - Connection

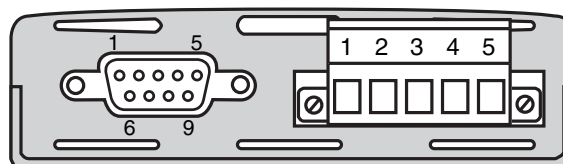

Terminal block 5 terminals	SUB-D 9 pins	Functions	Description
1	6	0V	0V of the external power supply
2	2	CAN-L	Negative data line
3	3.5	Shielding	Cable shielding connection
4	7	CAN-H	Positive data line
5	9	+24V	External power supply


L2.7 - SM-INTERBUS module

L2.7.1 - General information

The SM-INTERBUS module is used to communicate with an INTERBUS mains supply. It integrates a 16-bit micro-processor, and its transmission speed may reach 500 Kbit/s. Unidrive SP feeds the module internally. GDue to the drive safety power supply (terminal 2, see section E2.2), the drive and its module electronics is maintained, allowing the INTERBUS mains supply to continue to communicate with the drive despite the mains supply loss.

UNIDRIVE SP Options

L2.7.2 - Connection

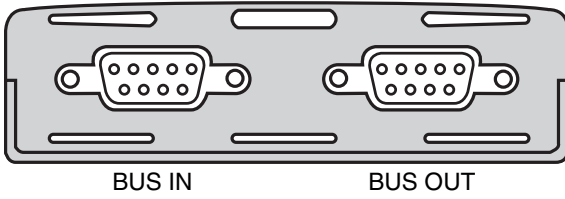

Pins	Functions	Description
IN1	DO1	Positive data IN line
IN6	/DO1	Negative data IN line
IN2	DI1	Positive data OUT line
IN7	/DI1	Negative data OUT line
IN3	0V ISO IN	isolated 0V for IN bus
Blindage IN	Blindage	IN bus cable shielding
OUT1	DO2	Positive data IN line
OUT6	/DO2	Negative data IN line
OUT2	DI2	Positive data OUT line
OUT7	/DI2	Negative data OUT line
OUT3	0V ISO OUT	Isolated 0V for OUT bus
OUT5	+5V ISO OUT	Isolated +5V for OUT bus
OUT9	RBST	OUT bus validation
OUT shield	Shielding	IN bus cable validation
Earth	Earth	


L2.8 - SM-Universal Encoder Plus module

L2.8.1 - General information

The SM-Universal Encoder Plus module is used to exploit the signal of a second encoder (reference signal, synchronisation...), and to deliver the simulation of an incremental encoder (quadrature, frequency/direction) or SSI.

- This module is compatible with many types of encoders:
- incremental quadrature with or without commutation paths
 - incremental frequency/direction with or without commutation paths
 - incremental forward/reverse with or without commutation paths
 - SinCos without serial link, with Hiperface or EnDat protocol
 - EnDat
 - SSI

L2.8.2 - Connection

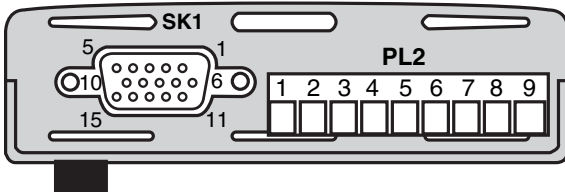

PL2 pins	Functions
1	Quick input +24V
2	0V
3	Path output A_{out} (AB encoder) or F_{out} (FD encoder) or $Data_{out}$ (SSI encoder)
4	Path output $A_{out}\backslash$ (AB encoder) or $F_{out}\backslash$ (FD encoder) or $Data_{out}\backslash$ (SSI encoder)
5	Path output B_{out} (AB encoder) or D_{out} (FD encoder) or $Clock_{in}\backslash$ (SSI encoder)
6	Path output $B_{out}\backslash$ (AB encoder) or $D_{out}\backslash$ (FD encoder) or $Clock_{in}$ (SSI encoder)
7	0V
8	RS 485 quick input or Top 0_{out} or Z_{out} output
9	RS 485\ quick input or Top $0_{out}\backslash$ or $Z_{out}\backslash$ output

Sampling interval for inputs, outputs and relays (parameter update) :

- 8 ms for 1 SM-Universal Encoder Plus module
- 16 ms for 2 SM-Universal Encoder Plus modules
- 24 ms for 3 SM-Universal Encoder Plus modules

SK1 Pins	Encoders														
	Incremental (quadrature, frequency/direction, Fwd/Rev)			SinCos		SinCos with hiperface link		SinCos with EnDat or SSI link		EnDat		SSI		SinCos with U, V, W paths	
1	-	B or F	A or F	-	Cos	-	Cos	-	Cos	-	-	-	-	-	Cos
2	-	B\ or F\	A\ or F\	-	CosRef	-	CosRef	-	CosRef	-	-	-	-	-	CosRef
3	-	A or D or R	B or D or R	-	Sin	-	Sin	-	Sin	-	-	-	-	-	Sin
4	-	A\ or D\ or R\	B\ or D\ or R\	-	SinRef	-	SinRef	-	SinRef	-	-	-	-	-	SinRef
5	-	C or O or Z		-	-	-	Data	-	Data	-	Data	-	Data	-	Z
6	-	C\ or O\ or Z\		-	-	-	Data\	-	Data\	-	Data\	-	Data\	-	Z\
7	A_{out} or F_{out} or $Data_{out}$			U		A_{out} or F_{out} or $Data_{out}$						U			
8	$A_{out}\backslash$ or $F_{out}\backslash$ or $Data_{out}\backslash$			U\		$A_{out}\backslash$ or $F_{out}\backslash$ or $Data_{out}\backslash$						U\			
9	B_{out} or D_{out} or $Clock_{in}$ (SSI)\			V		B_{out} or D_{out} or $Clock_{in}$ (SSI)\						V			
10	$B_{out}\backslash$ or $D_{out}\backslash$ or $Clock_{in}$ (SSI)			V\		$B_{out}\backslash$ or $D_{out}\backslash$ or $Clock_{in}$ (SSI)						V\			
11	-	-	W	-	-	-	-	-	Clock _{out}	-	Clock _{out}	-	Clock _{out}	-	W
12	-	-	W\	-	-	-	-	-	Clock _{out}\}	-	Clock _{out}\}	-	Clock _{out}\}	-	W\
13	+5V or +8V or +15V														
14	0V														
15	Motor thermal probe														

UNIDRIVE SP Options

L2.8.3 - Connector characteristics SK1

Codeurs incrémentaux en quadrature, Fréquence/Direction, Avant/Arrière

1	B or F path (□); A or F path (⊞)
2	B\ or F\ path (□); A\ or F\ path (⊞)
3	A, D or R path (□); B, D or R path (⊞)
4	A\, D\ or R\ path (□); B\, D\ or R\ path (⊞)
5	Z or 0 or C path (□, ⊞)
6	Z\ or 0\ or C\ path (□, ⊞)
7	U path (⊞)
8	U\ path (⊞)
9	V path (⊞)
10	V\ path (⊞)
11	W path (⊞)
12	W\ path (⊞)
Characteristics	RS485 differential voltage
Maximum input frequency	600 kHz
Line load	< 2 drives for terminals 1 to 4 32 drives for terminals 5 and 6 1 drive for terminals 7 to 12
Input impedance	120 Ω
Operating range	-7 to +12V
Absolute maximum voltage	± 14V / 0V
Absolute maximum differential voltage	± 14V

SinCos, absolute SinCos encoders with Hiperface or EnDat or SSI link and SinCos encoder with U, V, W paths

1	Cos path
2	Cosref path
3	Sin path
4	Sinref path
Characteristics	Differential voltage
Maximum signal	1.25V peak to peak
Maximum input frequency	115 KHZ
Absolute maximum differential voltage	± 1.5V

Absolute SinCos encoders with Hyperface, EnDat or SSI link, EnDat and SSI encoders

5	Data
6	Data\
Characteristics	RS 485 differential voltage
Maximum input frequency	2 MHz
Line load	32 drives
Operating range	-7 to +12V
Absolute maximum voltage	± 14V/0V
Absolute maximum differential voltage	± 14V

Absolute SinCos encoders with EnDat or SSI link and EnDat and SSI encoders

11	Clock _{out}
12	Clock _{out} \
Characteristics	RS 485 differential voltage
Maximum input frequency	2 MHz
Line load	1 drive
Operating range	-7 to +12V
Maximum voltage	± 14V/0V
Absolute maximum differential voltage	± 14V

SinCos encoders with U, V, W paths

7	U path
8	U\ path
9	V path
10	V\ path
11	W path
12	W\ path
Characteristics	RS 485 differential voltage
Maximum input frequency	600 kHz
Line load	1 drive
Input impedance	120 Ω
Operating range	-7 to +12V
Maximum voltage	± 14V / 0V
Absolute maximum differential voltage	± 14V

Simulation of incremental encoders or SSI

7	Path output A _{out} or F _{out} or Data _{out} (Data for SSI)
8	Path output A _{out} \ or F _{out} \ or Data _{out} \ (Data\ for SSI)
9	Path output B _{out} or D _{out} or Clock _{in} (Clock for SSI)
10	Path output B _{out} \ or D _{out} \ or Clock _{in} (Clock for SSI)
Characteristics	RS 485 differential voltage
Maximum output frequency	500 kHz
Line load	1 drive
End	120 Ω
Operating range	-7 to +12V
Maximum voltage	± 14V / 0V
Absolute maximum differential voltage	± 14V

Note : The simulation of the SK1 terminal block encoder (pins 7 to 10) is identical to that of PL2 terminal block (terminals 3 to 6)

13	Encoder power supply
Power supply voltage	5V, 8V or 15V
Maximum output current	300 mA for 5V and 8V 200 mA for 15V
14	Common 0V

15	Motor thermal probe input
Short-circuit detection level	< 50 Ω ± 30%
"Hot" alarm detection level	< 3.3 KΩ ± 10%
Return to zero level	> 3.3 KΩ

L2.8.4 - Characteristics of PL2 terminal block
• Incremental encoders in quadrature, frequency/direction, Fwd/Rev and SinCos encoders without serial link or with hiperface or EnDat or SSI serial link or U, V, W. paths.

1	Quick input +24V
8	Quick input RS 485
9	
Characteristics	RS485 differential voltage
Maximum input frequency	600 kHz
Line load	< 2 drives for terminal 1 1 drive for terminals 8 and 9
Input impedance	120 Ω
Operating range	-7 to +12V
Absolute maximum voltage	± 14V / 0V
Absolute maximum differential voltage	± 14V

Note : The quick input is not active with the EnDat or SSI encoders.

UNIDRIVE SP Options

• Simulation of incremental encoder

3	Path output A _{out} or F _{out} or Data _{out} (Data for SSI)
4	Path output A _{out} \ or F _{out} \ or Data _{out} \ (Data\ for SSI)
5	Path output B _{out} or D _{out} or Clock _{in} \ (Clock\ for SSI)
6	Path output B _{out} \ or D _{out} \ or Clock _{out} (Clock for SSI)
8	Path output Z _{out} or Top 0 _{out}
9	Path output Z _{out} \ or Top 0 _{out} \
Characteristics	
RS485 differential voltage	
Maximum input frequency	500 kHz
Line load	< 2 drives for terminals 3 and 4 32 drives for terminals 5 and 6 1 drive for terminals 8 and 9
Input impedance	120 Ω
Operating range	-7 to +12V
Absolute maximum differential voltage	± 14V

L2.9 - SM-Encoder Plus module


L2.9.1 - General information

The SM-Encoder Plus module is used to exploit the signal of a second incremental encoder (reference signal, synchronisation...).

This module is compatible with many types of encoders:

- incremental in quadrature,
- incremental frequency/direction,
- incremental fwd/rev.

L2.9.2 - Connection

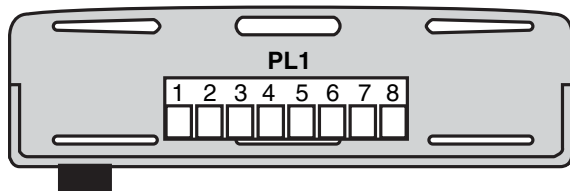

Terminals	Functions			
	PL1	Quadrature	Frequency/Direction	Fwd/Rev
1	B	F	F	
2	B\	F\	F\	
3	A	D	R	
4	A\	D\	R\	
5	Z or O or C			
6	Z\ or O\ or C\			
7	0V			
8	External power supply			

Note : The SM-Encoder Plus module is supplied directly by the drive. However, the maximum output current is limited to 300 mA (5V power supply) or 200 mA (8V or 15V power supply), including the consumption of the encoder connected to the drive.

If the drive power supply is overloaded, use an external power supply connected to terminals 7 and 8 of the module.

The module sampling time SM-Encoder Plus (parameter update) is of 4 ms. However, this time is increased in the following cases :

- if a SM-I/O Plus module is integrated to the drive, add 8 ms to the sampling time,
- if another SM-Encoder Plus module is integrated to the drive, add 4 ms to the sampling time,
- if a SM-Resolver module is integrated to the drive, add 4 ms to the sampling time.

L2.9.3 - Characteristics

1	B or F path
2	B\ or F\ path
3	A or D or R path
4	A\ or D\ or R\ path
5	Z or O or C path
6	Z\ or O\ or C\
Characteristics	
RS485 differential voltage	
Maximum input frequency	600 kHz
Line load	< 2 drives for terminals 1 to 4 32 drives for terminals 5 and 6
Input impedance	120 Ω
Operating range	-7 to +12V
Maximum voltage	± 14V / 0V
Absolute maximum differential voltage	± 14V

7	Common 0V
---	-----------

8	External power supply
Maximum power supply voltage	± 50 Vdc

UNIDRIVE SP Options

L2.10 - SM-Resolver module


L2.10.1 - General information

The SM-Resolver module is used to exploit the signal of a resolver, used as a position or speed information feedback, and to simulate an incremental encoder signal in quadrature (image of the drive main encoder or of the encoder connected to the SM-Resolver option).

Note :

The SM-resolver module cannot be used in open loop.

L2.10.2 - Connection

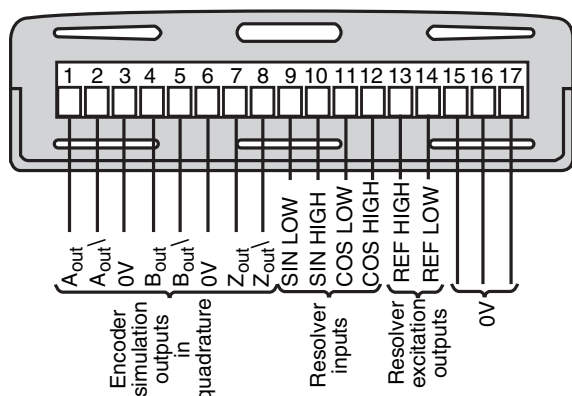

• Characteristics

1	Path output A _{out} encoder simulation
2	Path output A _{out} \ encoder simulation
Characteristics	RS 485 differential voltage
Maximum frequency	500 kHz
Absolute maximum voltage	± 14V / 0V
Protection	Current limitation with thermal protection

3	0V
Total current for all module 0V terminals	200 mA

4	Path output B _{out} encoder simulation
2	Path output B _{out} \ encoder simulation
Characteristics	RS 485 differential voltage
Maximum frequency	500 kHz
Absolute maximum voltage	± 14V / 0V
Protection	Current limitation with thermal protection

6	0V
Total current for all module 0V terminals	200 mA

7	Top 0 _{out} output or Z _{out} path encoder simulation
8	Top 0 _{out} \ output or Z _{out} \ path encoder simulation
Characteristics	RS 485 differential voltage
Maximum frequency	500 kHz
Absolute maximum voltage	± 14V / 0V
Protection	Current limitation with thermal protection

9	SIN LOW resolver input
10	SIN HIGH resolver input
11	COS LOW resolver input
12	COS HIGH resolver input
Characteristics	Sinusoidal signal of 2Vrms (maximum)
Operating frequency	6 kHz
Absolute maximum DC voltage (SIN LOW or COS LOW)	± 2.5V/0V
Absolute maximum DC voltage (SIN HIGH or COS HIGH)	± 12V/0V
Protection	Serial resistors and diodes

13	REF HIGH resolver excitation
14	REF LOW resolver excitation
Characteristics	Sinusoidal signal of 6 kHz synchronised with the drive control loops
Maximum load (minimum impedance)	85 Ω
Rated voltage	<ul style="list-style-type: none"> • 6Vrms (transformation ratio = 3:1) • 4Vrms (transformation ratio = 2:1)
Absolute maximum DC voltage (REF HIGH)	± 36V/0V
Absolute maximum current (REF LOW)	200 mA
Protection	Overcurrent protection

15	
16	0V
17	
Total current for all module 0V terminals	200 mA

15	
16	0V
17	
Total current for all module 0V terminals	200 mA

UNIDRIVE SP Options

L2.11 - SM-Applications module


L2.11.1 - General information

The SM-Applications module is used to extend the Unidrive SP functions.

This module integrates a second micro-processor which is used by the user to access functions pre-set in factory or to write an application-specific program. This module is also used for the communication between several drives (or another equipment), this representing a complete solution for a complex application.

Unidrive SP feeds the module internally.

L2.11.2 - Connection

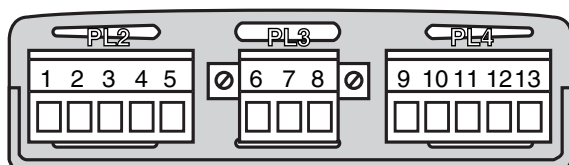

Terminals	Functions	Description
1	0V SC	0V connection for the RS485 port
2	RX\	RS485 negative reception line (input)
3	RX	RS485 positive reception line (input)
4	TX\	RS 485 negative transmission line (output)
5	TX	RS485 positive transmission line (output)
6	CTNet-	CTNet data line (negative)
7	CTNet Shielding	Shielding connection for CTNet
8	CTNet+	CTNet data line (positive)
9	0V	0V connection for digital inputs/ outputs
10	DI0	Digital input 0
11	DI1	Digital input 1
12	DO0	Digital output 0
13	DO1	Digital output 1

UNIDRIVE SP Options

L3 - External RFI filters

L3.1 - General information

The mains supply filters are used to reduce the drive electro-magnetic emissions, and to meet thus the CEM emission norms.

CAUTION :

Use an external mains supply RFI filter for each drive.

L3.2 - Characteristics

• Electric characteristics

UNIDRIVE SP	Filter reference (Schaffner)	Voltage (V)	Rated current (A)		Maximum leakage current (mA)	Joule losses (W)
			40°C	50°C		
1.5TL, 2TL, 1.5T, 2T, 2.5T, 3.5T	FS6008-10-07	240/480	10	10	29.4	6.9
2.5TL, 3.5TL, 4.5T, 5.5T	FS6008-16-07	240/480	16	16	38.8	9.2
4.5TL, 5.5TL, 8TL, 8T, 11T, 16T	FS6008-32-07	240/480	32	28.2	38	11
22T, 27T, 33T	FS6008-62-07	480	62	56.6	66	23
40T to 60T	FS6008-101-35	240/480	101		73	24.5
11TL, 16TL	FS6008-75-07	240	75	68.5	24	29
22TL to 33TL	FS6008-101-35	240/480	101		73	24.5
3.5TM, 4.5TM, 5.5TM, 8TM, 11TM, 16TM, 22TM	FS6008-30-07	575	30		102	15
22TH to 60TH	FS6008-58-53	690	58		66	
75T and 100T	FS6008-164-40	480	164	150		30
75TH and 100TH	Consult LEROY-SOMER					
120T and 150T	FN3359HV-400-99	690	400	400	6	50
120TH and 150TH	FN3359HV-250-99	690	250	250	6	57

Maximum overload current: 150% of the rated current during 1minute for 1-hour period.

Voltage between phases : 480V,


Phase voltage/Earth : 275V.

UNIDRIVE SP	Filter reference (Epcos)	Voltage (V)	Rated current (A)		Maximum leakage current (mA)	Joule losses (W)
			40°C	50°C		
1.5TL, 2TL, 1.5T, 2T, 2.5T, 3.5T	B84143-A10-R207	200/400	10	9.1	<30	4.2
2.5TL, 3.5TL, 4.5T, 5.5T	B84143-A16-R207	200/400	16	14.6	<30	10.8
4.5TL, 5.5TL, 8TL, 8T, 11T, 16T	B84143-A32-R207	200/400	32	29.1	<30	17.8
22T, 27T, 33T	B84143-A75-R207	200/400	75	68.3	<30	19.4
40T to 60T	B84143-A0101-R207	200/400	101	75	<30	30
11TL, 16TL	B84143-A75-R207	200/400	75	68.3	<30	19.4
22TL to 33TL	B84143-A0101-R207	200/400	101	75	<30	30
3.5TM, 4.5TM, 5.5TM, 8TM, 11TM, 16TM, 22TM	B84143-A0030-R207	380/660	30	22.5	<35	17.6
22TH to 60TH	Consult LEROY-SOMER					
75T and 100T	B84143-A165-R207	380/480	165			
75TH and 100TH	Consult LEROY-SOMER					
120T and 150T	Consult LEROY-SOMER					
120TH and 150TH	Consult LEROY-SOMER					

• Mechanical characteristics


- Protection : IP20.

- Installation for drives sizes 1 to 3 : the filter may be mounted backward or it may be installed on the drive side.

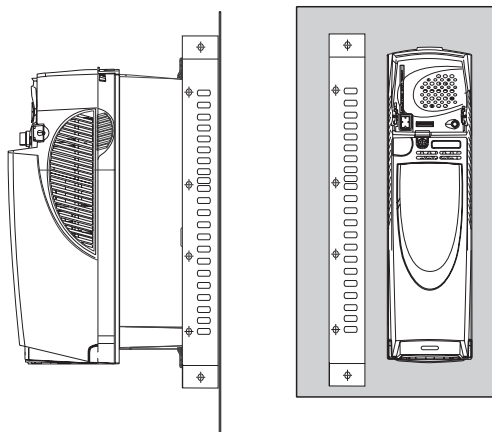


UNIDRIVE SP Options


FS6008-10-07, FS6008-16-07,
B84143-A10-R207, B84143-A16-R207

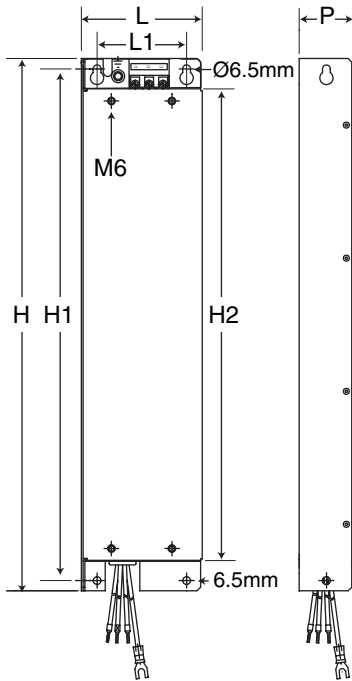


FS6008-32-07, FS6008-62-07, FS6008-75-07
B84143-A32-R207, B84143-A75-R207, B84143-A0030-R207

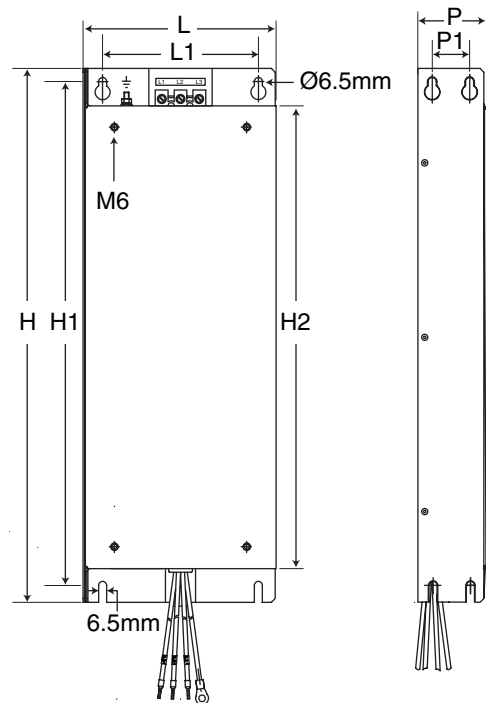


FS6008-101-35

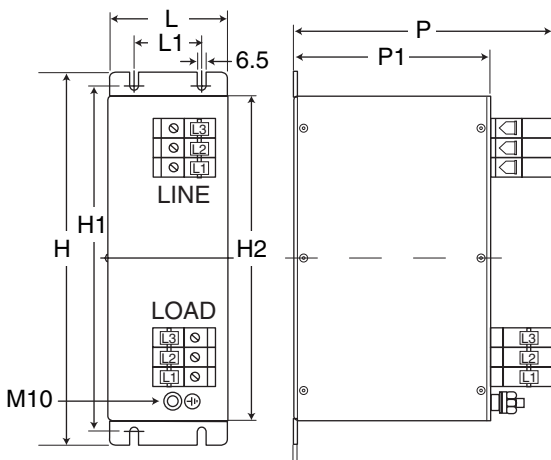


B84143-A0101-R207

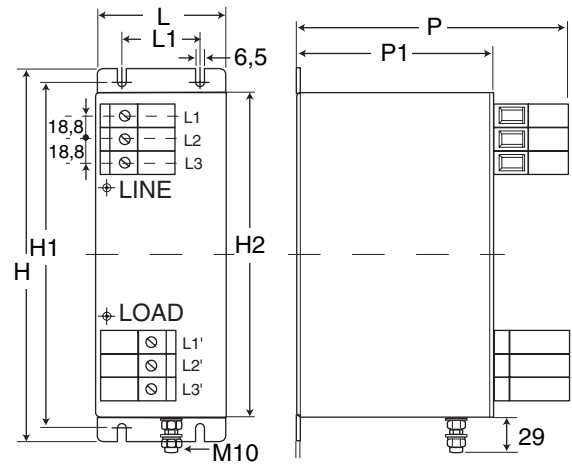

FN3359HV-250-99

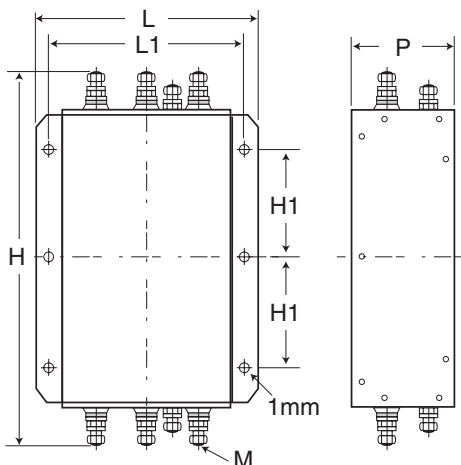

FN3359HV-400-99

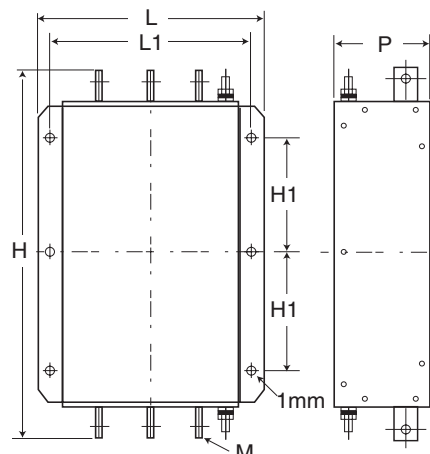

UNIDRIVE SP Options

Filter reference	Width (mm)		Height (mm)			Depth (mm)		Output cable section		Weight (kg)	Terminal $\frac{1}{2}$		Terminals L1, L2, L3		
	L	L1	H	H1	H2	P	P1	mm ²	AWG		Ø	Braking torque (Nm)	Maximum cable section		Braking torque (Nm)
													mm ²	AWG	
FS6008-10-07	100	74	440	423	390	45	-	2.5	14	1.4	M5	3.5	4	12	0.8
FS6008-16-07	100	74	440	423	390	45	-	2.5	14	1.4	M5	3.5	4	12	0.8
FS6008-30-07	250	210	414	396	361	60	30	16	6	3.5	M6	3.9	10	8	2.2
FS6008-32-07	155	125	428.5	404.5	371.5	55	30	4	10	2	M5	3.5	16	6	2
FS6008-58-53															
FS6008-62-07	250	210	414	396	361	60	30	16	6	3.5	M6	3.9	16	6	2.2
FS6008-75-07	250	210	414	396	361	60	30	16	6	3.5	M6	3.9	16	6	2.2
FS6008-101-35	100	65	300	275	260	225	170	-	-	4	M10	25			8
FS6008-164-40			300							6.8	M10	25	95	4/0	20
B84143-A10-R207	100	74	450	423	390	45	-	2.5	14	2.1	M5	3	4	12	0.6
B84143-A16-R207	100	74	450	423	390	45	-	2.5	14	2.1	M5	3	4	12	0.6
B84143-A32-R207	155	125	431.5	404.5	371.5	55	30	4	10	3.3	M5	3	10	8	1.3
B84143-A75-R207	250	210	425	396	365	60	30	16	6	5.1	M6	5.1	16	6	2.2
B84143-A0030-R207	250	210	425	396	365	60	30	4	10	5.1	M6	5.1	10	8	1.3
B84143-A0101-R207	90	65	300	275	260	205	150	-	-	7.8	M10	10	50	1	6.8
B84143-A165-R207															
FN3359HV-250-99	230	205	300	120	-	125	-	150	6/0	7	M10	30	150	6/0	30
FN3359HV-400-99	260	235	386	120	-	115	-	150	6/0	10.5	M12	30	150	6/0	30

L4 - Ferrites

L4.1 - General information

The ferrites contribute to the decrease of the emissions conducted by the drive, for compliance with the EN61800-3 standard.

Place the ferrite at the drive output and run the U, V, W cables through the ferrite (if possible, make a turn).


Note : Do not run the shielding through the ferrite.

L4.2 - Characteristics

- Characteristics of the ferrites delivered in standard version (drives size 2 and 3)



- Characteristics of the optionally delivered ferrite

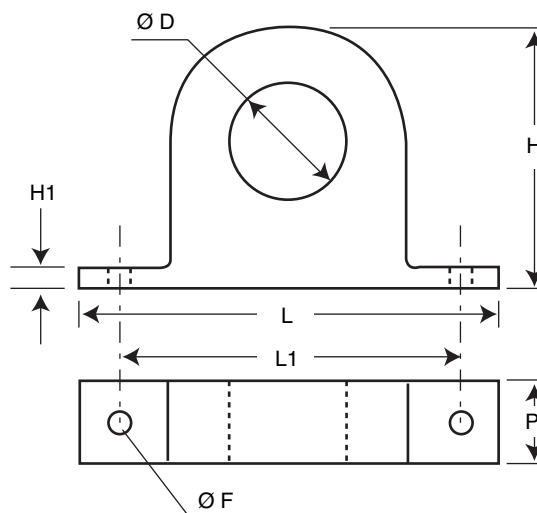

Sizes (mm)	Ø inside	Ø outside	Height
B64290-L48 (Epcos)	20.5 ± 0.5	34.0 ± 0.7	12.5 ± 0.3
B64290-L40 (Epcos)	40.8 ± 0.8	58.3 ± 1.0	17.6 ± 0.4

Sizes (mm)	H	H1	L	L1	P	Ø F	Ø D
RU1261 (Schaffner)	62	5	105	90	24	5	28

UNIDRIVE SP Options

L5 - MC choke coils

L5.1 - General information


The MC choke coils are three-phase choke coils that diminish the HF earth leakage currents, as well as the interference produced.

L5.2 - Connection and characteristics

• Connection

The MC choke coils are cabled directly to the drive output (terminal U, V, W), as close as possible to the drive, in compliance with the diagram below.

Their form is cylindrical and they are flange mounted.

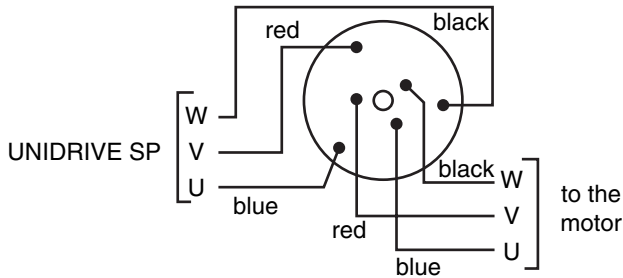

Note : For the rating in 575V (TM) or 690V (TH), consult your usual LEROY-SOMER interlocutor.

CAUTION :

The MC choke coils are delivered with cables having a length of 30 cm.

• Characteristics

UNIDRIVE SP	Choke Coil reference	Current (A)	Sizes (mm)			Weight (kg)
			Diam.	Height	Hole diam.	
1.5T to 2.5T 1.5TL	MC 3.5T	5.6	80	50	5.1	0.5
3.5T to 8T 2TL to 4.5TL	MC 11T	16	80	50	5.1	0.75
11T to 22T 5.5TL and 8TL	MC 27T	38	125	55	6.2	3
27T to 40T 11TL to 22TL	MC 50T	76	125	65	6.2	3
50T, 60T 27TL, 33TL	MC 75T	110	145	90	8.3	4.5
75T, 100T	MC 120T	180	220	120	10 x 25	8

Note: The selections correspond to a "low overcharge" drive current.

L6 - FP choke coils

L6.1 - General information

The FP loss slow choke coils filter the HF earth leakage currents, but also the differential currents (circulating currents between phases).



This choke coil is mainly used at the output of a drive that feeds several motors, reducing the differential HF leakage currents that disturb the operation of the motor protection thermal relay.

Provide a FP choke coil for maximum 5 motors (efficient for up to 200 m of motor cable).

L6.2 - Characteristics

• 2mH/6A, 0.6mH/16A, 0.3mH/38A

• 0.15mH/90A

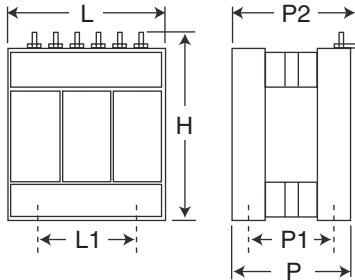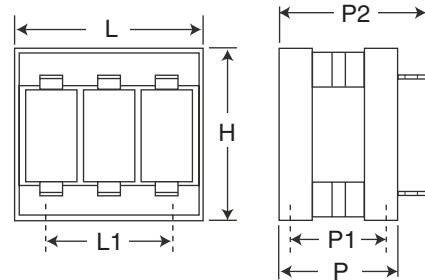

UNIDRIVE SP	Choke Coil reference	Sizes (mm)						Weight (kg)
		L	L1	H	P	P1	P2	
1.5T to 2.5T 1.5TL	FP3.5T 2mH/6A	104	60	95	55	45	80	1
3.5T to 8T 2TL to 4.5TL	FP11T 0.6mH/16A	125	75	115	70	60	95	1.8
11T to 22T 5.5TL and 8TL	FP27T 0.25mH/38A	162	100	150	92	80	110	3.5
27T and 33T	FP60T 0.15mH/90A	263	175	180	108	92	128	10

Note : • For higher rating and mains supply of 575V (TM) or 690V (TH), consult your LEROY-SOMER interlocutor.

• The selections correspond to a "low overload" drive current.

UNIDRIVE SP Options

L7 - Line choke coils

L7.1 - General information

The line choke coils are used to reduce the drive damaging risk due to a phase imbalance or to high interference on the mains supply.

The line choke coil recommended reactance must be of 2%, allowing a phase imbalance of 5%. An additional value may be used, but this generates a drive output loss (High speed torque drop) due to a voltage drop.

The line choke coils are particularly recommended for the rating of 1.5T(L) to 3.5T(L) in case of high interference as follows:

- $\cos \varphi$ lifting condenser battery connected to the mains supply,
- high power thyristor drives fed by the same mains supply (especially if they must not be fitted by line choke coils),
- direct start asynchronous motors connected to the mains supply generating transient voltage drops higher than 20%,
- drives connected to a high capacity mains supply (power of the mains supply transformer higher than 175 kVA).

The other ratings have an internally mounted DC choke coil and in consequence they do not need the addition of line choke coil, excepting the cases of high phase imbalance or in extreme conditions.

Provide a line choke coil for each drive, connected upstream from the drive.


L7.2 - Electrical characteristics

Rating	Choke Coil reference	Current (A)	Inductance (mH)	Losses (W)
1.5T to 2.5T	9 ST 2.5	8.6	2.5	27
1.5TL and 2TL 3.5T to 5.5T	16 ST 1.5	16	1.5	32
8T and 11T	25 ST 1	25	1	44
2.5TL to 4.5TL 16T and 22T	38 ST 0.65	38	0.65	50
5.5TL et 8TL 27T and 33T	60 ST 0.4	60	0.4	65
11TL and 16TL 40T and 50T	90 ST 0.28	90	0.25	83
60T	130 ST 0.19	130	0.19	105
75T and 100T	176 ST 0.14	176	0.14	170
120T and 150T	292 ST 0.085	292	0.085	200

Note : For the other ratings and mains supply of 575V (TM) and 690V (TH), consult your usual LEROY-SOMER interlocutor.

L7.3 - Mechanical characteristics

They are give for information only and may vary depending on the supplier.

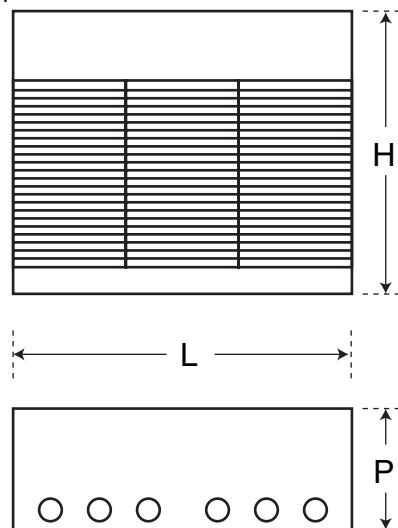

Protection : IP00IP00

Choke Coil reference	Sizes (mm)			Weight (kg)
	L	H	P	
9 ST 2.5	140	160	85	1.8
16 ST 1.5	125	115	95	1.8
25 ST 1	155	190	105	5.5
38 ST 0.65	185	210	110	7
60 ST 0.4	220	240	120	11
90 ST 0.28	220	240	140	17
130 ST 0.19	250	280	170	22
176 ST 0.14	265	220	180	30
292 ST 0.085	270	230	220	30

UNIDRIVE SP Options

L8 - Brake Resistor

L8.1 - General information

- ⚠ The brake resistor must be installed so as to avoid the damage of the close components by its calorific dissipation.
- Particular attention must be paid to each handling next to the resistor, because of the presence of a high voltage and of the heat emission (resistor temperature higher than 70°C).
- The brake resistor (the resistor integrable into the heater is not concerned) must be serially cabled to a thermal relay rated to a resistor efficient current in order to avoid the fire risks that may be generated by a disfunction of the brake transistor or by a short-circuit.
- If a brake resistor must be externally mounted, check that it is integrated into a ventilated metallic terminal box, in order to avoid any direct contact with the resistor.


The braking occurs when the drive decelerates the motor or when the drive opposes to a motor speed increase, due to the mechanical environment (driving load, for instance). During the braking, the energy is sent back to the drive that may absorb only an energy equivalent to its own losses. When the energy to be dissipated is higher, the DC bus voltage increases. In factory settings, the drive increases automatically the deceleration time in order to avoid the DC bus overvoltage stop. If the drive must decelerate rapidly or it if must retain a load, it is necessary to connect a brake resistor.

For ratings 1.5TL to 8TL and 1.5T to 16T, integrable brake resistors may be mounted into the heater slots.


- ⚠ If a brake resistor is connected, it is necessary to set **0.15** to "FAST".
- The heater integrable resistors benefit from the drive overload protection. To validate the external resistor protection, the maximum braking length (**10.30**) and the minimum time between 2 braking cycles (**10.31**) must be set.

L8.2 - Connection


• Size 1

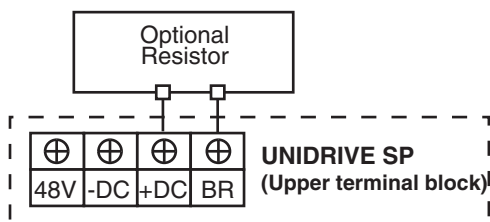

• Sizes 2 and 3

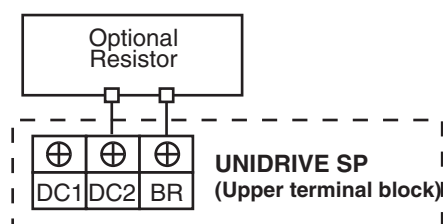

• Size 4

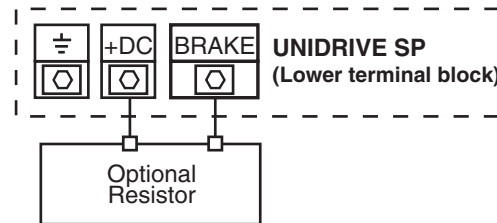

Note : For the protection of the external brake resistors, provide a thermal relay.

- ⚠ Check that the brake resistors are adequately connected, as indicated before. Otherwise, the resistor may be permanently powered up, without any possible control by the drive. It will result an excessive overheating of the resistor that may lead to burns or fire risks.

L8.3 - Electric characteristics

L8.3.1 - Minimum resistor compatible with the drive

UNIDRIVE SP	Minimum ohmic value (Ω)
1.5TL to 2.5TL	43
3.5TL	29
4.5TL to 8TL	18
11TL to 33TL	5
1.5T to 3.5T	74
4.5T and 5.5T	58
8T to 16T	19
22T to 33T	18
40T and 50T	11
60T	9
75T and 100T	7
120T and 150T	
3.5TM to 22TM	18
22TH to 60TH	13
75TH and 100TH	10
120TH and 150TH	

Tolerance of the ohmic value : $\pm 10\%$.

In most of the applications, the braking occurs occasionally, allowing a permanent rated power of the resistor lower than that of the drive. However, it is necessary that the peak power of the resistor be sufficient for the extreme cases encountered in the braking cycle.

Note : For "continuous" braking or high inertia applications the permanent power dissipated in the brake resistor must be equivalent to the rated power of the drive. The total energy dissipated by the resistor is independent of the quantity of energy.

Select a resistor value equal or higher than the minimum resistor value indicated for each drive rating. A higher value resistor provides an increased safety in case of occurrence of a braking system-related problem, but the drive may stop if the chosen resistor value is too high.

UNIDRIVE SP Options

L8.3.2 - Heater integrable brake resistors

Type of integrable resistor	Ohmic value (Ω)	Reated resistor peak power during 1 ms (kW)	Average power during 60 sec. (W)	Factory settings 10.30		Factory settings 10.31		Associated drive
				TL	T	TL	T	
1220-2757	75	8	50	0.09	0.02	2		1.5TL to 3.5TL 1.5T to 5.5T
1220-2759	37.5	16	100	0.09	0.02	2		4.5TL to 8TL 8T to 16T

Note : if the integrable brake resistor must be used with a power higher than its average power/2, validate the high speed ventilation par **6.45** = On (1).

L8.3.3 - External brake resistors

RF Resistor type	Ohmic value (Ω)	Thermal power (W)	Peak power (W)		Efficient current (A)*	Possibility of association with UNIDRIVE SP								
			230V	400V		1.5TL to 2.5TL	3.5TL	4.5TL to 8TL	11TL and 33TL	1.5T to 5.5T	8T to 33T	40T and 50T	60T to 100T	120T and 150T
RF-SIR-600-100	100	100	1406	5184	1.1	x	x	x	x	x	x	x	x	x
RF-SIR-1100-100	100	600	1406	5184	2.7	x	x	x	x	x	x	x	x	x
RF-MD-2000-75	75	2000	1870	6912	5.7	x	x	x	x	x	x	x	x	x
RF-SIR-1100-50	50	600	2813	10368	3.8	x	x	x	x		x	x	x	x
RF-MD-5500-40	40	5500	3500	12960	12.9		x	x	x		x	x	x	x
RF-SIR-1100-25	25	600	5625	20736	5.4			x	x		x	x	x	x
RF-MD-3000-25	25	3000	5625	20736	12			x	x		x	x	x	x
RF-MD-11000-25	25	11000	5625	20736	23			x	x		x	x	x	x
RF-MD-11000-15	15	11000	9325	34560	29.5				x			x	x	x
RF-MD-3000-12	12	3000	11700	43200	17.5				x			x	x	x
RF-MD-7500-10	10	7500	14063	51840	30				x				x	x
RF-MD-19500-10	10	19500	14063	51840	48.6				x				x	x
RF-MD-7500-5	5	7500	28125	103680	42				x					
RF-MD-11000-5	5	11000	28125	103680	51.6				x					

* Adjustment current of the serial thermal relay in the resistor.

Resistors depending on the application

SP rating	Pword (W)	Horizontal movements to CN/2				Horizontal movements to CN				Vertical movements reverse ≤ 20 sec.				Vertical movements reverse < 120 sec.			
		Pc/Pmot	Resistor	10.30/10.31		Pc/Pmot	Resistor	10.30/10.31		Pc/Pmot	Resistor	10.30/10.31		Pc/Pmot	Resistor	10.30/10.31	
1.5TL	750	1.88	RF-SIR-600-100	10/20	1.88	RF-SIR-600-100	5.3/20	3.75	RF-SIR-1100-50	16/20	3.75	RF-SIR-1100-50	60/120				
2TL	1100	1.28	RF-SIR-600-100	7.2/20	1.28	RF-SIR-600-100	3.6/20	2.56	RF-SIR-1100-50	10.9/20	2.56	RF-SIR-1100-50	40/120				
2.5TL	1500	0.94	RF-SIR-600-100	5.3/20	1.88	RF-SIR-1100-50	16/20	1.88	RF-SIR-1100-50	8/20	1.25	RF-MD-2000-75	120/120				
3.5TL	2200	0.64	RF-SIR-600-100	3.6/20	1.28	RF-SIR-1100-50	10/20	1.28	RF-SIR-1100-50	5.5/20	1.60	RF-MD-5500-40	120/120				
4.5TL	3000	1.88	RF-SIR-1100-25	16/20	1.88	RF-SIR-1100-25	8/20	1.88	RF-MD-3000-25	20/20	1.88	RF-MD-3000-25	120/120				
5.5TL	4000	1.41	RF-SIR-1100-25	12/20	1.41	RF-SIR-1100-25	6/20	1.41	RF-MD-3000-25	15/20	1.41	RF-MD-3000-25	80/120				
8TL	5500	1.02	RF-SIR-1100-25	8/20	1.02	RF-SIR-1100-25	4/20	1.02	RF-MD-3000-25	10.9/20	1.02	RF-MD-3000-25	52/120				
11TL	7500	0.75	RF-SIR-1100-25	6/20	1.56	RF-MD-3000-12	16/20	1.56	RF-MD-3000-12	8/20	1.56	RF-MD-3000-12	27/120				
16TL	11000	1.07	RF-MD-3000-12	20/20	1.07	RF-MD-3000-12	10/20	1.07	RF-MD-3000-12	5.5/20	1.28	RF-MD-7500-10	63/120				
22TL	15000	0.85	RF-MD-3000-12	12/20	2.03	RF-MD-7500-5	20/20	2.03	RF-MD-7500-5	10/20	2.03	RF-MD-7500-5	16/120				
27TL	18500	1.64	RF-MD-7500-5	20/20	1.64	RF-MD-7500-5	10/20	1.64	RF-MD-7500-5	5/20	1.64	RF-MD-7500-5	25/120				
33TL	22000	1.38	RF-MD-7500-5	20/20	1.38	RF-MD-7500-5	8.6/20	1.38	RF-MD-7500-5	4.3/20	1.38	RF-MD-11000-5	26/120				
1.5T	750	6.91	RF-SIR-600-100	10/20	6.91	RF-SIR-1100-100	20/20	6.91	RF-SIR-1100-100	16/20	6.91	RF-SIR-1100-100	60/120				
2T	1100	4.71	RF-SIR-600-100	7.2/20	4.71	RF-SIR-1100-100	20/20	4.71	RF-SIR-1100-100	10.9/20	4.71	RF-SIR-1100-100	40/120				
2.5T	1500	3.46	RF-SIR-600-100	5.3/20	3.46	RF-SIR-1100-100	16/20	3.46	RF-SIR-1100-100	8/20	3.46	RF-SIR-1100-100	30/120				
3.5T	2200	2.36	RF-SIR-1100-100	20/20	2.36	RF-SIR-1100-100	10.9/20	2.36	RF-SIR-1100-100	5.5/20	3.14	RF-MD-2000-75	98/120				
4.5T	3000	1.73	RF-SIR-1100-100	16/20	1.73	RF-SIR-1100-100	8/20	1.73	RF-SIR-1100-100	4/20	2.30	RF-MD-2000-75	55/120				
5.5T	4000	1.30	RF-SIR-1100-100	12/20	1.30	RF-SIR-1100-100	6/20	1.30	RF-SIR-1100-100	3/20	1.73	RF-MD-2000-75	36/120				
8T	5500	3.77	RF-SIR-1100-25	8/20	3.77	RF-SIR-1100-25	4.4/20	2.36	RF-MD-5500-40	20/20	2.36	RF-MD-5500-40	120/120				
11T	7500	2.76	RF-SIR-1100-25	6.4/20	2.76	RF-SIR-1100-25	3.2/20	1.73	RF-MD-5500-40	14/20	1.73	RF-MD-5500-40	34/120				
16T	11000	1.89	RF-SIR-1100-25	4.4/20	1.89	RF-MD-3000-25	10/20	1.89	RF-MD-3000-25	5.5/20	1.18	RF-MD-5500-40	22/120				
22T	15000	1.38	RF-SIR-1100-25	3.2/20	1.38	RF-MD-3000-25	8/20	1.38	RF-MD-3000-25	4/20	1.38	RF-MD-11000-25	65/120				
27T	18500	1.12	RF-SIR-1100-25	2.6/20	1.12	RF-MD-3000-25	6.5/20	1.12	RF-MD-3000-25	3.2/20	1.12	RF-MD-11000-25	50/120				
33T	22000	0.94	RF-SIR-1100-25	2.2/20	0.94	RF-MD-3000-25	5.5/20	0.94	RF-MD-3000-25	2.7/20	0.94	RF-MD-11000-25	40/120				
40T	30000	1.69	RF-MD-3000-12	6.6/20	1.35	RF-MD-11000-15	11/20	1.35	RF-MD-11000-15	5.5/20	1.35	RF-MD-11000-15	27/120				
50T	37000	1.37	RF-MD-3000-12	5/20	1.09	RF-MD-11000-15	8/20	1.09	RF-MD-11000-15	4/20	1.05	RF-MD-11000-15	21/120				
60T	45000	1.12	RF-MD-3000-12	2.2/20	1.35	RF-MD-7500-10	5.3/20	1.35	RF-MD-19500-10	6/20	1.35	RF-MD-19500-10	30/120				
75T	55000	2.2	RF-MD-7500-10	9/20	1.1	RF-MD-7500-10	5/20	1.1	RF-MD-19500-10	7/20	1.1	RF-MD-19500-10	28/120				
100T	75000	1.6	RF-MD-7500-10	6/20													
120T	90000	Consult LEROY-SOMER				Consult LEROY-SOMER				Consult LEROY-SOMER							
150T	110000	Consult LEROY-SOMER				Consult LEROY-SOMER				Consult LEROY-SOMER							

For any additional information, contact your usual LEROY-SOMER interlocutor.

UNIDRIVE SP Options

L8.4 - Mechanical characteristics

L8.4.1 - Heater integrable brake resistors

⚠ The brake resistor must be found outside the cabinet. For this, it is necessary to provide the running of the resistor cables from the back of the drive to the front of the drive, and an additional cutout must be provided. See section C5.4.

• However, if the application involves the installation of the heater inside the cabinet, the resistor losses must be added to the global losses in the cabinet listed in the table of section C4.2. In addition, provide a non-inflammable base plate.


IP40 protection, maximum altitude : 2000 m.

For information concerning the mechanical installation, see the technical manual supplied with the resistor.

L8.4.2 - External brake resistors

⚠ The brake resistor and the thermal relay must be located outside the cabinet (above or as close as possible).


• RF - SIR 600 - 100

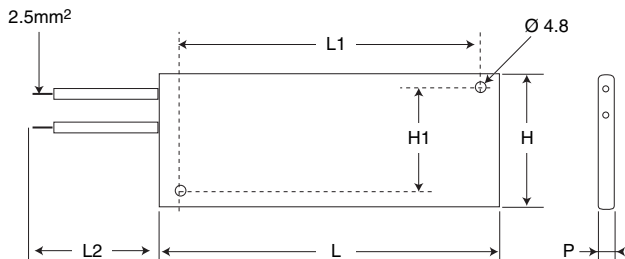

Weight : < 1 Kg / Protection : IP33

Type	Sizes (mm)					
	L	L1	L2	H	H1	P
RF-SIR 600-100	102	81	300	68	57	13


• RF-SIR-1100-100, RF-SIR-1100-50, RF-SIR-1100-25

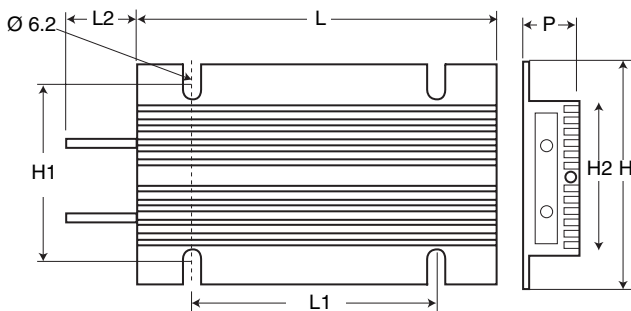

Weight : 1.3 kg / Protection : IP55

Type	Sizes (mm)						
	L	L1	L2	H	H1	H2	P
RF-SIR-1100-xx	320	240	300	95	82 ±2	71	30


• RF-MD-2000-75, RF-MD-3000-25, RF-MD-3000-12

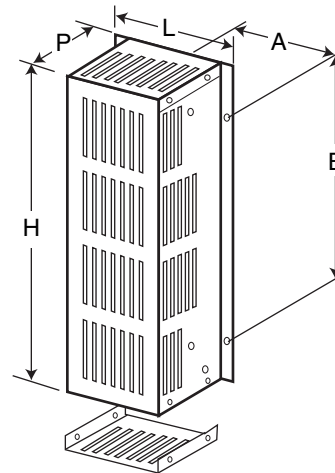

Protection : IP20

Type	Sizes (mm)			Mounting (mm) Ø 11		Weight (kg)
	L	P	H	A	B	
RF-MD-2000-75	182	140	450	160	310	5
RF-MD3000-25	227	140	450	205	310	6
RF-MD-3000-12	227	140	450	205	310	6

• RF-MD-5500-40, RF-MD-7500-10, RF-MD-7500-5,
RF-MD-11000-25, RF-MD-11000-15, RF-MD-11000-5,
RF-MD-19500-10

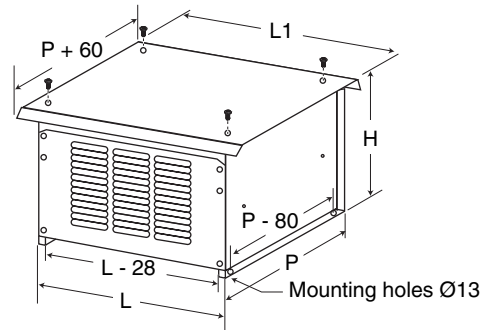

Protection : IP13

Type	Sizes (mm)				Weight (kg)
	L	L1	P	H	
RF-MD-5500-40	420	450	480	440	21
RF-MD-7500-10	500	530	480	440	25
RF-MD-7500-5	500	530	480	440	25
RF-MD-11000-25	670	690	480	440	32
RF-MD-11000-15	670	690	480	440	32
RF-MD-11000-5	670	690	480	440	32
RF-MD-19500-10	960	990	540	440	52

UNIDRIVE SP Options

L9 - Cables


L9.1 - CT-COMMS cable (réf. 4500-0087)

The CT-COMMS cable is used to connect directly a PC RS232 with serial port to Unidrive SP. Beside the RS232/RS485 converter, this option integrates the additional isolation required in case of IT condition installation.

CAUTION :

Do not connect the end resistor to the mains supply.

The cable is made of a 9-point SUB-D plug of the RS 232 type for connection to PC, and of a RJ45 plug of the RS 485 type for connection to UNIDRIVE SP (cable length : 2 m).

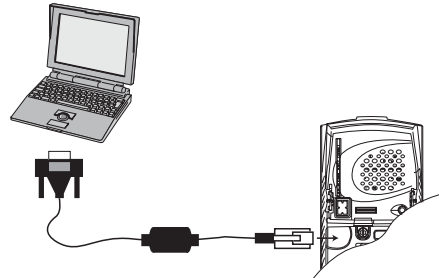

L9.2 - Power cables and encoder

L9.2.1 - Introduction


The cables are important components of the moto-drive unit for which a certain number of essential points must be processed with caution :

- covering depending on the environment aggressiveness,
- quality of shielding for the conformity with the CEM directive,
- mechanical resistance to stresses and rates for mounted motors,
- high density connectors requiring particular attention.

For these reasons, Leroy-Somer proposes optionally cables ready for use.

L9.2.2 - Power cables (for Unimotor exclusively)

• **Presentation**

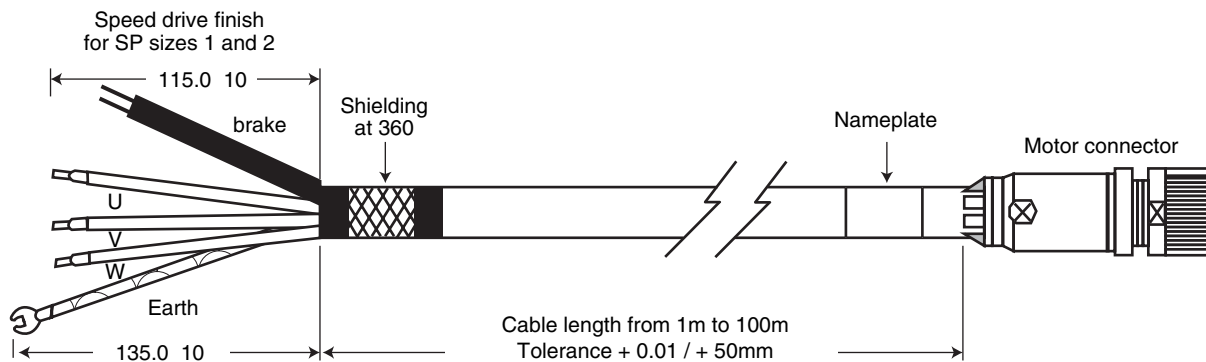

• **Designation**

PB	A	A	A	005
Power cable PB : with brake PS : without brake*	Insulator B : PUR	Cable section A : 4 x 2.5 mm ² B : 4 x 4.0 mm ² G : 4 x 1.5 mm ²	Motor side finish U : connector + finish for Unidrive SP	Length 010 : 10m 001 to 100 : 1 to 100m

* Available with section of 1.5 mm² or 2.5 mm² only.


UNIDRIVE SP Options

• Characteristics

Description		Isolated cable comprising 4 power conductors and 1 shielded twisted pair for the brake (option)					
Power conductors		4 x 1.5 mm ²	4 x 2.5 mm ²	4 x 4 mm ²			
Brake conductors (option)		2 x 1 mm ²					
Insulator	external gain	PUR					
	conductors	TPE	TPE	Polyethylene			
Class		6 according to VDE 0295					
Colour	external gain	Orange RAL 2003					
	power conductor	Black ref. U / V / W + green/yellow					
	brake conductor	White and black ref. + and -					
Shielding		Steel braid					
External diameter	Without brake conductors	9.5 mm	11.9 mm	13.5 mm			
	With brake conductors	11.1 mm	14.1 mm	15.6 mm			
Curve ray		10 x diameter	10 x diameter	12 x diameter			
Maximum acceleration		4 m / s ²	4 m / s ²	7 m / s ²			
Maximum speed		120 m / mn	120 m / mn	180 m / mn			
Resistance to stretch	Static	50 N / mm ²					
	Dynamic	20 N / mm ²					
Maximum number of cycles		5 000 000	5 000 000	10 000 000			
Temperature of use		- 20°C to + 80°C	- 20°C to + 80°C	- 40°C to + 90°C			
Leakage capacity	Without brake conductors	Phase-phase		40 pf / m	35 pf / m	40 pf / m	
		Phase-shielding		200 pf / m	190 pf / m	220 pf / m	
	With brake conductors	power conductor	Phase-phase		50 pf / m	50 pf / m	50 pf / m
		brake conductor	Phase-shielding		220 pf / m	220 pf / m	240 pf / m
			Phase-phase		45 pf / m	45 pf / m	45 pf / m
		Phase-shielding		480 pf / m	380 pf / m	350 pf / m	
Voltage		1000 V					
Dielectric resistor		3000 V					
Isolation resistor		> 10 Mohms/km					
Weight	Without brake conductors	143 kg / km	219 kg / km	299 kg / km			
	With brake conductors	212 kg / km	279 kg / km	360 kg / km			
Certification - UL / CSA		Yes	Yes	No			

L9.2.3 - Encoder cables

• Presentation

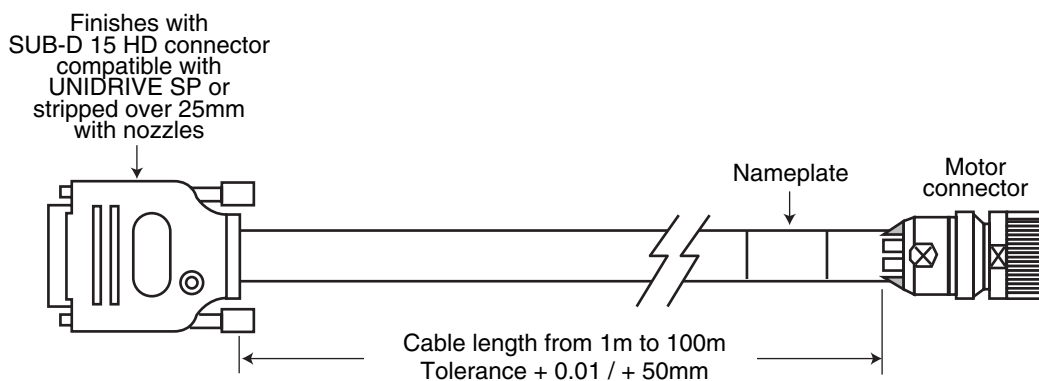

• Designation

Encoder type		Incremental encoder		SinCos encoder - Hiperface link		Resolver	SinCos encoder - EndAt link
Motor type		Asynchronous	Servo	Asynchronous	Servo	Servo	Asynchronous
Designation	Nozzles *	SCBACxxx	Consult	Consult	SSBBCxxx	SRBBCxxx	Consult
	Connectors *	SCBADxxx	SIBBAxxx	SABADxxx	SSBBDxxx	Not available	SEBAAXxx

* Unidrive SP side finishing

Note : In the designation, xxx defines the cable length. This length may be comprised between 1 and 100m. However, the length of 10 m was standardised in order to favour the short periods.

Example :

- Unimotor servo-motor,
- Cable for SinCos encoder,
- Drive side finish: HD 15 connector
- Length : 10 m,

Designation : SSBBD010.

UNIDRIVE SP Options

• Characteristics

Description		Incremental encoder (asyn.) or resolver (servo) or SinCos - Hiperface link (asyn.)	Incremental encoder (servo)	SinCos - EndAt link (asyn.) or SinCos - Hiperface link (servo)
Insulator	external gain	PUR		
	conductors	TPE		
Class		6 according to VDE 0295		
Cable composition	Signal conductors	3 x (2 x 0.14 mm ²)	6 x (2 x 0.34 mm ²)	3 x (2 x 0.38 mm ²)
	Power supply conductors	2 x 0.5 mm ²	2 x 1 mm ²	2 x 0.5 mm ²
	Thermal probe conductors	x	2 x 0.34 mm ²	2 x 0.38 mm ²
Colour	External gain	Green RAL 6018		
	Conductors	DIN 47100		
Shielding		Covering by braids > 80 %		
External diameter		8.6 mm	11 mm	9 mm
Curve ray		10 x diameter		
Maximum acceleration		4 m / s ²		
Maximum speed		120 m / min		
Maximum number of cycles		5 000 000	6 000 000	5 000 000
Temperature of use		- 20°C to + 80°C		
Leakage capacity	Between signal conductors	45 pf / m	70 pf / m	130 pf / m
	Signal conductors - shielding	225 pf / m	120 pf / m	220 pf / m
	Between power supply conductors	255 pf / m	85 pf / m	150 pf / m
	Power supply conductors - shielding	465 pf / m	145 pf / m	255 pf / m
Dielectric resistor	Between conductors	2000 V		
	Shielding conductors	1000 V		
Weight		113 kg / km	116 kg / km	76 kg / km
Certification - UL / CSA		Yes		


UNIDRIVE SP Options

L10 - Intercod 15

L10.1 - General information

Intercod 15 is used to convert the 15-point HD encoder plug of UNIDRIVE SP into 15 flexible blade terminals.

L10.2 - Connection

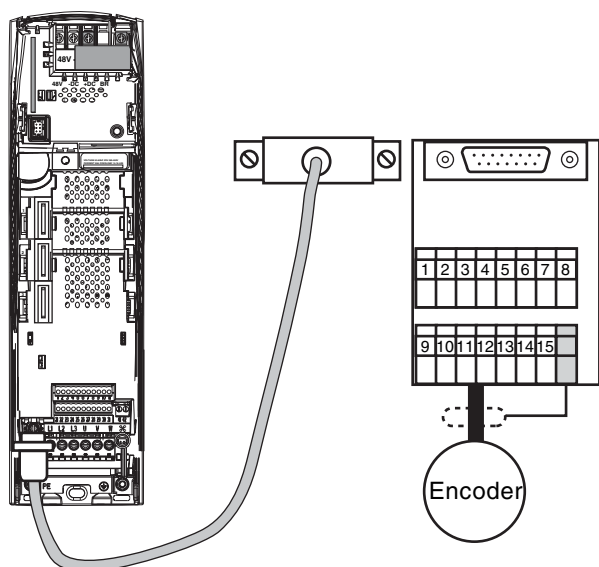


L10.3 - Characteristics

• Composition

The INTERCOD 15 interface is made of a connection cord and of an interface module.

Cord	Type	15 shielded conductors of 0,22 mm ²
	Drive side plug	High density 15-point HD screw plug with shielding connected to pin 14
	Interface side socket	Standard 15-point HD screw socket with shielding connected to terminal box.
	Length	1.5m
Interface module	Mounting	On rail TS 35
	Terminals	Flexible blade terminals numbered from 1 to 15 for a wire of 0.08 to 2.5 mm ²
	Shielding continuity	Green terminal connected to the terminal box of HD-15 plug for the connection of the use shielding.

• Sizes

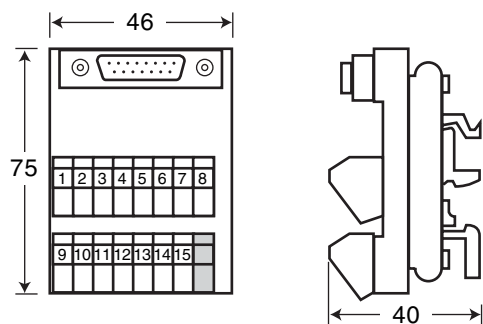

UNIDRIVE SP Options

Notes



UNIDRIVE SP Maintenance

Contents

M1 - Introduction and warning	3
M2 - Servicing - Measurements - Tests	3
M2.1 - Servicing	3
M2.2 - Voltage, current and power measurements.....	3
M2.3 - Power stage tests	4
M3 - Repairing - Spare parts	4



UNIDRIVE SP Maintenance

Notes



UNIDRIVE SP Maintenance

M1 - Introduction and warning

⚠ • All works related to installation , commissioning and maintenance must be carried out by experienced, qualified personnel.

• When a fault detected by the drive causes its powering down, fatal residual voltages are present on the output terminals and in the drive.

• Before carrying out any work, disconnect and lock the drive power supply and wait 10 min before unloading the capacitors.

• Check that the continuous bus voltage is below 40V, before carrying out any work.

• During the maintenance operations on the powered up drive, the operator must stay on an insulated surface, not connected to earth.

• During the works on a motor or on its power supply cables, check that the drive power supply is disconnected and locked.

• During the tests, all the protective covers must be left in place.

The drive maintenance and fixing operations to be carried out by the user are significantly reduced. Hereinafter are presented the current servicing operations as well as the simple methods destined to the check-up of the drive operation.

M2 - Servicing - Measurements - Tests

M2.1 - Servicing

All drives may encounter problems as result of the exposure to a too high temperature, to humidity, oil, dust or after any intrusion of foreign bodies.

The built-in circuits and their components usually do not need any maintenance. Contact your vendor or the closest certified repairer in case of damage.

DO NOT DISMANTLE THE BUILT-IN CIRCUITS DURING THE WARRANTY. IT BECOMES IMMEDIATELY INVALID.

Do not touch the built-in circuits or the micro-processor with the fingers or with loaded or powered up materials. Connect yourself to earth and connect also the bench or the iron to be welded for any intervention on circuits.

If the drive storage exceeds 12 months, the drive must be powered up for 24 hours, then this operation must be repeated all 6 months.


Periodical check-ups:

Ambient temperature	Check that the temperature inside the cabinet is correct.
Dust	Check that the heater and the drive fan are not obstructed by dust. The drive length of life will be reduced if it operates in dusty environments.
Humidity	Check that there is no condensation inside the cabinet.
Cabinet door filters	Check that the air flows normally through the filters.
Tightening	Check that all terminals remain correctly screwed.
Crimped terminals	Check that crimping does not change the colour; this may indicate an abnormal overheating.
Cables	Check that the cables are not damaged.

M2.2 - Voltage, current and power measurements

• Voltage measurement on drive output

The harmonics due to the drive make impossible a correct measurement of the voltage on the motor input, by means of a classic voltmeter. However, you can obtain a value close to the efficient voltage of the fundamental wave (the one influencing the torque) by using a classic voltmeter and the mounting described in the figure below.

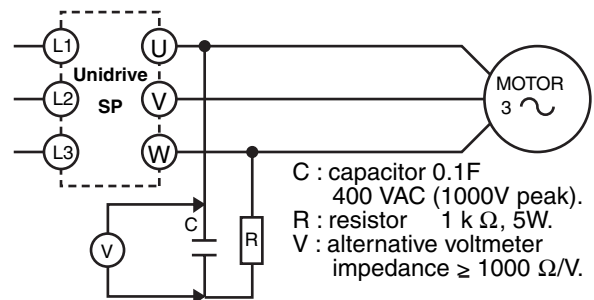

• Motor current measurement

The current consumed by the motor and the drive input current may be measured similarly due to classic mobile frame ampermeter.

• Drive input and output power measurement

The drive input and output powers may be measured by using an electrodynamic device.


UNIDRIVE SP Maintenance

M2.3 - Power stage tests

• Preliminary remarks :

The tests presented below are destined to make a qualitative test of the power stage status. Use a multimeter in diode test and make the measurements after having powered down the drive and after having waited for full unload of the filtering capacitor (about 10 min). Each measurement must last at least 10 seconds in order to avoid the false readings due to the loads that may be still present in the drive circuits. In case of doubt regarding the power stages, visually check the status of the basic command modules that may have been damaged due to the above-mentioned.

The figure below shows the diagram of the general principle of the drive undulating device with transistors.

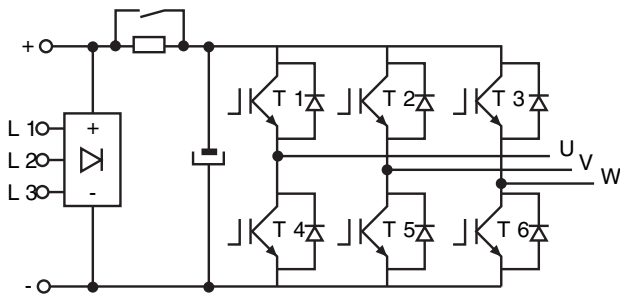

• Test by means of the terminal block


This test is quite brief. A positive response does not necessarily mean that the power stages are correct. However, a negative response generally shows that these are damaged.

Use terminals L1, L2, L3 and U, V, W and terminals -DC, +DC (size 1) or DC1, DC2 (sizes 2 and 3) of the power terminal blocks.

CAUTION :

For sizes 2 and 3 do not make measurements on the current terminal block, make +DC, -DC.

The continuous power bus may be found on the terminal block DC1, DC2, BR.

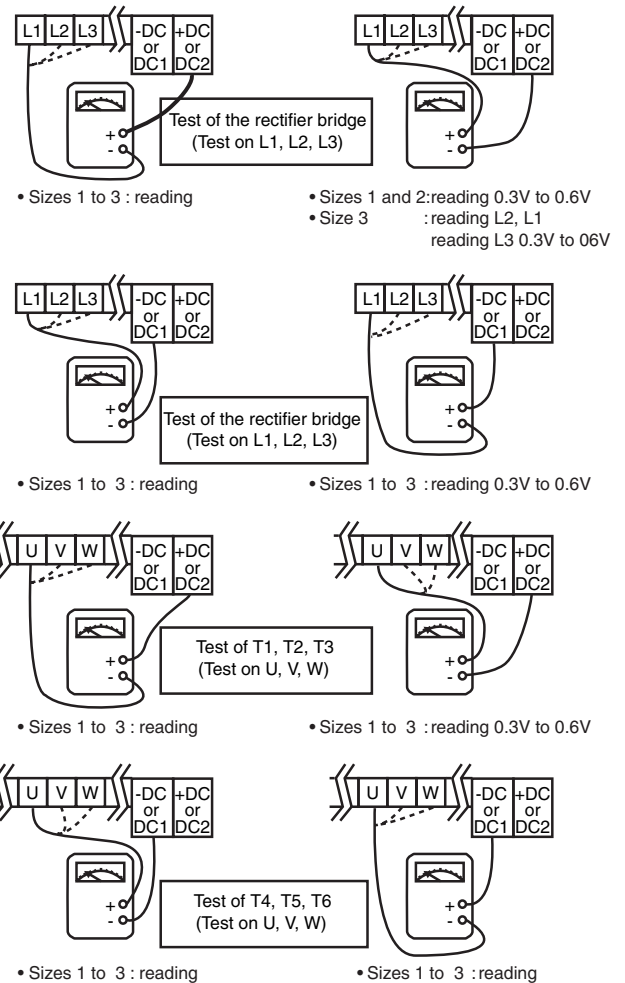

M3 - Repairing - Spare parts

• List of spare parts

Consult LEROY-SOMER

• Change of products

CAUTION :

The products must be returned in their original package or, if impossible, in a similar package, in order to avoid their damaging. Otherwise, the guarantee can be refused.

 


WORLD LEADER IN INDUSTRIAL DRIVE SYSTEMS

**ELECTRIC MOTORS - GEARBOXES - ELECTRONICS
ALTERNATORS - ASYNCHRONOUS GENERATORS - DC MACHINES**



**37 PRODUCTION UNITS
470 SALES & SERVICE CENTRES WORLDWIDE**



MOTEURS LEROY-SOMER 16015 ANGOULÊME CEDEX - FRANCE

338 567 258 RCS ANGOULÊME
S.A. au capital de 62 779 000 €

www.leroy-somer.com